

XZJ5940JQZ800 全地面起重机
QAY800 全地面起重机

（起重性能表）



中华人民共和国徐州工程机械集团有限公司
徐州重型机械有限公司

目录

一、	七节主臂工况起重性能表一支腿全伸.....	7
1、	七节主臂_t-1 支腿全伸 12.8m×13m, 平衡重 0t.....	7
2、	七节主臂_t-2 支腿全伸 12.8m×13m, 平衡重 0t.....	7
3、	七节主臂_t-1 支腿全伸 12.8m×13m, 平衡重 20t.....	8
4、	七节主臂_t-2 支腿全伸 12.8m×13m, 平衡重 20t.....	9
5、	七节主臂_t-1 支腿全伸 12.8m×13m, 平衡重 50t.....	10
6、	七节主臂_t-2 支腿全伸 12.8m×13m, 平衡重 50t.....	11
7、	七节主臂_t-1 支腿全伸 12.8m×13m, 平衡重 80t.....	12
8、	七节主臂_t-2 支腿全伸 12.8m×13m, 平衡重 80t.....	13
9、	七节主臂_t-1 支腿全伸 12.8m×13m, 平衡重 110t.....	14
10、	七节主臂_t-2 支腿全伸 12.8m×13m, 平衡重 110t.....	15
二、	七节主臂工况起重性能表一半身支腿.....	17
1、	七节主臂_t-1 支腿半伸 10.68m×9.8m, 平衡重 0t.....	17
2、	七节主臂_t-2 支腿半伸 10.68m×9.8m, 平衡重 0t.....	17
3、	七节主臂_t-1 支腿半伸 10.68m×9.8m, 平衡重 20t.....	18
4、	七节主臂_t-2 支腿半伸 10.68m×9.8m, 平衡重 20t.....	19
5、	七节主臂_t-1 支腿半伸 10.68m×9.8m, 平衡重 50t.....	19
6、	七节主臂_t-2 支腿半伸 10.68m×9.8m, 平衡重 50t.....	20
7、	七节主臂_t-1 支腿半伸 10.68m×9.8m, 平衡重 80t.....	21
8、	七节主臂_t-2 支腿半伸 10.68m×9.8m, 平衡重 80t.....	22
三、	四节主臂工况起重性能表一全伸支腿.....	23
1、	四节主臂 支腿全伸 12.8m×13m, 平衡重 0t.....	23
2、	四节主臂 支腿全伸 12.8m×13m, 平衡重 20t.....	24
3、	四节主臂 支腿全伸 12.8m×13m, 平衡重 50t.....	25
4、	四节主臂 支腿全伸 12.8m×13m, 平衡重 80t.....	26
5、	四节主臂 支腿全伸 12.8m×13m, 平衡重 110t.....	27
四、	四节主臂工况起重性能表一半伸支腿.....	28
1、	四节主臂 支腿半伸 10.68m×9.8m, 平衡重 0t.....	28

2、	四节主臂 支腿半伸 10.68m×9.8m, 平衡重 20t	28
3、	四节主臂 支腿半伸 10.68m×9.8m, 平衡重 50t	29
4、	四节主臂 支腿半伸 10.68m×9.8m, 平衡重 80t	30
五、	变幅副臂起重性能表—主臂仰角 83°	31
1、	21 米变幅副臂性能表.....	31
2、	28 米变幅副臂性能表.....	32
3、	35 米变幅副臂性能表.....	33
4、	42 米变幅副臂性能表.....	34
5、	49 米变幅副臂性能表.....	36
6、	56 米变幅副臂性能表.....	37
7、	63 米变幅副臂性能表.....	39
六、	变幅副臂起重性能表—主臂仰角 75°	41
1、	21 米变幅副臂性能表.....	41
2、	28 米变幅副臂性能表.....	42
3、	35 米变幅副臂性能表.....	43
4、	42 米变幅副臂性能表.....	44
5、	49 米变幅副臂性能表.....	45
6、	56 米变幅副臂性能表.....	46
7、	63 米变幅副臂性能表.....	48
七、	变幅副臂起重性能表—主臂仰角 67°	50
1、	21 米变幅副臂性能表.....	50
2、	28 米变幅副臂性能表.....	51
3、	35 米变幅副臂性能表.....	52
4、	42 米变幅副臂性能表.....	53
5、	49 米变幅副臂性能表.....	54
6、	56 米变幅副臂性能表.....	55
7、	63 米变幅副臂性能表.....	56
八、	固定副臂起重性能表, 安装角 0°	58
1、	6.3 米固定副臂性能表.....	58

2、	14 米固定副臂性能表.....	60
3、	21 米固定副臂性能表.....	63
4、	28 米固定副臂性能表.....	65
5、	35 米固定副臂性能表.....	68
6、	42 米固定副臂性能表.....	70
7、	49 米固定副臂性能表.....	73
8、	56 米固定副臂性能表.....	75
九、	固定副臂起重性能表，安装角 20°	77
1、	6.3 米固定副臂性能表.....	77
2、	14 米固定副臂性能表.....	79
3、	21 米固定副臂性能表.....	82
4、	28 米固定副臂性能表.....	84
5、	35 米固定副臂性能表.....	86
6、	42 米固定副臂性能表.....	89
十、	固定副臂起重性能表，安装角 40°	91
1、	6.3 米固定副臂性能表.....	91
2、	14 米固定副臂性能表.....	93
3、	21 米固定副臂性能表.....	95
4、	28 米固定副臂性能表.....	97
5、	35 米固定副臂性能表.....	99
十一、	七节主臂+超起性能表—全伸支腿，超起安装角 20° (单边).....	102
1、	七节臂主臂超起_支腿全伸_平衡重 50t.....	102
2、	七节臂主臂超起_支腿全伸_平衡重 80t.....	103
3、	七节臂主臂超起_支腿全伸_平衡重 110t.....	105
4、	七节臂主臂超起_支腿全伸_平衡重 140t.....	106
十二、	四节主臂+超起性能表—全伸支腿，超起安装角 20° (单边).....	109
1、	四节臂主臂超起_支腿全伸_平衡重 50t.....	109
2、	四节臂主臂超起_支腿全伸_平衡重 80t.....	109
3、	四节臂主臂超起_支腿全伸_平衡重 110t.....	110

4、	四节臂主臂超起_支腿全伸_平衡重 140.	111
十三、	变幅副臂+超起性能表—主臂仰角 83° ， 超起安装角 42° (单边).....	112
1、	21 米变幅副臂+超起性能表.....	112
2、	28 米变幅副臂+超起性能表.....	113
3、	35 米变幅副臂+超起性能表.....	114
4、	42 米变幅副臂+超起性能表.....	115
5、	49 米变幅副臂+超起性能表.....	116
6、	56 米变幅副臂+超起性能表.....	118
7、	63 米变幅副臂+超起性能表.....	120
十四、	变幅副臂+超起性能表—主臂仰角 75° ， 超起安装角 42° (单边).....	122
1、	21 米变幅副臂+超起性能表.....	122
2、	28 米变幅副臂+超起性能表.....	122
3、	35 米变幅副臂+超起性能表.....	124
4、	42 米变幅副臂+超起性能表.....	125
5、	49 米变幅副臂+超起性能表.....	126
6、	56 米变幅副臂+超起性能表.....	127
7、	63 米变幅副臂+超起性能表.....	129
十五、	变幅副臂+超起性能表—主臂仰角 67° ， 超起安装角 42° (单边).....	131
1、	21 米变幅副臂+超起性能表.....	131
2、	28 米变幅副臂+超起性能表.....	131
3、	35 米变幅副臂+超起性能表.....	132
4、	42 米变幅副臂+超起性能表.....	134
5、	49 米变幅副臂+超起性能表.....	135
6、	56 米变幅副臂+超起性能表.....	136
7、	63 米变幅副臂+超起性能表.....	137
十六、	固定副臂+超起性能表， 安装角 0° ， 超起安装角 15° (单边).....	139
1、	6.3 米固定副臂性能表.....	139
2、	14 米固定副臂性能表.....	141
3、	21 米固定副臂性能表.....	143

4、	28 米固定副臂性能表.....	146
5、	35 米固定副臂性能表.....	148
6、	42 米固定副臂性能表.....	151
7、	49 米固定副臂性能表.....	153
8、	56 米固定副臂性能表.....	156
十七、	固定副臂+超起性能表, 安装角 20°, 超起安装角 15° (单边).....	158
1、	6.3 米固定副臂性能表.....	158
2、	14 米固定副臂性能表.....	160
3、	21 米固定副臂性能表.....	162
4、	28 米固定副臂性能表.....	165
5、	35 米固定副臂性能表.....	167
6、	42 米固定副臂性能表.....	169
十八、	固定副臂+超起性能表, 安装角 40°, 超起安装角 15° (单边).....	171
1、	6.3 米固定副臂性能表.....	171
2、	14 米固定副臂性能表.....	173
3、	21 米固定副臂性能表.....	175
4、	28 米固定副臂性能表.....	178
5、	35 米固定副臂性能表.....	180

注意事项:

- R/L ——代表幅度和主起重臂长度，单位为米，
- * ——表示加装一些装置
- 322221——从左向右的位数表示第2、3、4、5、6、7节臂，数字表示伸出的百分比，1表示46%，2表示92%，3表示100%；12相当于000012，表示第伸6、7节，2~5节没伸出。
- 倍率 ——是本臂长最大起重重量对应的，若小于可根据公式计算

$$=-\log(1-0.001568Q)/0.00877$$
 式中 Q 为起重重量, 单位为吨
- 吊钩 —— 选用方案

序号	吊钩	吊钩自重 (Kg)	使用倍率
1	300t	5500	18、19、22、26
2	200t	2400	10、11、12、13、14
3	130t	1580	6、7、8、9、10、11、12、13
4	65t	1000	2、3、4、5、6、7
5	30t	500	1、2、3

- 性能表由8部分组成
 - (1) 七节主臂性能表；
 - (2) 四节主臂性能表；
 - (3) 七节主臂+固定副臂性能表；
 - (4) 四节主臂+变幅副臂性能表；
 - (5) 七节主臂+超起性能表；
 - (6) 四节主臂+超起性能表；
 - (7) 七节主臂+超起+固定副臂性能表；
 - (8) 四节主臂+超起+变幅副臂性能表。

超起装置、固定副臂、变幅副臂均为选配装置。

请用户根据所选购的配置选择相对应的性能表使用

一、 七节主臂工况起重性能表一支腿全伸

1、 七节主臂_t-1 支腿全伸 12.8m×13m，平衡重 0t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	175.0	170.0	165.0	166.0	165.0	134.8	94.2						
10	159.0	155.0	151.0	147.0	122.7	147.0	124.0	89.5	84.4					
12	109.3	101.4	103.8	102.4	108.7	97.8	105.2	79.3	77.5	63.8	51.7			
14	73.0	74.3	73.8	70.2	74.0	70.7	76.8	61.2	67.2	58.8	47.7	40.3		
16		51.2	51.9	49.0	53.2	51.8	58.1	46.7	51.1	47.2	43.0	37.3	31.8	27.4
18			37.1	34.6	39.7	39.4	44.3	37.0	40.3	36.4	33.6	32.5	29.6	25.6
20			26.4	24.7	30.6	30.9	34.6	29.3	31.5	29.0	27.1	26.5	25.5	23.8
22			16.8	16.4	22.9	24.5	26.2	23.5	25.3	23.6	22.3	21.8	21.0	20.2
24				9.9	17.0	19.0	19.4	18.3	19.9	18.5	17.5	17.7	17.2	16.8
26				4.7	12.0	14.3	14.0	13.9	15.7	14.4	13.6	14.2	14.3	13.9
28					8.0	10.5	9.6	10.5	11.8	11.2	10.7	11.1	11.8	11.5
30					4.4	7.5	6.0	7.7	8.6	8.1	8.1	8.7	9.3	9.3
32						4.7	2.9	5.1	5.8	5.5	5.8	6.4	7.2	7.4
34							2.1		2.9	3.2	3.4	3.7	4.6	5.7
36												2.0	2.9	4.2
38													2.6	2.9
40														
主臂组	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
合	0	0	0	0	0	0	0	1	1	1	1	1	2	3
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

2、 七节主臂_t-2 支腿全伸 12.8m×13m，平衡重 0t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	177.0	168.0	168.0	148.1	152.9	130.8	71.9						
10	159.0	156.0	149.0	149.0	116.6	145.3	126.6	70.0	63.3					
12	109.3	104.0	99.8	107.7	115.9	100.2	108.8	66.4	58.5	48.4	41.7			
14	73.0	76.8	70.0	75.1	84.4	76.0	82.8	61.7	53.9	44.8	40.1	36.6		
16		53.5	48.3	53.5	62.9	56.7	63.9	50.6	50.3	41.4	36.6	34.1	31.8	27.4
18			33.7	38.8	49.0	44.1	49.8	40.9	46.1	38.1	34.2	32.3	29.6	25.6
20			22.8	29.1	39.7	35.5	40.1	33.2	37.2	34.4	31.1	28.8	25.5	23.8
22			13.6	20.8	32.1	29.1	31.7	27.3	31.0	29.0	26.3	24.1	21.0	20.2
24				14.2	26.5	23.8	24.9	22.3	26.0	24.2	21.7	20.2	17.2	16.8
26				8.9	21.4	19.1	19.3	17.8	21.9	20.1	17.7	16.6	14.3	13.9
28				4.4	17.5	15.2	14.8	14.4	18.0	16.9	14.8	13.5	11.8	11.5
30					13.7	12.4	11.1	11.6	14.7	13.8	12.3	11.1	9.3	9.3
32					10.5	9.8	8.0	9.0	12.1	11.2	9.9	8.8	7.2	7.4
34					6.6	7.1	5.4	6.8	9.5	9.2	7.8	7.0	5.5	5.7
36						4.8	3.1	5.0	7.2	7.1	6.1	5.3	4.0	4.2
38						2.8		3.2	5.1	5.4	4.6	3.9	2.6	2.9
40									3.4	3.8	3.2	2.6		
42										2.4	2.0			
主臂组	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
合	0	0	0	0	1	1	1	2	2	2	2	2	2	3
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

3、七节主臂_t-1 支腿全伸 12.8m×13m，平衡重 20t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	178.0	178.0	178.0	178.0	135.6	94.2						
10	174.0	170.0	165.0	160.0	134.3	160.0	128.2	89.5	84.4					
12	140.0	125.8	125.7	122.2	121.4	106.8	114.9	81.6	77.5	63.8	51.7			
14	99.6	100.9	100.4	96.1	98.1	91.0	98.9	73.7	71.3	58.8	47.7	40.3		
16		72.1	73.3	69.7	72.5	69.5	78.6	62.2	65.9	53.6	43.7	37.3	31.8	27.4
18			55.0	51.8	55.9	54.2	61.6	50.5	55.0	49.1	39.9	34.4	29.6	25.6
20			41.8	40.1	44.9	43.9	49.9	41.2	44.3	40.7	36.9	31.7	27.5	23.8
22			30.3	30.6	35.8	36.2	39.8	34.2	36.8	34.2	31.9	29.5	25.5	22.4

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
24				23.0	29.2	30.1	31.9	28.3	30.9	28.5	26.4	26.1	23.6	20.7
26				16.8	23.5	24.7	25.6	23.2	26.3	23.8	21.9	22.1	21.6	19.5
28				11.2	19.0	20.3	20.4	19.3	21.9	20.2	18.6	18.5	18.8	18.2
30					14.6	17.2	16.1	16.1	18.2	16.6	15.7	15.8	15.8	15.8
32					10.9	14.2	12.4	13.1	15.1	13.6	12.9	13.1	13.3	13.6
34					6.4	10.9	9.1	10.4	12.0	11.2	10.4	10.9	11.4	11.7
36						8.0	6.3	8.2	9.1	8.7	8.3	8.9	9.7	10.1
38						5.5	3.8	6.0	6.6	6.5	6.5	7.2	8.2	8.5
40						2.7		4.1	4.4	4.6	4.8	5.6	6.4	7.1
42								2.5	2.5	2.9	3.4	4.3	5.1	5.7
44												2.9	3.9	4.4
46													2.8	3.2
48														2.1
50														
主臂组合	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
倍率	0	0	0	0	0	0	0	1	1	1	1	1	2	3
	14	14	14	14	14	14	11	7	7	5	4	3	3	2

4、七节主臂_t-2 支腿全伸 12.8m×13m，平衡重 20t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	178.0	178.0	148.1	152.9	130.8	71.9						
10	174.0	171.0	163.0	163.0	116.6	145.3	129.3	70.0	63.3					
12	140.0	126.7	123.8	125.0	118.2	109.5	118.8	66.4	58.5	48.4	41.7			
14	99.6	103.4	96.6	100.9	105.5	93.5	101.7	61.7	53.9	44.8	40.1	36.6		
16		74.4	69.7	74.2	82.2	74.4	84.4	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18			51.6	56.1	65.2	58.9	67.2	54.4	47.3	38.1	34.2	32.3	29.6	25.6
20			38.6	44.2	54.0	48.5	55.4	45.0	43.8	35.6	32.3	30.6	27.5	23.8
22			27.3	34.7	44.7	40.8	45.1	38.0	41.6	34.3	30.6	28.9	25.5	22.4
24				27.0	38.1	34.7	37.1	32.1	36.7	31.6	28.0	26.8	23.6	20.7
26				20.8	32.4	29.3	30.7	26.9	32.2	29.2	25.8	24.4	21.6	19.5
28				15.0	28.0	24.8	25.5	23.0	27.8	25.7	22.5	20.8	18.8	18.2
30					23.5	21.9	21.1	19.8	24.1	22.1	19.7	18.1	15.8	15.8
32					19.8	19.0	17.3	16.8	21.1	19.1	16.9	15.3	13.3	13.6
34					14.0	15.8	14.1	14.1	18.1	16.9	14.3	13.2	11.4	11.7

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
36						13.0	11.2	12.2	15.3	14.4	12.4	11.2	9.7	10.1
38						10.4	8.7	10.0	12.8	12.3	10.6	9.6	8.2	8.5
40						6.8	6.5	8.0	10.5	10.5	8.8	8.0	6.4	7.1
42							4.5	6.6	8.6	8.8	7.6	6.7	5.1	5.7
44							2.8	5.1	6.8	7.3	6.1	5.4	3.9	4.4
46								3.5	5.2	5.9	4.9	4.3	2.8	3.2
48								2.2	3.7	4.4	3.9	3.1		2.1
50									2.4	3.1	2.8	2.2		
52														
主臂组合	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
倍率	0	0	0	0	1	1	1	2	2	2	2	2	2	3
	14	14	14	14	14	14	11	6	5	4	3	3	3	2

5、七节主臂_t-1 支腿全伸 12.8m×13m，平衡重 50t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	178.0	178.0	178.0	178.0	135.6	94.2						
10	178.0	178.0	178.0	178.0	148.4	178.0	128.2	89.5	84.4					
12	158.0	142.3	142.7	139.3	137.0	120.6	114.9	81.6	77.5	63.8	51.7			
14	131.0	129.0	126.0	118.5	113.7	103.4	103.0	73.7	71.3	58.8	47.7	40.3		
16		103.5	105.3	100.0	95.7	88.4	94.2	67.5	65.9	53.6	43.7	37.3	31.8	27.4
18			81.8	77.7	80.2	76.4	84.6	62.6	61.4	49.1	39.9	34.4	29.6	25.6
20			64.8	62.8	66.2	63.4	72.9	57.2	56.7	45.6	36.9	31.7	27.5	23.8
22			49.5	50.7	54.6	53.7	60.0	50.3	53.0	42.4	34.3	29.5	25.5	22.4
24				40.9	46.4	46.1	49.9	42.8	46.9	38.9	31.5	27.4	23.6	20.7
26				33.0	39.2	39.3	41.8	36.2	41.2	36.1	29.0	25.5	22.3	19.5
28				25.3	33.7	33.7	35.2	31.3	35.8	32.7	26.9	23.5	20.8	18.4
30					28.1	30.2	29.6	27.4	31.1	28.1	25.1	22.0	19.4	17.4
32					23.4	26.6	24.9	23.7	27.4	24.4	22.5	20.3	18.0	16.4
34					16.4	22.6	20.9	20.3	23.7	21.6	19.2	18.8	16.9	15.3
36						19.0	17.4	17.9	20.1	18.6	16.8	16.9	15.8	14.5
38						15.9	14.3	15.2	17.0	16.0	14.6	14.9	14.8	13.8
40						10.9	11.6	12.8	14.3	13.8	12.5	13.1	13.3	13.0
42							9.1	11.2	11.9	11.8	11.0	11.5	11.7	12.3
44							6.9	9.6	9.7	9.9	9.2	10.0	10.5	11.3

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
46								7.5	7.7	8.2	7.9	8.7	9.1	10.1
48								6.1	6.0	6.5	6.6	7.3	7.9	8.9
50								4.5	4.3	4.9	5.3	6.3	6.9	7.9
52									2.9	3.4	4.1	5.2	6.0	7.0
54										2.0	2.9	4.0	4.9	5.9
56												3.0	4.0	4.9
58												2.0	3.1	3.7
60													2.2	2.6
62														
主臂组合	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

6、七节主臂_t-2 支腿全伸 12.8m×13m，平衡重 50t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	178.0	178.0	148.1	152.9	130.8	71.9						
10	178.0	178.0	178.0	178.0	116.6	145.3	129.3	70.0	63.3					
12	158.0	143.2	140.8	142.1	118.2	109.5	125.3	66.4	58.5	48.4	41.7			
14	131.0	130.0	123.0	121.4	107.6	103.1	114.6	61.7	53.9	44.8	40.1	36.6		
16		105.8	101.7	102.9	95.9	90.9	102.6	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18			78.4	81.9	86.0	79.6	90.5	55.4	47.3	38.1	34.2	32.3	29.6	25.6
20			61.6	66.9	75.3	68.0	78.4	52.4	43.8	35.6	32.3	30.6	27.5	23.8
22			46.5	54.8	63.5	58.2	65.3	50.2	41.6	34.3	30.6	28.9	25.5	22.4
24				44.9	55.4	50.7	55.1	46.5	39.5	31.6	28.0	26.8	23.6	20.7
26				37.0	48.1	43.9	46.9	39.9	38.3	30.1	26.1	24.8	22.3	19.5
28				29.1	42.7	38.3	40.2	35.0	36.1	29.0	24.9	23.0	20.8	18.4
30					37.0	34.9	34.6	31.2	34.2	27.4	23.7	21.8	19.4	17.4
32					32.2	31.5	29.8	27.4	33.2	26.0	22.1	20.2	18.0	16.4
34					23.8	27.4	25.7	24.0	29.7	25.4	20.6	18.7	16.9	15.3
36						23.8	22.2	21.7	26.1	23.8	19.7	17.4	15.8	14.5
38						20.7	19.1	19.0	23.0	21.6	18.6	16.6	14.8	13.8
40						14.9	16.3	16.6	20.2	19.5	16.4	15.4	13.3	13.0
42							13.9	15.1	17.8	17.6	15.1	13.9	11.7	12.3
44							11.6	13.7	15.6	15.9	13.3	12.3	10.5	11.3

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
46								11.5	13.6	14.2	12.0	11.2	9.1	10.1
48								10.3	11.8	12.5	11.0	9.7	7.9	8.9
50								8.7	10.1	10.8	9.7	8.9	6.9	7.9
52									8.6	9.3	8.5	8.0	6.0	7.0
54									7.3	8.0	7.5	6.7	4.9	5.9
56										6.7	6.6	5.9	4.0	4.9
58										3.3	5.5	4.9	3.1	3.7
60										2.8	4.4	3.8	2.2	2.6
62											3.4	2.8		
64														
主臂组合	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
倍率	0	0	0	0	1	1	1	2	2	2	2	2	2	3
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

7、七节主臂 t₁ 支腿全伸 12.8m×13m，平衡重 80t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	178.0	178.0	178.0	178.0	135.6	94.2						
10	178.0	178.0	178.0	178.0	153.3	178.0	128.2	89.5	84.4					
12	170.0	153.3	155.0	151.6	148.0	129.6	114.9	81.6	77.5	63.8	51.7			
14	148.0	123.0	141.0	133.1	127.3	115.0	103.0	73.7	71.3	58.8	47.7	40.3		
16		120.4	120.0	113.5	107.5	98.3	94.2	67.5	65.9	53.6	43.7	37.3	31.8	27.4
18			103.0	96.5	94.2	86.2	84.6	62.6	61.4	49.1	39.9	34.4	29.6	25.6
20			87.9	85.5	84.4	77.8	77.8	57.2	56.7	45.6	36.9	31.7	27.5	23.8
22			68.7	70.8	73.5	70.2	70.2	53.3	53.0	42.4	34.3	29.5	25.5	22.4
24				58.8	63.7	62.1	64.4	49.3	49.2	38.9	31.5	27.4	23.6	20.7
26				49.2	54.9	53.9	58.0	45.5	46.7	36.1	29.0	25.5	22.3	19.5
28				39.4	48.4	47.2	49.9	42.4	43.7	33.9	26.9	23.5	20.8	18.4
30					41.6	43.2	43.1	38.8	40.8	31.4	25.1	22.0	19.4	17.4
32					35.9	39.1	37.4	34.3	38.6	29.2	23.1	20.3	18.0	16.4
34					26.2	34.2	32.5	30.1	35.2	27.4	21.3	18.8	16.9	15.3
36						29.9	28.2	27.4	31.0	25.7	19.7	17.4	15.8	14.5
38						26.1	24.4	24.2	27.2	24.1	18.3	16.1	14.8	13.8
40						18.9	21.1	21.3	23.9	22.6	17.0	15.0	13.7	13.0
42							18.2	19.6	20.9	20.4	16.0	14.1	12.8	12.3

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
44							15.5	17.9	18.3	18.3	15.1	13.4	12.1	11.7
46								15.2	15.9	16.3	14.2	12.7	11.5	11.2
48								13.8	13.7	14.2	13.5	12.1	10.8	10.7
50								11.9	11.7	12.2	11.9	11.6	10.3	10.3
52									9.9	10.4	10.6	11.1	9.9	9.8
54									8.3	8.8	9.3	10.2	9.4	9.3
56										7.3	8.3	9.4	9.0	8.9
58										3.5	6.9	8.2	8.5	8.2
60										2.9	5.6	6.9	7.8	7.5
62											4.4	5.7	6.9	6.8
64											2.5	4.6	5.9	6.3
66												3.5	5.0	5.3
68												2.5	4.1	4.3
70													3.1	3.4
72													2.3	2.5
74														
主臂组合	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

8、七节主臂_t-2 支腿全伸 12.8m×13m，平衡重 80t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	178.0	178.0	148.1	152.9	130.8	71.9						
10	178.0	178.0	178.0	178.0	116.6	145.3	129.3	70.0	63.3					
12	170.0	154.2	153.1	153.5	118.2	109.5	125.3	66.4	58.5	48.4	41.7			
14	148.0	124.0	139.0	136.0	107.6	103.1	118.4	61.7	53.9	44.8	40.1	36.6		
16		121.4	118.0	115.5	95.9	95.4	114.4	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18			101.0	99.4	86.0	86.6	101.2	55.4	47.3	38.1	34.2	32.3	29.6	25.6
20			84.6	88.8	78.8	80.2	92.0	52.4	43.8	35.6	32.3	30.6	27.5	23.8
22			65.6	74.9	72.1	73.7	82.0	50.2	41.6	34.3	30.6	28.9	25.5	22.4
24				62.8	68.0	66.7	73.1	47.6	39.5	31.6	28.0	26.8	23.6	20.7
26				53.2	63.2	58.4	63.1	44.5	38.3	30.1	26.1	24.8	22.3	19.5
28				43.2	57.4	51.7	54.9	42.6	36.1	29.0	24.9	23.0	20.8	18.4
30					50.5	47.9	48.1	41.0	34.2	27.4	23.7	21.8	19.4	17.4

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
32					44.7	44.0	42.3	38.0	33.2	26.0	22.1	20.2	18.0	16.4
34					33.6	39.0	37.3	33.8	31.5	25.4	20.6	18.7	16.9	15.3
36						34.6	33.0	31.2	30.0	23.8	19.7	17.4	15.8	14.5
38						30.8	29.2	28.0	28.3	23.1	18.8	16.6	14.8	13.8
40						22.8	25.9	25.0	26.9	22.0	17.5	15.7	13.7	13.0
42							22.9	23.5	25.4	21.2	17.2	14.8	12.8	12.3
44							20.2	22.0	24.1	20.7	16.2	14.1	12.1	11.7
46								19.2	21.7	20.0	15.9	13.7	11.5	11.2
48								18.0	19.5	19.3	15.6	12.7	10.8	10.7
50								16.1	17.5	18.2	14.9	12.5	10.3	10.3
52									15.7	16.4	14.2	12.5	9.9	9.8
54									14.0	14.7	13.8	11.6	9.4	9.3
56										13.2	13.1	11.3	9.0	8.9
58										7.0	11.7	10.9	8.5	8.2
60										6.7	10.4	9.9	7.8	7.5
62											9.2	8.6	6.9	6.8
64											6.1	7.5	5.9	6.3
66												6.4	5.0	5.3
68												5.5	4.1	4.3
70												2.5	3.1	3.4
72													2.3	2.5
74														
主臂组合	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

9、七节主臂_t-1 支腿全伸 12.8m×13m，平衡重 110t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	178.0	178.0	178.0	178.0	135.6	94.2						
10	178.0	178.0	178.0	178.0	159.1	178.0	128.2	89.5	84.4					
12	170.0	158.8	159.8	157.3	152.6	134.5	114.9	81.6	77.5	63.8	51.7			
14	148.0	151.0	148.0	140.9	132.8	119.9	103.0	73.7	71.3	58.8	47.7	40.3		
16		131.2	131.0	124.2	117.4	106.6	94.2	67.5	65.9	53.6	43.7	37.3	31.8	27.4
18		116.0	115.0	108.1	104.2	96.2	84.6	62.6	61.4	49.1	39.9	34.4	29.6	25.6

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
20			101.0	96.6	93.7	86.3	77.8	57.2	56.7	45.6	36.9	31.7	27.5	23.8
22			89.0	86.7	84.0	78.9	70.2	53.3	53.0	42.4	34.3	29.5	25.5	22.4
24			70.0	76.7	76.8	72.2	64.4	49.3	49.2	38.9	31.5	27.4	23.6	20.7
26				65.4	70.0	65.8	59.2	45.5	46.7	36.1	29.0	25.5	22.3	19.5
28				53.5	63.1	60.6	53.9	42.4	43.7	33.9	26.9	23.5	20.8	18.4
30				42.0	55.1	56.1	49.5	40.0	40.8	31.4	25.1	22.0	19.4	17.4
32					48.4	51.6	46.2	37.7	38.6	29.2	23.1	20.3	18.0	16.4
34					36.0	45.7	43.0	35.0	35.7	27.4	21.3	18.8	16.9	15.3
36						40.7	39.0	33.4	33.1	25.7	19.7	17.4	15.8	14.5
38						36.2	34.6	31.4	30.5	24.1	18.3	16.1	14.8	13.8
40						25.3	30.7	29.5	28.4	22.6	17.0	15.0	13.7	13.0
42							27.2	28.0	26.2	21.1	16.0	14.1	12.8	12.3
44							24.0	26.2	24.0	19.9	15.1	13.4	12.1	11.7
46								22.9	22.8	18.7	14.2	12.7	11.5	11.2
48								21.5	20.7	17.3	13.5	12.1	10.8	10.7
50								19.3	19.1	16.2	12.7	11.6	10.3	10.3
52									17.0	15.1	12.0	11.1	9.9	9.8
54									15.1	14.0	11.4	10.6	9.4	9.3
56										12.8	10.8	10.1	9.0	8.9
58										6.9	10.1	9.4	8.5	8.2
60										6.6	9.1	8.7	8.0	7.5
62											8.5	7.8	7.7	6.8
64											5.6	7.3	7.3	6.3
66												6.7	6.9	5.7
68												6.1	6.3	5.1
70												2.9	5.5	4.6
72													4.9	4.0
74													4.6	3.5
76														3.1
78														2.6
80														2.3
主臂组合	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

10、 七节主臂_t-2 支腿全伸 12.8m×13m，平衡重 110t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	178.0	178.0	148.1	152.9	130.8	71.9						
10	178.0	178.0	178.0	178.0	116.6	145.3	129.3	70.0	63.3					
12	170.0	159.8	158.8	159.2	118.2	109.5	125.3	66.4	58.5	48.4	41.7			
14	148.0	152.0	147.0	142.8	107.6	103.1	118.4	61.7	53.9	44.8	40.1	36.6		
16		132.1	129.0	126.2	95.9	95.4	114.4	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18		118.0	113.0	111.0	86.0	86.6	104.0	55.4	47.3	38.1	34.2	32.3	29.6	25.6
20			99.0	99.6	78.8	80.2	96.1	52.4	43.8	35.6	32.3	30.6	27.5	23.8
22			87.0	88.7	72.1	74.8	87.2	50.2	41.6	34.3	30.6	28.9	25.5	22.4
24			68.0	79.8	68.0	71.2	79.6	47.6	39.5	31.6	28.0	26.8	23.6	20.7
26				69.3	63.2	66.4	73.2	44.5	38.3	30.1	26.1	24.8	22.3	19.5
28				57.3	60.2	62.4	67.8	42.6	36.1	29.0	24.9	23.0	20.8	18.4
30				48.0	55.9	60.8	61.6	41.0	34.2	27.4	23.7	21.8	19.4	17.4
32					51.6	56.4	54.8	39.3	33.2	26.0	22.1	20.2	18.0	16.4
34					40.6	50.6	48.9	37.6	31.5	25.4	20.6	18.7	16.9	15.3
36						45.5	43.8	37.1	30.0	23.8	19.7	17.4	15.8	14.5
38						41.0	39.4	35.3	28.3	23.1	18.8	16.6	14.8	13.8
40						29.2	35.4	33.4	26.9	22.0	17.5	15.7	13.7	13.0
42							31.9	31.9	25.4	21.2	17.2	14.8	12.8	12.3
44							28.8	30.3	24.2	20.7	16.2	14.1	12.1	11.7
46								26.9	23.1	20.0	15.9	13.7	11.5	11.2
48								25.7	22.1	19.3	15.6	12.7	10.8	10.7
50								23.5	21.0	18.4	14.9	12.5	10.3	10.3
52									20.3	17.7	14.2	12.5	9.9	9.8
54									19.3	16.7	13.8	11.6	9.4	9.3
56										16.1	13.5	11.3	9.0	8.9
58										9.1	12.8	10.9	8.5	8.2
60										8.5	12.0	10.0	8.0	7.5
62											11.4	9.4	7.7	6.8
64											8.0	8.9	7.3	6.3
66												8.3	6.9	5.7
68												7.4	6.3	5.1
70												3.8	5.5	4.6
72													4.9	4.0
74													4.6	3.5
76														3.1
78														2.6
80														2.3
主臂组	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
合	0	0	0	0	1	1	1	2	2	2	2	2	2	3

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

二、 七节主臂工况起重性能表—半身支腿

1、 七节主臂_t-1 支腿半伸 10.68m×9.8m，平衡重 0t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	174.0	174.0	171.0								
8	163.0	159.0	154.0	149.0	150.0	149.0	143.7							
9	135.9	137.0	134.0	130.0	132.0	131.0	127.0	94.2						
10	101.8	102.9	102.2	100.4	110.5	115.2	112.5	89.5	84.4					
12	62.2	63.3	62.8	61.2	70.2	74.2	71.9	75.8	75.5	63.8	51.7			
14	39.9	41.1	40.6	39.3	47.5	51.3	49.1	52.7	52.5	53.1	47.7	40.3		
16		26.8	26.5	25.2	33.0	36.6	34.6	38.0	37.7	38.3	39.5	37.3	31.8	27.4
18			16.6	15.4	22.9	26.4	24.4	27.7	27.5	28.0	29.2	30.7	29.6	25.6
20			9.3	8.2	15.5	18.8	17.0	20.2	19.9	20.5	21.6	23.1	24.8	23.8
22			3.7	2.6	9.8	13.1	11.3	14.4	14.2	14.7	15.8	17.3	19.0	19.2
24					5.3	8.5	6.7	9.8	9.6	10.1	11.2	12.6	14.3	14.5
26						4.8	3.1	6.1	5.9	6.4	7.5	8.9	10.5	10.8
28								3.0	2.8	3.3	4.4	5.8	7.4	7.6
30												3.2	4.8	5.0
32													2.5	2.8
主臂组合	00000	01000	11000	21000	11110	11111	21111	21111	22111	22211	22221	22222	22222	33333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

2、 七节主臂_t-2 支腿半伸 10.68m×9.8m，平衡重 0t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	163.0	160.0	152.0	160.0	155.7	152.0	134.0							
9	135.9	140.0	131.5	141.0	138.0	134.0	130.0	71.9						

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
10	101.8	105.7	97.9	123.1	116.6	120.0	116.0	70.0	63.3					
12	62.2	65.8	59.0	81.2	81.5	80.5	78.3	66.4	58.5	48.4	41.7			
14	39.9	43.4	37.2	57.7	58.0	57.1	55.0	58.0	53.9	44.8	40.1	36.6		
16		29.0	23.2	42.6	43.0	42.1	40.1	43.0	44.7	41.4	36.6	34.1	31.8	27.4
18			13.4	32.2	32.5	31.7	29.8	32.5	34.2	35.0	34.2	32.3	29.6	25.6
20			6.2	24.5	24.8	24.0	22.2	24.9	26.4	27.2	27.1	26.5	24.8	23.8
22				18.6	18.9	18.1	16.3	19.0	20.5	21.3	21.2	20.5	19.0	19.2
24				13.9	14.2	13.5	11.7	14.3	15.8	16.6	16.5	15.9	14.3	14.5
26				8.9	10.5	9.7	8.0	10.5	12.0	12.8	12.7	12.1	10.5	10.8
28				4.4	7.3	6.6	4.9	7.4	8.9	9.6	9.5	8.9	7.4	7.6
30					4.7	4.0	2.3	4.8	6.2	7.0	6.9	6.3	4.8	5.0
32					2.4			2.5	4.0	4.7	4.6	4.0	2.5	2.8
34									2.0	2.7	2.7	2.1		
主臂组合	00000	00100	20000	11100	00111	01111	11111	11111	11112	11122	11222	12222	22222	33333
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

3、七节主臂_t-1 支腿半伸 10.68m×9.8m，平衡重 20t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	177.0	172.0	167.0	167.0	165.0	143.7							
9	158.0	154.0	150.0	146.0	147.0	146.0	135.6	94.2						
10	139.0	136.0	132.0	128.0	130.0	130.0	126.0	89.5	84.4					
12	90.9	92.0	91.4	89.9	98.8	102.9	100.6	81.6	77.5	63.8	51.7			
14	62.2	63.5	63.0	61.6	69.9	73.6	71.5	73.7	71.3	58.8	47.7	40.3		
16		45.2	44.8	43.5	51.3	54.9	52.9	56.3	56.1	53.6	43.7	37.3	31.8	27.4
18			32.1	30.9	38.5	41.9	40.0	43.3	43.0	43.6	39.9	34.4	29.6	25.6
20			22.8	21.6	29.0	32.3	30.5	33.6	33.4	34.0	35.1	31.7	27.5	23.8
22			15.6	14.5	21.7	25.0	23.2	26.3	26.1	26.6	27.7	29.2	25.5	22.4
24				8.9	16.0	19.2	17.4	20.5	20.2	20.8	21.9	23.3	23.6	20.7
26				4.3	11.3	14.5	12.7	15.7	15.5	16.0	17.1	18.5	20.2	19.5
28					7.4	10.6	8.9	11.8	11.6	12.1	13.2	14.6	16.2	16.5
30					4.2	7.3	5.6	8.6	8.4	8.9	9.9	11.3	12.9	13.1
32						4.5	2.8	5.8	5.6	6.1	7.1	8.5	10.0	10.3
34						2.1		3.3	3.1	3.6	4.7	6.0	7.6	7.8
36											2.6	3.9	5.5	5.7

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
38												2.0	3.6	3.8
40														2.2
主臂组合	000000	010000	110000	210000	111100	111110	211110	211111	221111	222111	222211	222221	222222	333333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

4、七节主臂_t-2 支腿半伸 10.68m×9.8m，平衡重 20t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	170.0	178.0	155.7	160.4	134.0							
9	158.0	156.0	148.0	157.0	148.1	149.0	130.8	71.9						
10	139.0	138.0	130.0	139.0	116.6	133.0	129.0	70.0	63.3					
12	90.9	94.5	87.7	109.8	110.2	109.0	105.0	66.4	58.5	48.4	41.7			
14	62.2	65.8	59.5	80.0	80.4	79.4	77.4	61.7	53.9	44.8	40.1	36.6		
16		47.3	41.5	61.0	61.3	60.4	58.5	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18			28.9	47.7	48.0	47.2	45.3	48.1	47.3	38.1	34.2	32.3	29.6	25.6
20			19.7	38.0	38.3	37.5	35.7	38.3	39.9	35.6	32.3	30.6	27.5	23.8
22			12.5	30.5	30.8	30.0	28.2	30.9	32.4	33.2	30.6	28.9	25.5	22.4
24				24.6	24.9	24.1	22.4	25.0	26.5	27.2	27.2	26.5	23.6	20.7
26				19.8	20.1	19.3	17.6	20.2	21.7	22.4	22.3	21.7	20.2	19.5
28				15.0	16.1	15.4	13.7	16.2	17.7	18.4	18.4	17.7	16.2	16.5
30					12.8	12.1	10.4	12.9	14.4	15.1	15.0	14.4	12.9	13.1
32					9.9	9.2	7.6	10.0	11.5	12.2	12.1	11.5	10.0	10.3
34					7.5	6.8	5.1	7.6	9.0	9.7	9.7	9.1	7.6	7.8
36						4.6	3.0	5.5	6.9	7.6	7.5	6.9	5.5	5.7
38						2.7		3.6	5.0	5.7	5.6	5.1	3.6	3.8
40									3.3	4.0	4.0	3.4		2.2
42										2.5	2.5			
主臂组合	000000	001000	200000	111000	001111	011111	111111	111112	111122	111222	112222	122222	222222	333333
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

5、七节主臂_t-1 支腿半伸 10.68m×9.8m，平衡重 50t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	174.0	169.0	170.0	168.0	135.6	94.2						
10	162.0	158.0	154.0	150.0	148.4	150.0	128.2	89.5	84.4					
12	130.0	127.0	124.0	120.0	123.0	120.6	114.9	81.6	77.5	63.8	51.7			
14	95.8	97.0	96.6	95.2	102.0	102.0	99.0	73.7	71.3	58.8	47.7	40.3		
16		72.7	72.3	71.0	78.8	82.4	80.4	67.5	65.9	53.6	43.7	37.3	31.8	27.4
18			55.4	54.2	61.8	65.2	63.3	62.6	61.4	49.1	39.9	34.4	29.6	25.6
20			43.0	41.9	49.2	52.5	50.7	53.9	53.6	45.6	36.9	31.7	27.5	23.8
22			33.4	32.4	39.6	42.8	41.0	44.1	43.9	42.4	34.3	29.5	25.5	22.4
24				24.8	31.9	35.2	33.4	36.4	36.2	36.7	31.5	27.4	23.6	20.7
26				18.7	25.8	28.9	27.2	30.2	30.0	30.5	29.0	25.5	22.3	19.5
28				13.6	20.6	23.8	22.1	25.1	24.9	25.4	26.4	23.5	20.8	18.4
30					16.3	19.5	17.8	20.7	20.5	21.0	22.1	22.0	19.4	17.4
32					12.6	15.8	14.1	17.0	16.8	17.3	18.4	19.7	18.0	16.4
34					9.4	12.6	10.9	13.8	13.6	14.1	15.2	16.5	16.9	15.3
36						9.8	8.1	11.0	10.9	11.3	12.4	13.7	15.3	14.5
38						7.3	5.7	8.6	8.4	8.9	9.9	11.3	12.8	13.1
40						5.1	3.5	6.4	6.2	6.7	7.8	9.1	10.6	10.9
42								4.5	4.3	4.8	5.8	7.1	8.7	8.9
44								2.7	2.6	3.1	4.1	5.4	6.9	7.2
46											2.5	3.8	5.3	5.6
48												2.4	3.9	4.1
50													2.6	2.8
主臂组合	000000	010000	110000	210000	111100	111110	211110	211111	221111	222111	222211	222221	222222	333333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

6、七节主臂_t-2 支腿半伸 10.68m×9.8m，平衡重 50t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	172.0	178.0	148.1	152.9	130.8	71.9						

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
10	162.0	160.0	152.0	161.0	116.6	145.3	129.3	70.0	63.3					
12	130.0	128.0	122.0	131.0	118.2	109.5	122.0	66.4	58.5	48.4	41.7			
14	95.8	99.3	93.1	110.0	107.6	103.1	103.0	61.7	53.9	44.8	40.1	36.6		
16		74.9	69.0	88.5	88.8	87.9	86.0	57.9	50.3	41.4	36.6	34.1	31.8	27.4
18			52.2	71.0	71.3	70.5	68.6	55.4	47.3	38.1	34.2	32.3	29.6	25.6
20			39.9	58.2	58.5	57.7	55.9	52.4	43.8	35.6	32.3	30.6	27.5	23.8
22			30.4	48.3	48.7	47.9	46.1	48.7	41.6	34.3	30.6	28.9	25.5	22.4
24				40.6	40.9	40.1	38.4	40.9	39.5	31.6	28.0	26.8	23.6	20.7
26				34.2	34.6	33.8	32.1	34.6	36.1	30.1	26.1	24.8	22.3	19.5
28				29.0	29.4	28.6	26.9	29.4	30.9	29.0	24.9	23.0	20.8	18.4
30					25.0	24.2	22.6	25.0	26.5	27.2	23.7	21.8	19.4	17.4
32					21.2	20.5	18.8	21.3	22.8	23.5	22.1	20.2	18.0	16.4
34					18.0	17.3	15.6	18.1	19.5	20.2	20.2	18.7	16.9	15.3
36						14.4	12.8	15.3	16.7	17.4	17.4	16.8	15.3	14.5
38						12.0	10.4	12.8	14.2	14.9	14.9	14.3	12.8	13.1
40						9.8	8.2	10.6	12.0	12.7	12.7	12.1	10.6	10.9
42							6.2	8.7	10.1	10.8	10.7	10.1	8.7	8.9
44							4.5	6.9	8.3	9.0	8.9	8.4	6.9	7.2
46								5.3	6.7	7.4	7.4	6.8	5.3	5.6
48								3.9	5.3	6.0	5.9	5.3	3.9	4.1
50								2.5	4.0	4.6	4.6	4.0	2.6	2.8
52									2.8	3.4	3.4	2.8		
54										2.3	2.3			
主臂组合	000000	001000	200000	111000	001111	011111	111111	111112	111122	112222	122222	222222	333333	333333
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

7、七节主臂_t-1 支腿半伸 10.68m×9.8m，平衡重 80t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	178.0									
7	178.0	178.0	178.0	178.0	178.0	178.0								
8	178.0	178.0	178.0	178.0	178.0	178.0	143.7							
9	178.0	178.0	178.0	178.0	178.0	178.0	135.6	94.2						
10	176.0	172.0	169.0	165.0	153.3	164.0	128.2	89.5	84.4					
12	149.0	146.0	142.0	138.0	140.0	129.6	114.9	81.6	77.5	63.8	51.7			
14	123.0	120.0	118.0	114.0	117.0	115.0	103.0	73.7	71.3	58.8	47.7	40.3		
16		100.2	99.0	96.0	99.0	98.3	94.2	67.5	65.9	53.6	43.7	37.3	31.8	27.4

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
18			78.7	77.5	85.1	86.2	84.0	62.6	61.4	49.1	39.9	34.4	29.6	25.6
20			63.2	62.1	69.4	72.8	70.9	57.2	56.7	45.6	36.9	31.7	27.5	23.8
22			51.3	50.2	57.4	60.7	58.9	53.3	53.0	42.4	34.3	29.5	25.5	22.4
24				40.8	47.9	51.1	49.4	49.3	49.2	38.9	31.5	27.4	23.6	20.7
26				33.2	40.2	43.4	41.7	44.7	44.5	36.1	29.0	25.5	22.3	19.5
28				26.9	33.9	37.0	35.3	38.3	38.1	33.9	26.9	23.5	20.8	18.4
30					28.5	31.6	29.9	32.9	32.7	31.4	25.1	22.0	19.4	17.4
32					23.9	27.0	25.4	28.3	28.1	28.6	23.1	20.3	18.0	16.4
34					19.9	23.1	21.4	24.3	24.1	24.6	21.3	18.8	16.9	15.3
36						19.6	18.0	20.9	20.7	21.2	19.7	17.4	15.8	14.5
38						16.5	14.9	17.8	17.6	18.1	18.3	16.1	14.8	13.8
40						13.8	12.2	15.1	14.9	15.4	16.5	15.0	13.7	13.0
42							9.8	12.7	12.5	13.0	14.1	14.1	12.8	12.3
44							7.7	10.6	10.4	10.9	11.9	13.2	12.1	11.7
46								8.6	8.4	8.9	9.9	11.3	11.5	11.2
48								6.8	6.7	7.1	8.2	9.5	10.8	10.7
50								5.2	5.0	5.5	6.6	7.9	9.4	9.6
52									3.6	4.1	5.1	6.4	7.9	8.1
54									2.2	2.7	3.7	5.0	6.5	6.8
56											2.5	3.8	5.3	5.5
58												2.6	4.1	4.3
60													3.0	3.3
62													2.0	2.2
主臂组合	000000	010000	110000	210000	111100	111110	211110	211111	221111	222111	222211	222221	222222	333333
倍率	14	14	14	14	14	14	11	7	7	5	4	3	3	2

8、七节主臂_t-2 支腿半伸 10.68m×9.8m，平衡重 80t

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
3	178.0	178.0												
4	178.0	178.0	178.0											
5	178.0	178.0	178.0	178.0										
6	178.0	178.0	178.0	178.0	174.1									
7	178.0	178.0	178.0	178.0	164.3	168.6								
8	178.0	178.0	178.0	178.0	155.7	160.4	134.0							
9	178.0	178.0	178.0	178.0	148.1	152.9	130.8	71.9						
10	176.0	174.0	167.0	173.0	116.6	145.3	129.3	70.0	63.3					
12	149.0	147.0	140.0	149.0	118.2	109.5	125.3	66.4	58.5	48.4	41.7			
14	123.0	122.0	115.0	125.0	107.6	103.1	117.0	61.7	53.9	44.8	40.1	36.6		
16		102.4	96.5	108.0	95.9	95.4	100.0	57.9	50.3	41.4	36.6	34.1	31.8	27.4

R/L	16.8	22.0	27.1	32.3	37.4	42.6	47.7	52.9	58.0	63.2	68.3	73.5	78.6	84.0
18			75.5	94.0	86.0	86.6	87.0	55.4	47.3	38.1	34.2	32.3	29.6	25.6
20			60.1	78.4	78.7	77.9	76.1	52.4	43.8	35.6	32.3	30.6	27.5	23.8
22			48.2	66.2	66.5	65.7	64.0	50.2	41.6	34.3	30.6	28.9	25.5	22.4
24				56.5	56.9	56.1	54.4	47.6	39.5	31.6	28.0	26.8	23.6	20.7
26				48.7	49.0	48.3	46.6	44.5	38.3	30.1	26.1	24.8	22.3	19.5
28				42.2	42.6	41.8	40.1	42.6	36.1	29.0	24.9	23.0	20.8	18.4
30					37.1	36.4	34.7	37.2	34.2	27.4	23.7	21.8	19.4	17.4
32					32.5	31.8	30.1	32.6	33.2	26.0	22.1	20.2	18.0	16.4
34					28.5	27.8	26.1	28.6	30.0	25.4	20.6	18.7	16.9	15.3
36						24.3	22.7	25.1	26.5	23.8	19.7	17.4	15.8	14.5
38						21.2	19.6	22.0	23.5	23.1	18.8	16.6	14.8	13.8
40						18.5	16.9	19.3	20.7	21.4	17.5	15.7	13.7	13.0
42							14.5	16.9	18.3	19.0	17.2	14.8	12.8	12.3
44							12.3	14.7	16.1	16.8	16.2	14.1	12.1	11.7
46								12.7	14.2	14.8	14.8	13.7	11.5	11.2
48								10.9	12.4	13.0	13.0	12.4	10.8	10.7
50								9.3	10.7	11.4	11.4	10.8	9.4	9.6
52									9.2	9.9	9.9	9.3	7.9	8.1
54									7.9	8.5	8.5	7.9	6.5	6.8
56										7.3	7.2	6.7	5.3	5.5
58										6.1	6.1	5.5	4.1	4.3
60										5.0	5.0	4.4	3.0	3.3
62											4.0	3.4	2.0	2.2
64											3.0	2.5		
主臂组合	000000	001000	200000	111000	001111	011111	111111	111112	111122	111222	112222	122222	222222	333333
倍率	14	14	14	14	14	14	11	6	5	4	3	3	3	2

三、 四节主臂工况起重性能表—全伸支腿

1、 四节主臂 支腿全伸 12.8m×13m，平衡重 0t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	295.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	265.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	240.0	185.2	221.7	214.8	226.0	173.6	219.7	164.7	177.5	118.6	137.2		
8	210.0	175.6	202.0	199.0	197.0	163.7	192.0	158.3	167.2	112.5	128.8	106.3	

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
9	185.0	167.8	178.0	176.0	173.0	158.1	170.0	152.5	157.5	105.4	120.6	100.1	93.3
10	164.0	161.0	158.0	157.0	154.0	149.3	152.0	146.3	146.0	99.8	113.0	93.9	88.2
12	113.4	118.5	112.8	121.1	116.3	124.6	120.6	122.0	119.2	88.3	98.9	83.8	78.9
14	78.5	83.2	78.1	85.5	81.2	88.7	85.1	87.9	83.8	78.8	85.2	75.3	71.1
16	57.0	61.6	56.9	63.9	59.9	66.8	63.5	66.1	62.3	66.9	63.6	65.6	64.4
18		47.1	42.6	49.3	45.5	52.1	48.9	51.4	47.9	52.2	49.0	51.0	51.2
20		36.3	31.5	38.7	34.7	41.6	38.3	40.9	37.2	41.7	38.4	40.5	40.7
22				30.2	26.3	33.1	29.8	32.4	28.8	33.1	30.0	31.9	32.1
24				23.6	19.9	26.5	23.3	25.8	22.3	26.6	23.5	25.4	25.6
26				18.4	14.7	21.3	18.2	20.6	17.2	21.4	18.4	20.2	20.4
28						17.0	14.0	16.4	13.1	17.2	14.2	16.0	16.3
30						13.5	10.6	12.9	9.7	13.7	10.8	12.6	12.8
32								10.0	6.8	10.7	7.9	9.7	9.9
34								7.5	4.3	8.3	5.4	7.2	7.4
36								5.3	2.1	6.1	3.3	5.1	5.3
38										4.2		3.2	3.4
40										2.5			
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

2、四节主臂 支腿全伸 12.8m×13m，平衡重 20t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	298.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	271.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	246.0	185.2	221.7	214.8	232.0	173.6	219.7	164.7	177.5	118.6	137.2		
8	225.0	175.6	208.9	206.9	212.0	163.7	207.0	158.3	167.2	112.5	128.8	106.3	
9	201.0	167.8	194.0	191.0	189.0	158.1	185.0	152.5	157.5	105.4	120.6	100.1	93.3
10	179.0	161.5	172.0	171.0	168.0	149.3	165.0	146.3	149.1	99.8	113.0	93.9	88.2
12	146.0	143.0	140.0	140.0	138.0	131.3	135.0	133.0	131.0	88.3	98.9	83.8	78.9
14	105.0	109.7	104.6	112.1	107.8	115.2	111.6	112.0	110.0	78.8	88.3	75.3	71.1
16	78.4	83.0	78.2	85.2	81.3	88.2	84.8	87.4	83.7	71.0	78.6	68.3	64.4
18		65.0	60.4	67.2	63.4	70.0	66.8	69.3	65.7	64.5	66.9	62.1	58.9
20		52.0	47.6	54.2	50.5	56.9	53.8	56.3	52.8	57.0	54.0	55.8	53.5
22				44.4	40.8	47.1	44.1	46.4	43.1	47.2	44.2	46.0	46.2
24				36.7	33.2	39.4	36.4	38.8	35.5	39.5	36.6	38.4	38.6

QAY800 全地面起重机操作手册
起重性能表

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
26				30.5	27.0	33.2	30.3	32.6	29.4	33.3	30.5	32.2	32.4
28						28.1	25.3	27.5	24.4	28.3	25.5	27.2	27.4
30						23.8	20.9	23.2	20.0	24.0	21.1	22.9	23.1
32								19.5	16.3	20.2	17.4	19.2	19.4
34								16.3	13.1	17.0	14.2	16.0	16.2
36								13.5	10.3	14.3	11.5	13.2	13.5
38										11.9	9.1	10.8	11.1
40										9.7	7.0	8.7	9.0
42										7.8	5.1	6.9	7.1
44												5.2	5.4
46												3.7	3.9
48													2.5
50													
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

3、四节主臂 支腿全伸 12.8m×13m，平衡重 50t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	298.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	281.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	255.0	185.2	221.7	214.8	233.2	173.6	219.7	164.7	177.5	118.6	137.2		
8	233.0	175.6	208.9	206.9	220.0	163.7	208.3	158.3	167.2	112.5	128.8	106.3	
9	214.0	167.8	198.0	200.6	202.0	158.1	198.0	152.5	157.5	105.4	120.6	100.1	93.3
10	188.0	161.5	188.4	189.0	187.0	149.3	184.0	146.3	149.1	99.8	113.0	93.9	88.2
12	151.0	150.2	158.0	157.0	155.0	131.3	152.0	135.8	134.3	88.3	98.9	83.8	78.9
14	125.0	136.0	133.0	133.0	130.0	118.7	129.0	127.0	122.3	78.8	88.3	75.3	71.1
16	106.0	115.1	110.3	114.0	112.0	106.6	111.0	109.0	107.0	71.0	78.6	68.3	64.4
18		91.8	87.2	94.0	90.2	96.8	93.6	95.0	92.5	64.5	71.0	62.1	58.9
20		75.0	70.6	77.2	73.5	80.0	76.9	79.3	75.8	59.9	65.5	56.0	53.5
22				64.6	61.0	67.3	64.3	66.6	63.3	55.4	60.1	51.3	48.8
24				54.7	51.1	57.3	54.4	56.7	53.4	52.4	54.5	47.4	45.3
26				46.7	43.2	49.4	46.5	48.8	45.6	49.1	46.7	43.5	41.8
28						42.8	40.0	42.3	39.1	43.0	40.2	40.4	38.6
30						37.4	34.5	36.8	33.7	37.5	34.8	36.5	35.5
32								32.2	29.1	32.9	30.2	31.9	32.1
34								28.2	25.1	29.0	26.2	27.9	28.1

QAY800 全地面起重机操作手册
起重性能表

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
36								24.8	21.7	25.5	22.8	24.5	24.7
38										22.5	19.8	21.5	21.7
40										19.8	17.1	18.9	19.1
42										17.4	14.7	16.5	16.7
44												14.4	14.6
46												12.4	12.7
48													10.9
50													9.3
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

4、四节主臂 支腿全伸 12.8m×13m，平衡重 80t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	298.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	290.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	263.0	185.2	221.7	214.8	233.2	173.6	219.7	164.7	177.5	118.6	137.2		
8	241.0	175.6	208.9	206.9	221.1	163.7	208.3	158.3	167.2	112.5	128.8	106.3	
9	214.0	167.8	198.0	200.6	209.0	158.1	198.2	152.5	157.5	105.4	120.6	100.1	93.3
10	188.0	161.5	188.4	192.6	194.0	149.3	186.2	146.3	149.1	99.8	113.0	93.9	88.2
12	151.0	150.2	172.0	170.0	168.0	131.3	162.4	135.8	134.3	88.3	98.9	83.8	78.9
14	125.0	139.8	148.0	148.0	145.0	118.7	143.0	127.0	122.3	78.8	88.3	75.3	71.1
16	106.0	127.0	127.0	127.0	125.0	106.6	124.0	119.1	111.0	71.0	78.6	68.3	64.4
18		113.0	110.0	111.0	109.0	98.1	108.0	107.0	100.3	64.5	71.0	62.1	58.9
20		98.0	93.6	98.0	96.0	90.6	96.0	95.0	91.5	59.9	65.5	56.0	53.5
22				84.7	81.2	84.7	84.4	85.0	82.0	55.4	60.1	51.3	48.8
24				72.6	69.1	75.3	72.4	74.7	71.4	52.4	56.2	47.4	45.3
26				62.9	59.4	65.6	62.7	65.0	61.7	49.1	51.7	43.5	41.8
28						57.6	54.7	57.0	53.8	46.0	48.5	40.4	38.6
30						50.9	48.1	50.3	47.2	43.6	45.4	36.9	35.5
32								44.7	41.6	42.0	42.7	34.2	33.0
34								39.8	36.7	40.4	37.8	32.3	30.8
36								35.6	32.5	36.3	33.6	29.9	28.7
38										32.6	30.0	28.0	26.9
40										29.4	26.7	26.4	25.2
42										26.4	23.8	24.9	23.7
44												22.9	22.2

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
46												20.6	20.8
48													18.7
50													16.7
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

5、四节主臂 支腿全伸 12.8m×13m，平衡重 110t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	*800												
3.5	*660	216.3	270.8										
4	*570	213.1	263.5										
4.5	*480	208.6	256.7	230.4	262.5								
5	*390	205.0	250.3	228.3	257.0	198.0	242.9						
6	298.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	274.0	185.2	221.7	214.8	233.2	173.6	219.7	164.7	177.5	118.6	137.2		
8	250.0	175.6	208.9	206.9	221.1	163.7	208.3	158.3	167.2	112.5	128.8	106.3	
9	214.0	167.8	198.0	200.6	210.6	158.1	198.2	152.5	157.5	105.4	120.6	100.1	93.3
10	188.0	161.5	188.4	192.6	198.9	149.3	186.2	146.3	149.1	99.8	113.0	93.9	88.2
12	151.0	150.2	172.0	173.3	174.0	131.3	162.4	135.8	134.3	88.3	98.9	83.8	78.9
14	125.0	139.8	156.0	155.0	153.0	118.7	144.6	127.0	122.3	78.8	88.3	75.3	71.1
16	106.0	127.0	139.0	139.0	137.0	106.6	128.2	119.1	111.0	71.0	78.6	68.3	64.4
18		116.2	123.0	123.0	121.0	98.1	115.5	109.5	100.3	64.5	71.0	62.1	58.9
20		108.4	108.0	109.0	107.0	90.6	103.5	101.7	91.5	59.9	65.5	56.0	53.5
22				98.0	95.0	84.7	94.1	92.9	83.2	55.4	60.1	51.3	48.8
24				81.8	80.0	78.6	85.0	82.9	75.9	52.4	56.2	47.4	45.3
26				74.5	71.4	72.8	77.0	75.2	70.1	49.1	51.7	43.5	41.8
28						68.1	69.4	68.2	64.7	46.0	48.5	40.4	38.6
30						56.5	54.6	63.5	60.4	43.6	45.4	36.9	35.5
32								57.2	54.0	42.0	43.0	34.2	33.0
34								51.4	48.3	40.4	40.7	32.3	30.8
36								46.4	43.3	38.4	38.3	29.9	28.7
38										37.4	36.4	28.0	26.9
40										36.8	34.8	26.4	25.2
42										32.2	30.4	24.9	23.7
44												23.3	22.2
46												22.1	21.0
48													20.0
50													18.5
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

四、 四节主臂工况起重性能表—半伸支腿

1、 四节主臂 支腿半伸 10.68m×9.8m，平衡重 0t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	280.0	208.6	256.7	230.4	261.0								
5	262.0	205.0	250.3	228.3	245.0	198.0	238.0						
6	231.0	195.2	221.0	216.0	214.0	185.7	207.0	171.1	189.1				
7	195.0	185.2	187.0	184.0	182.0	173.6	177.0	164.7	170.0	118.6	137.2		
8	168.0	164.0	161.0	159.0	157.0	156.0	154.0	150.0	148.0	112.5	128.8	106.3	
9	138.2	143.7	137.4	140.0	138.0	137.0	135.0	133.0	131.0	105.4	120.6	100.1	93.3
10	105.4	110.4	104.7	113.0	108.2	116.5	112.4	115.5	111.0	99.8	112.5	93.9	88.2
12	67.4	71.9	66.9	74.2	70.0	77.3	73.7	76.5	72.5	77.3	73.8	76.0	76.2
14	46.0	50.3	45.6	52.4	48.5	55.3	52.0	54.6	50.9	55.4	52.1	54.1	54.3
16	32.1	36.4	32.0	38.5	34.8	41.3	38.1	40.6	37.1	41.3	38.2	40.1	40.3
18		26.8	22.5	28.8	25.2	31.5	28.5	30.8	27.4	31.5	28.6	30.4	30.6
20		19.6	15.4	21.7	18.2	24.3	21.4	23.6	20.4	24.3	21.5	23.2	23.4
22				16.2	12.8	18.8	15.9	18.2	14.9	18.8	16.0	17.8	18.0
24				11.8	8.5	14.4	11.6	13.8	10.6	14.5	11.7	13.4	13.6
26				8.2	4.9	10.9	8.1	10.3	7.2	11.0	8.2	9.9	10.1
28						7.9	5.1	7.3	4.3	8.0	5.3	7.0	7.2
30						5.4	2.7	4.9		5.6	2.9	4.6	4.8
32								2.8		3.5		2.5	2.7
34													
36													
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	20	14	15	9	11	8	7

2、 四节主臂 支腿半伸 10.68m×9.8m，平衡重 20t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	290.0	208.6	256.7	230.4	262.5								
5	272.0	205.0	250.3	228.3	254.0	198.0	242.9						
6	242.0	195.2	233.0	222.3	227.0	185.7	221.0	171.1	189.1				
7	216.0	185.2	207.0	204.0	201.0	173.6	196.0	164.7	177.5	118.6	137.2		

QAY800 全地面起重机操作手册
起重性能表

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
8	187.0	175.6	179.0	177.0	174.0	163.7	171.0	158.3	164.0	112.5	128.8	106.3	
9	163.0	160.0	157.0	156.0	153.0	152.0	150.0	147.0	145.0	105.4	120.6	100.1	93.3
10	145.0	142.0	139.0	139.0	136.0	136.0	134.0	131.0	129.0	99.8	113.0	93.9	88.2
12	96.1	100.6	95.5	102.8	98.6	106.0	102.4	105.1	101.2	88.3	98.9	83.8	78.9
14	68.4	72.7	68.0	74.8	70.9	77.7	74.4	76.9	73.3	77.7	74.5	75.3	71.1
16	50.5	54.8	50.3	56.8	53.1	59.6	56.5	58.9	55.4	59.6	56.6	58.4	58.7
18		42.3	38.0	44.3	40.8	47.0	44.0	46.4	43.0	47.1	44.1	45.9	46.1
20		33.1	28.9	35.2	31.7	37.8	34.8	37.1	33.8	37.8	34.9	36.7	36.9
22				28.1	24.7	30.7	27.8	30.1	26.8	30.7	27.9	29.7	29.9
24				22.5	19.1	25.1	22.2	24.5	21.3	25.1	22.4	24.1	24.3
26				17.9	14.5	20.5	17.7	19.9	16.8	20.6	17.9	19.6	19.8
28						16.7	14.0	16.2	13.1	16.8	14.1	15.8	16.0
30						13.5	10.8	13.0	9.9	13.7	11.0	12.7	12.9
32								10.3	7.3	11.0	8.3	10.0	10.2
34								7.9	4.9	8.6	6.0	7.7	7.9
36								5.9	2.9	6.6	4.0	5.6	5.8
38										4.8	2.2	3.8	4.0
40										3.2		2.3	2.5
42													
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

3、四节主臂 支腿半伸 10.68m×9.8m，平衡重 50t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	287.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	255.0	195.2	235.6	222.3	239.0	185.7	231.2	171.1	189.1				
7	229.0	185.2	221.0	214.8	215.0	173.6	210.0	164.7	177.5	118.6	137.2		
8	207.0	175.6	200.0	197.0	195.0	163.7	191.0	158.3	167.2	112.5	128.8	106.3	
9	188.0	167.8	181.0	179.0	177.0	158.1	173.0	152.5	157.5	105.4	120.6	100.1	93.3
10	167.0	161.5	161.0	160.0	157.0	149.3	155.0	146.3	149.0	99.8	113.0	93.9	88.2
12	136.0	134.0	131.0	131.0	128.0	128.0	126.0	124.0	122.0	88.3	98.9	83.8	78.9
14	101.9	106.2	101.5	108.3	104.4	108.0	106.0	105.0	103.0	78.8	88.3	75.3	71.1
16	78.0	82.3	77.8	84.3	80.6	87.1	84.0	86.4	82.9	71.0	78.6	68.3	64.4
18		65.6	61.3	67.7	64.1	70.3	67.3	69.7	66.3	64.5	67.4	62.1	58.9
20		53.3	49.1	55.4	51.9	58.0	55.1	57.3	54.1	58.0	55.2	56.0	53.5
22				45.9	42.5	48.5	45.7	47.9	44.7	48.6	45.8	47.5	47.7

QAY800 全地面起重机操作手册
起重性能表

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
24				38.5	35.1	41.0	38.2	40.4	37.3	41.1	38.4	40.1	40.3
26				32.4	29.0	35.0	32.2	34.4	31.3	35.1	32.3	34.0	34.2
28						29.9	27.2	29.4	26.3	30.1	27.3	29.0	29.2
30						25.7	22.9	25.2	22.1	25.8	23.2	24.8	25.0
32								21.5	18.5	22.2	19.6	21.2	21.4
34								18.4	15.4	19.1	16.5	18.1	18.3
36								15.7	12.7	16.4	13.8	15.4	15.6
38										14.0	11.4	13.1	13.3
40										11.9	9.3	11.0	11.2
42										10.0	7.4	9.1	9.3
44												7.4	7.6
46												5.8	6.1
48													4.7
50													3.4
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

4、四节主臂 支腿半伸 10.68m×9.8m，平衡重 80t

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
3	298.0												
3.5	298.0	216.3	270.8										
4	298.0	213.1	263.5										
4.5	298.0	208.6	256.7	230.4	262.5								
5	298.0	205.0	250.3	228.3	257.0	198.0	242.9						
6	268.0	195.2	235.6	222.3	245.3	185.7	231.2	171.1	189.1				
7	241.0	185.2	221.7	214.8	226.0	173.6	219.7	164.7	177.5	118.6	137.2		
8	218.0	175.6	208.9	206.9	206.0	163.7	201.0	158.3	167.2	112.5	128.8	106.3	
9	199.0	167.8	193.0	190.0	188.0	158.1	184.0	152.5	157.5	105.4	120.6	100.1	93.3
10	183.0	161.5	177.0	175.0	173.0	149.3	170.0	146.3	149.1	99.8	113.0	93.9	88.2
12	151.0	150.2	149.0	148.0	146.0	131.3	144.0	135.8	134.3	88.3	98.9	83.8	78.9
14	125.0	127.0	125.0	125.0	122.0	118.7	121.0	119.0	117.0	78.8	88.3	75.3	71.1
16	105.5	109.0	105.3	107.0	105.0	106.0	104.0	103.0	100.0	71.0	78.6	68.3	64.4
18		88.9	84.6	91.0	87.4	92.0	90.0	89.0	87.0	64.5	71.0	62.1	58.9
20		73.5	69.3	75.6	72.1	78.2	75.3	77.6	74.3	59.9	65.5	56.0	53.5
22				63.8	60.4	66.4	63.5	65.8	62.6	55.4	60.1	51.3	48.8
24				54.4	51.1	57.0	54.2	56.4	53.3	52.4	54.3	47.4	45.3
26				46.8	43.5	49.4	46.6	48.9	45.7	49.1	46.8	43.5	41.8
28						43.1	40.4	42.6	39.5	43.3	40.6	40.4	38.6
30						37.8	35.1	37.3	34.3	38.0	35.3	36.9	35.5
32								32.8	29.8	33.5	30.8	32.5	32.7

R/L	18.4	23.6	23.6	28.7	28.7	33.9	33.9	39.0	39.0	44.2	44.2	49.3	52.0
34								28.9	25.9	29.6	27.0	28.6	28.8
36								25.5	22.5	26.2	23.6	25.3	25.5
38										23.3	20.6	22.3	22.5
40										20.6	18.0	19.7	19.9
42										18.2	15.6	17.3	17.5
44												15.2	15.4
46												13.3	13.5
48													11.7
50													10.1
主臂组合	000	001	100	011	110	012	111	112	211	122	221	222	333
倍率	26	18	24	19	23	16	21	14	15	9	11	8	7

五、 变幅副臂起重性能表—主臂仰角 83°

1、 21 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	115.6			
16	109.2	106.9		
18	104.2	102.1	95.9	80.2
20	100.8	98.1	88.0	73.6
22	91.0	91.0	81.0	67.9
24	81.7	80.5	75.9	63.2
26			70.8	59.4
主臂组合	210	220	221	222
倍率	9	8	7	6
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	115.6			
16	109.2	106.9		
18	104.2	102.1	95.9	80.2
20	100.8	98.1	88.0	73.6
22	91.0	92.4	81.0	67.9
24	82.4	82.8	75.9	63.2
26			73.3	59.4
主臂组合	210	220	221	222

支腿全伸_平衡重 110_主臂仰角 83_副臂长度 21				
------------------------------	--	--	--	--

R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	115.6			
16	109.2	106.9		
18	104.2	102.1	95.9	80.2
20	100.8	98.1	88.0	73.6
22	91.0	92.4	81.0	67.9
24	82.4	82.8	75.9	63.2
26			73.3	59.4
主臂组合	210	220	221	222
倍率	9	8	7	6
倍率	9	8	7	6

--	--	--	--	--

2、28 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	94.3			
18	89.7	87.0		
20	85.7	82.6	79.3	70.7
22	82.4	79.9	76.2	66.5
24	78.7	77.2	72.4	61.6
26	73.0	71.8	68.2	57.0
28	65.8	64.8	63.9	53.1
30	59.8	58.9	58.1	49.7
32	54.5	53.7	53.0	47.7
34				45.9
主臂组合	210	220	221	222
倍率	7	7	6	6
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	94.3			
18	89.7	87.0		
20	85.7	82.6	79.3	70.7
22	82.4	79.9	76.2	66.5
24	78.7	77.2	72.4	61.6
26	74.4	74.6	68.2	57.0
28	67.1	68.0	64.0	53.1
30	60.8	61.6	60.5	49.7
32	55.5	56.2	56.9	47.7
34				45.9

主臂组合	210	220	221	222
倍率	7	7	6	6
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	94.3			
18	89.7	87.0		
20	85.7	82.6	79.3	70.7
22	82.4	79.9	76.2	66.5
24	78.7	77.2	72.4	61.6
26	74.4	74.6	68.2	57.0
28	67.1	68.0	64.0	53.1
30	60.8	61.6	60.5	49.7
32	55.5	56.2	56.9	47.7
34				45.9
主臂组合	210	220	221	222
倍率	7	7	6	6

3、35 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	82.1			
20	78.6	74.3		
22	75.4	71.0	68.8	61.7
24	72.9	68.6	66.5	59.7
26	70.4	66.2	64.2	57.8
28	65.5	63.9	62.4	54.8
30	59.6	58.6	57.7	51.0
32	54.6	53.6	52.9	48.1
34	50.2	49.4	48.6	45.3
36	46.4	45.6	45.0	42.6
38	43.0	42.3	41.7	40.7
40			38.7	38.1
主臂组合	210	220	221	222
倍率	6	6	5	5
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	82.1			
20	78.6	74.3		
22	75.4	71.0	68.8	61.7
24	72.9	68.6	66.5	59.7
26	70.4	66.2	64.2	57.8

28	67.9	63.9	62.4	54.8
30	64.7	61.5	60.6	51.0
32	59.1	58.3	57.7	48.1
34	54.5	53.7	54.5	45.3
36	50.1	49.3	51.0	42.6
38	46.5	45.8	47.4	40.7
40			43.9	39.3
主臂组合	210	220	221	222
倍率	6	6	5	5
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	82.1			
20	78.6	74.3		
22	75.4	71.0	68.8	61.7
24	72.9	68.6	66.5	59.7
26	70.4	66.2	64.2	57.8
28	67.9	63.9	62.4	54.8
30	64.7	61.5	60.6	51.0
32	59.1	58.3	57.7	48.1
34	54.5	53.7	54.5	45.3
36	50.1	49.3	51.0	42.6
38	46.5	45.8	47.4	40.7
40			43.9	39.3
主臂组合	210	220	221	222
倍率	6	6	5	5

4、42 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	65.0			
22	62.1	58.0		
24	59.9	55.9	53.4	48.3
26	57.7	53.8	52.0	46.6
28	55.5	51.7	50.5	45.5
30	53.4	50.4	49.1	44.1
32	51.4	48.5	47.6	42.6
34	49.7	46.8	46.0	40.8
36	46.0	45.2	44.5	38.3
38	42.7	41.9	41.3	35.7
40	39.8	39.0	38.4	34.0
42	36.7	36.0	35.9	32.4

QAY800 全地面起重机操作手册
起重性能表

44	34.2	33.7	33.6	30.8
46	31.2	30.7	31.5	29.9
主臂组合	210	220	221	222
倍率	5	5	4	4
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	65.0			
22	62.1	58.0		
24	59.9	55.9	53.4	48.3
26	57.7	53.8	52.0	46.6
28	55.5	51.7	50.5	45.5
30	53.4	50.4	49.1	44.1
32	51.4	48.5	47.6	42.6
34	50.1	46.8	46.0	40.8
36	46.6	45.5	44.9	38.3
38	43.2	42.5	43.4	35.7
40	39.9	39.2	40.7	34.0
42	36.7	36.0	38.2	32.4
44	34.2	33.7	35.0	30.8
46	31.2	30.7	32.4	29.9
主臂组合	210	220	221	222
倍率	5	5	4	4
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	65.0			
22	62.1	58.0		
24	59.9	55.9	53.4	48.3
26	57.7	53.8	52.0	46.6
28	55.5	51.7	50.5	45.5
30	53.4	50.4	49.1	44.1
32	51.4	48.5	47.6	42.6
34	50.1	46.8	46.0	40.8
36	46.6	45.5	44.9	38.3
38	43.2	42.5	43.4	35.7
40	39.9	39.2	40.7	34.0
42	36.7	36.0	38.2	32.4
44	34.2	33.7	35.0	30.8
46	31.2	30.7	32.4	29.9
主臂组合	210	220	221	222
倍率	5	5	4	4

5、 49 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	51.4			
24	46.3	50.0		
26	41.5	43.7	44.9	40.4
28	37.8	39.6	41.9	39.7
30	34.4	36.5	38.2	38.7
32	31.0	32.5	34.4	36.3
34	28.4	29.6	31.0	32.1
36	26.1	27.5	28.6	29.9
38	24.5	25.2	26.6	27.5
40	23.0	24.0	24.8	25.5
42	21.2	22.3	23.2	23.8
44	19.7	20.5	21.7	22.3
46	18.5	19.1	20.1	20.7
48	17.2	17.9	18.6	19.4
50	15.8	16.6	17.5	18.0
52	14.3	15.3	16.0	16.8
54			14.5	15.3
主臂组合	210	220	221	222
倍率	4	4	4	3
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	51.4			
24	46.3	50.0		
26	41.5	43.7	44.9	40.4
28	37.8	39.6	41.9	39.7
30	34.4	36.5	38.2	38.7
32	31.0	32.5	34.4	36.3
34	28.4	29.6	31.0	32.1
36	26.1	27.5	28.6	29.9
38	24.5	25.2	26.6	27.5
40	23.0	24.0	24.8	25.5
42	21.2	22.3	23.2	23.8
44	19.7	20.5	21.7	22.3
46	18.5	19.1	20.1	20.7
48	17.2	17.9	18.6	19.4
50	15.8	16.6	17.5	18.0
52	14.3	15.3	16.0	16.8
54			14.5	15.3

主臂组合	210	220	221	222
倍率	4	4	4	3
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	51.4			
24	46.3	50.0		
26	41.5	43.7	44.9	40.4
28	37.8	39.6	41.9	39.7
30	34.4	36.5	38.2	38.7
32	31.0	32.5	34.4	36.3
34	28.4	29.6	31.0	32.1
36	26.1	27.5	28.6	29.9
38	24.5	25.2	26.6	27.5
40	23.0	24.0	24.8	25.5
42	21.2	22.3	23.2	23.8
44	19.7	20.5	21.7	22.3
46	18.5	19.1	20.1	20.7
48	17.2	17.9	18.6	19.4
50	15.8	16.6	17.5	18.0
52	14.3	15.3	16.0	16.8
54			14.5	15.3
主臂组合	210	220	221	222
倍率	4	4	4	3

6、56 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	44.9			
26	43.3	41.8		
28	40.2	40.9	37.0	28.9
30	37.4	38.9	36.5	28.4
32	33.6	33.2	32.7	27.9
34	30.6	31.8	30.2	27.4
36	28.2	29.3	29.5	26.9
38	26.1	27.2	28.1	26.3
40	24.0	24.8	26.0	25.9
42	22.3	23.2	24.3	25.1
44	20.5	21.7	22.4	23.4
46	19.2	20.1	21.0	21.6
48	18.2	18.7	19.6	20.4
50	17.1	17.7	18.5	18.8

QAY800 全地面起重机操作手册
起重性能表

52	16.3	16.7	17.4	17.5
54	15.3	16.0	16.4	16.7
56	13.9	14.8	15.7	16.1
58	12.5	13.4	14.2	14.8
60		12.1	12.7	13.3
主臂组合	210	220	221	222
倍率	4	3	3	2
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	44.9			
26	43.3	41.8		
28	40.2	40.9	37.0	28.9
30	37.4	38.9	36.5	28.4
32	33.6	33.2	32.7	27.9
34	30.6	31.8	30.2	27.4
36	28.2	29.3	29.5	26.9
38	26.1	27.2	28.1	26.3
40	24.0	24.8	26.0	25.9
42	22.3	23.2	24.3	25.1
44	20.5	21.7	22.4	23.4
46	19.2	20.1	21.0	21.6
48	18.2	18.7	19.6	20.4
50	17.1	17.7	18.5	18.8
52	16.3	16.7	17.4	17.5
54	15.3	16.0	16.4	16.7
56	13.9	14.8	15.7	16.1
58	12.5	13.4	14.2	14.8
60		12.1	12.7	13.3
主臂组合	210	220	221	222
倍率	4	3	3	2
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	44.9			
26	43.3	41.8		
28	40.2	40.9	37.0	28.9
30	37.4	38.9	36.5	28.4
32	33.6	33.2	32.7	27.9
34	30.6	31.8	30.2	27.4
36	28.2	29.3	29.5	26.9
38	26.1	27.2	28.1	26.3
40	24.0	24.8	26.0	25.9
42	22.3	23.2	24.3	25.1
44	20.5	21.7	22.4	23.4

46	19.2	20.1	21.0	21.6
48	18.2	18.7	19.6	20.4
50	17.1	17.7	18.5	18.8
52	16.3	16.7	17.4	17.5
54	15.3	16.0	16.4	16.7
56	13.9	14.8	15.7	16.1
58	12.5	13.4	14.2	14.8
60		12.1	12.7	13.3
主臂组合	210	220	221	222
倍率	4	3	3	2

7、63 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	28.6			
28	26.3	27.2		
30	24.7	25.5	26.1	24.2
32	22.6	23.5	24.3	23.7
34	20.7	21.4	22.2	22.8
36	19.1	19.9	20.5	21.2
38	17.6	18.3	18.9	19.7
40	16.2	16.8	17.7	18.1
42	15.2	15.8	16.3	16.8
44	14.2	14.7	15.1	15.7
46	13.2	13.7	14.1	14.7
48	12.3	12.7	13.3	13.6
50	11.7	12.0	12.3	12.7
52	11.4	11.6	11.9	12.0
54	10.7	11.1	11.3	11.6
56	10.0	10.4	10.8	11.0
58	9.4	9.8	10.1	10.4
60	8.9	9.1	9.5	9.7
62	8.4	8.6	9.0	9.1
64	7.9	8.1	8.3	8.6
66	7.4	7.6	7.9	8.1
68				7.6
主臂组合	210	220	221	222
倍率	2	2	2	2
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	28.6			

QAY800 全地面起重机操作手册
起重性能表

28	26.3	27.2		
30	24.7	25.5	26.1	24.2
32	22.6	23.5	24.3	23.7
34	20.7	21.4	22.2	22.8
36	19.1	19.9	20.5	21.2
38	17.6	18.3	18.9	19.7
40	16.2	16.8	17.7	18.1
42	15.2	15.8	16.3	16.8
44	14.2	14.7	15.1	15.7
46	13.2	13.7	14.1	14.7
48	12.3	12.7	13.3	13.6
50	11.7	12.0	12.3	12.7
52	11.4	11.6	11.9	12.0
54	10.7	11.1	11.3	11.6
56	10.0	10.4	10.8	11.0
58	9.4	9.8	10.1	10.4
60	8.9	9.1	9.5	9.7
62	8.4	8.6	9.0	9.1
64	7.9	8.1	8.3	8.6
66	7.4	7.6	7.9	8.1
68				7.6
主臂组合	210	220	221	222
倍率	2	2	2	2
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	28.6			
28	26.3	27.2		
30	24.7	25.5	26.1	24.2
32	22.6	23.5	24.3	23.7
34	20.7	21.4	22.2	22.8
36	19.1	19.9	20.5	21.2
38	17.6	18.3	18.9	19.7
40	16.2	16.8	17.7	18.1
42	15.2	15.8	16.3	16.8
44	14.2	14.7	15.1	15.7
46	13.2	13.7	14.1	14.7
48	12.3	12.7	13.3	13.6
50	11.7	12.0	12.3	12.7
52	11.4	11.6	11.9	12.0
54	10.7	11.1	11.3	11.6
56	10.0	10.4	10.8	11.0
58	9.4	9.8	10.1	10.4
60	8.9	9.1	9.5	9.7

62	8.4	8.6	9.0	9.1
64	7.9	8.1	8.3	8.6
66			7.9	8.1
主臂组合	210	220	221	222
倍率	2	2	2	2

六、 变幅副臂起重性能表—主臂仰角 75°

1、 21 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	78.3			
24	69.9	56.4		
26	62.4	52.7	44.0	
28	56.1	49.4	41.3	36.0
30	50.7	46.5	38.9	34.0
32			36.9	32.2
34				30.6
主臂组合	210	220	210	222
倍率	6	4	4	3
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	78.3			
24	73.2	56.4		
26	68.7	52.7	44.0	
28	64.7	49.4	41.3	36.0
30	61.1	46.5	38.9	34.0
32			36.9	32.2
34				30.6
主臂组合	210	220	210	222
倍率	6	4	4	3
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	78.3			
24	73.2	56.4		
26	68.7	52.7	44.0	
28	64.7	49.4	41.3	36.0
30	61.1	46.5	38.9	34.0
32			36.9	32.2
34				30.6

主臂组合	210	220	210	222
倍率	6	4	4	3

2、 28 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	69.1			
26	61.8			
28	55.7	47.0	38.9	
30	50.6	44.3	36.7	32.0
32	46.3	41.9	34.7	30.3
34	42.5	39.7	33.1	28.9
36	39.1	37.4	31.6	27.7
38		34.5	30.3	26.6
40				25.6
主臂组合	210	220	210	222
倍率	5	4	3	3
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	69.6			
26	65.6			
28	62.0	47.0	38.9	
30	58.8	44.3	36.7	32.0
32	55.9	41.9	34.7	30.3
34	53.2	39.7	33.1	28.9
36	49.9	37.9	31.6	27.7
38		36.3	30.3	26.6
40				25.6
主臂组合	210	220	210	222
倍率	5	4	3	3
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	69.6			
26	65.6			
28	62.0	47.0	38.9	
30	58.8	44.3	36.7	32.0
32	55.9	41.9	34.7	30.3
34	53.2	39.7	33.1	28.9
36	50.8	37.9	31.6	27.7
38		36.3	30.3	26.6
40				25.6

主臂组合	210	220	210	222
倍率	5	4	3	3

3、 35 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	55.0			
30	50.0	42.2		
32	45.7	39.9	32.7	
34	42.0	37.9	31.2	27.2
36	38.8	36.1	29.8	26.0
38	36.0	34.3	28.6	25.0
40	33.5	31.8	27.6	24.1
42	31.2	29.7	26.7	23.2
44		27.7	25.8	22.5
46			24.7	21.8
主臂组合	210	220	210	222
倍率	4	3	3	2
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	58.6			
30	55.8	42.2		
32	53.2	39.9	32.7	
34	50.8	37.9	31.2	27.2
36	48.6	36.1	29.8	26.0
38	46.2	34.5	28.6	25.0
40	43.0	33.1	27.6	24.1
42	40.2	31.9	26.7	23.2
44		30.9	25.8	22.5
46			25.1	21.8
主臂组合	210	220	210	222
倍率	5	3	3	2
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	58.6			
30	55.8	42.2		
32	53.2	39.9	32.7	
34	50.8	37.9	31.2	27.2
36	48.6	36.1	29.8	26.0
38	46.6	34.5	28.6	25.0
40	44.8	33.1	27.6	24.1

42	43.1	31.9	26.7	23.2
44		30.9	25.8	22.5
46			25.1	21.8
主臂组合	210	220	210	222
倍率	5	3	3	2

4、 42 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	49.2			
32	45.0			
34	41.3	36.1	29.4	
36	38.1	34.4	28.1	
38	35.4	32.9	27.0	23.4
40	32.9	31.2	26.0	22.5
42	30.7	29.1	25.0	21.6
44	28.7	27.2	24.2	20.9
46	26.9	25.5	23.4	20.3
48	25.2	23.9	22.7	19.7
50	23.6	22.4	21.3	19.1
52		21.0	20.0	18.6
54				17.8
主臂组合	210	220	210	222
倍率	4	3	2	2
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	52.0			
32	48.6			
34	45.7	36.1	29.4	
36	43.0	34.4	28.1	
38	40.5	32.9	27.0	23.4
40	38.2	31.6	26.0	22.5
42	36.1	30.4	25.0	21.6
44	34.1	29.4	24.2	20.9
46	32.2	28.4	23.4	20.3
48	30.4	27.5	22.8	19.7
50	28.8	26.7	22.1	19.1
52		26.0	21.5	18.6
54				18.1
主臂组合	210	220	210	222
倍率	4	3	2	2

支腿全伸_平衡重 110_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	52.0			
32	48.6			
34	45.7	36.1	29.4	
36	43.0	34.4	28.1	
38	40.5	32.9	27.0	23.4
40	38.2	31.6	26.0	22.5
42	36.1	30.4	25.0	21.6
44	34.1	29.4	24.2	20.9
46	32.2	28.4	23.4	20.3
48	30.4	27.5	22.8	19.7
50	28.8	26.7	22.1	19.1
52		26.0	21.5	18.6
54				18.1
主臂组合	210	220	210	222
倍率	4	3	2	2

5、 49 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	40.9			
36	37.7	32.9		
38	34.9	31.4	25.2	
40	32.5	30.1	24.2	
42	30.3	28.7	23.3	20.0
44	28.4	26.8	22.5	19.3
46	26.6	25.1	21.7	18.7
48	25.0	23.6	21.0	18.0
50	23.5	22.2	20.3	17.4
52	22.2	20.9	19.6	16.8
54	20.9	19.7	18.7	16.2
56	19.7	18.6	17.6	15.6
58		17.5	16.6	15.1
60			15.6	14.6
主臂组合	210	220	210	222
倍率	3	3	2	2
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	41.7			
36	37.8	32.9		

QAY800 全地面起重机操作手册
起重性能表

38	34.9	31.4	25.2	
40	32.8	30.1	24.2	
42	30.5	28.9	23.3	20.0
44	29.2	27.8	22.5	19.3
46	27.6	26.7	21.7	18.7
48	26.1	25.8	21.0	18.0
50	24.5	24.8	20.3	17.4
52	23.1	24.0	19.6	16.8
54	21.7	22.8	18.9	16.2
56	20.1	21.6	18.3	15.6
58		19.9	17.7	15.1
60			17.1	14.6
主臂组合	210	220	210	222
倍率	3	3	2	2
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	41.7			
36	37.8	32.9		
38	34.9	31.4	25.2	
40	32.8	30.1	24.2	
42	30.5	28.9	23.3	20.0
44	29.2	27.8	22.5	19.3
46	27.6	26.7	21.7	18.7
48	26.1	25.8	21.0	18.0
50	24.5	24.8	20.3	17.4
52	23.1	24.0	19.6	16.8
54	21.7	22.8	18.9	16.2
56	20.1	21.6	18.3	15.6
58		19.9	17.7	15.1
60			17.1	14.6
主臂组合	210	220	210	222
倍率	3	3	2	2

6、56 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	36.9			
38	34.2			
40	31.7	28.3	22.3	
42	29.6	27.0	21.3	
44	27.6	25.8	20.4	17.4

QAY800 全地面起重机操作手册
起重性能表

46	25.9	24.4	19.5	16.6
48	24.3	22.9	18.7	15.9
50	22.9	21.5	18.0	15.2
52	21.5	20.2	17.3	14.7
54	20.3	19.0	16.8	14.2
56	19.2	18.0	16.2	13.7
58	18.1	17.0	15.8	13.3
60	17.1	16.0	15.1	12.9
62	16.2	15.1	14.2	12.6
64	15.3	14.3	13.4	12.2
66			12.6	11.8
68				11.1
主臂组合	210	220	210	222
倍率	3	2	2	2
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	38.5			
38	37.4			
40	34.9	28.3	22.3	
42	32.4	27.0	21.3	
44	30.3	25.8	20.4	17.4
46	28.3	24.6	19.5	16.6
48	26.8	23.5	18.7	15.9
50	25.2	22.6	18.0	15.2
52	23.8	21.7	17.3	14.7
54	22.8	20.9	16.8	14.2
56	21.7	20.2	16.2	13.7
58	20.9	19.6	15.8	13.3
60	19.9	19.0	15.3	12.9
62	18.2	18.5	14.9	12.6
64	16.7	18.0	14.6	12.2
66			14.2	11.9
68				11.6
主臂组合	210	220	210	222
倍率	3	2	2	2
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	38.5			
38	37.4			
40	34.9	28.3	22.3	
42	32.4	27.0	21.3	
44	30.3	25.8	20.4	17.4
46	28.3	24.6	19.5	16.6

48	26.8	23.5	18.7	15.9
50	25.2	22.6	18.0	15.2
52	23.8	21.7	17.3	14.7
54	22.8	20.9	16.8	14.2
56	21.7	20.2	16.2	13.7
58	20.9	19.6	15.8	13.3
60	19.9	19.0	15.3	12.9
62	18.2	18.5	14.9	12.6
64	16.7	18.0	14.6	12.2
66			14.2	11.9
68				11.6
主臂组合	210	220	210	222
倍率	3	2	2	2

7、63 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	23.2			
42	21.7	22.9		
44	20.2	21.3	18.0	
46	19.1	20.0	17.3	
48	17.9	18.9	16.7	14.0
50	16.8	17.9	16.1	13.5
52	15.9	16.8	15.5	13.0
54	15.2	15.8	15.0	12.6
56	14.9	15.1	14.6	12.2
58	14.4	15.0	14.1	11.8
60	13.8	14.2	13.7	11.5
62	13.1	13.7	13.4	11.2
64	12.5	12.9	13.0	10.9
66	11.8	12.4	12.3	10.5
68	11.2	11.8	11.6	10.2
70	10.7	11.3	11.0	10.0
72		10.8	10.4	9.6
74			9.7	9.0
主臂组合	210	220	210	222
倍率	2	2	2	1
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	23.2			
42	21.7	22.9		

QAY800 全地面起重机操作手册
起重性能表

44	20.2	21.3	18.0	
46	19.1	20.0	17.3	
48	17.9	18.9	16.7	14.0
50	16.8	17.9	16.1	13.5
52	15.9	16.8	15.5	13.0
54	15.2	15.8	15.0	12.6
56	14.9	15.1	14.6	12.2
58	14.4	15.0	14.1	11.8
60	13.8	14.2	13.7	11.5
62	13.1	13.7	13.4	11.2
64	12.5	12.9	13.0	10.9
66	11.8	12.4	12.7	10.5
68	11.2	11.8	12.3	10.2
70	10.7	11.3	11.8	10.0
72		10.8	11.2	9.7
74			10.6	9.4
主臂组合	210	220	210	222
倍率	2	2	2	1
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	23.2			
42	21.7	22.9		
44	20.2	21.3	18.0	
46	19.1	20.0	17.3	
48	17.9	18.9	16.7	14.0
50	16.8	17.9	16.1	13.5
52	15.9	16.8	15.5	13.0
54	15.2	15.8	15.0	12.6
56	14.9	15.1	14.6	12.2
58	14.4	15.0	14.1	11.8
60	13.8	14.2	13.7	11.5
62	13.1	13.7	13.4	11.2
64	12.5	12.9	13.0	10.9
66	11.8	12.4	12.7	10.5
68	11.2	11.8	12.3	10.2
70	10.7	11.3	11.8	10.0
72		10.8	11.2	9.7
74			10.6	9.4
主臂组合	210	220	210	222
倍率	2	2	2	1

七、 变幅副臂起重性能表—主臂仰角 67°

1、 21 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	46.7			
30	42.4	38.2		
32	38.6	35.4		
34	35.3	32.5	26.2	
36		29.7	24.3	20.2
38			22.5	18.6
40				17.1
主臂组合	210	220	221	222
倍率	4	3	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	59.0			
30	55.0	38.2		
32	51.1	35.4		
34	46.8	32.9	26.2	
36		30.6	24.3	20.2
38			22.5	18.6
40				17.1
主臂组合	210	220	221	222
倍率	5	3	2	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	59.0			
30	55.0	38.2		
32	51.5	35.4		
34	48.3	32.9	26.2	
36		30.6	24.3	20.2
38			22.5	18.6
40				17.1
主臂组合	210	220	221	222
倍率	5	3	2	2

2、28 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	38.0			
34	34.9			
36	32.1	29.3		
38	29.7	27.1	24.8	
40	27.5	25.1	23.0	19.5
42		23.2	21.3	18.5
44			19.8	17.6
46				16.7
主臂组合	210	220	221	222
倍率	3	2	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	50.4			
34	46.4			
36	43.0	32.9		
38	39.9	31.1	24.8	
40	37.1	29.5	23.5	19.5
42		28.1	22.4	18.5
44			21.4	17.6
46				16.8
主臂组合	210	220	221	222
倍率	4	3	2	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	51.3			
34	48.3			
36	45.6	32.9		
38	43.3	31.1	24.8	
40	41.1	29.5	23.5	19.5
42		28.1	22.4	18.5
44			21.4	17.6
46				16.8
主臂组合	210	220	221	222
倍率	4	3	2	2

3、 35 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	31.4			
38	29.1			
40	27.0	24.4		
42	25.2	22.7	20.6	
44	23.5	21.2	19.2	16.1
46	21.9	19.8	17.9	15.3
48	20.4	18.4	16.7	14.7
50		17.2	15.6	14.0
52			14.5	13.0
54				12.0
主臂组合	210	220	221	222
倍率	3	2	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	42.3			
38	39.2			
40	36.6	27.9		
42	34.2	26.5	20.7	
44	32.0	25.2	19.7	16.1
46	30.0	24.1	18.9	15.3
48	28.1	23.1	18.1	14.7
50		22.3	17.4	14.1
52			16.8	13.5
54				13.1
主臂组合	210	220	221	222
倍率	3	2	2	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	43.9			
38	41.7			
40	39.7	27.9		
42	37.9	26.5	20.7	
44	36.2	25.2	19.7	16.1
46	34.6	24.1	18.9	15.3
48	33.2	23.1	18.1	14.7
50		22.3	17.4	14.1
52			16.8	13.5
54				13.1

主臂组合	210	220	221	222
倍率	4	2	2	2

4、 42 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	26.2			
42	24.4			
44	22.7	20.4		
46	21.3	19.0	17.1	
48	19.9	17.8	16.0	13.3
50	18.7	16.6	14.9	12.8
52	17.5	15.6	13.9	12.3
54	16.4	14.6	13.0	11.5
56		13.6	12.2	10.7
58			11.4	10.0
60				9.2
主臂组合	210	220	221	222
倍率	2	2	2	1
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	35.8			
42	33.4			
44	31.3	23.8		
46	29.4	22.7	17.3	
48	27.7	21.7	16.6	13.3
50	26.1	20.8	16.0	12.8
52	24.6	20.0	15.4	12.3
54	23.2	19.3	14.9	11.8
56		18.7	14.4	11.4
58			14.0	11.0
60				10.7
主臂组合	210	220	221	222
倍率	3	2	2	1
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	37.8			
42	36.1			
44	34.6	23.8		
46	33.2	22.7	17.3	
48	31.8	21.7	16.6	13.3

50	30.6	20.8	16.0	12.8
52	29.4	20.0	15.4	12.3
54	28.2	19.3	14.9	11.8
56		18.7	14.4	11.4
58			14.0	11.0
60				10.7
主臂组合	210	220	221	222
倍率	3	2	2	1

5、 49 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	22.3			
46	20.8			
48	19.5	17.3		
50	18.3	16.2	14.4	
52	17.2	15.2	13.5	
54	16.2	14.3	12.6	10.7
56	15.2	13.4	11.8	10.2
58	14.3	12.6	11.1	9.6
60	13.5	11.8	10.4	8.9
62	12.6	11.1	9.7	8.3
64		10.3	9.1	7.8
66			8.4	7.2
68				6.6
主臂组合	210	220	221	222
倍率	2	2	1	1
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	30.8			
46	29.0			
48	27.2	20.4		
50	25.7	19.5	14.7	
52	24.3	18.8	14.1	
54	22.9	18.0	13.6	10.7
56	21.7	17.4	13.2	10.3
58	20.6	16.8	12.8	10.0
60	19.5	16.3	12.4	9.7
62	18.4	15.7	12.0	9.4
64		15.3	11.7	9.1
66			11.4	8.8

68				8.5
主臂组合	210	220	221	222
倍率	3	2	1	1
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	32.5			
46	31.2			
48	29.6	20.4		
50	28.4	19.5	14.7	
52	26.4	18.8	14.1	
54	24.8	18.0	13.6	10.7
56	23.4	17.4	13.2	10.3
58	22.4	16.8	12.8	10.0
60	20.8	16.3	12.4	9.7
62	19.2	15.7	12.0	9.4
64		15.3	11.7	9.1
66			11.4	8.8
68				8.5
主臂组合	210	220	221	222
倍率	3	2	1	1

6、56 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
48	18.7			
50	17.5			
52	16.4	14.4		
54	15.4	13.4	11.8	
56	14.5	12.6	11.0	
58	13.6	11.8	10.3	8.7
60	12.8	11.1	9.6	8.1
62	12.0	10.4	9.0	7.5
64	11.3	9.7	8.4	7.0
66	10.6	9.1	7.8	6.5
68	10.0	8.5	7.3	6.0
70		7.9	6.8	5.5
72			6.2	5.1
74				4.6
主臂组合	210	220	221	222
倍率	2	1	1	1

支腿全伸_平衡重 80_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
48	26.4			
50	24.9			
52	23.5	17.7		
54	22.2	17.0	12.6	
56	21.0	16.4	12.2	
58	19.9	15.8	11.8	9.0
60	18.8	15.2	11.4	8.7
62	17.9	14.7	11.1	8.4
64	16.9	14.3	10.8	8.1
66	16.1	13.8	10.4	7.8
68	15.2	13.4	10.1	7.5
70		13.0	9.9	7.2
72			9.6	6.9
74				6.6
主臂组合	210	220	221	222
倍率	2	2	1	1
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
48	28.0			
50	27.1			
52	26.2	17.7		
54	25.4	17.0	12.6	
56	24.3	16.4	12.2	
58	22.8	15.8	11.8	9.0
60	21.9	15.2	11.4	8.7
62	21.4	14.7	11.1	8.4
64	20.4	14.3	10.8	8.1
66	18.6	13.8	10.4	7.8
68	17.3	13.4	10.1	7.5
70		13.0	9.9	7.2
72			9.6	6.9
74				6.6
主臂组合	210	220	221	222
倍率	2	2	1	1

7、63 米变幅副臂性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
52	15.8			

QAY800 全地面起重机操作手册
起重性能表

54	14.9			
56	13.9	12.0		
58	13.1	11.3	9.7	
60	12.3	10.5	9.0	
62	11.6	9.9	8.4	6.9
64	10.9	9.3	7.8	6.4
66	10.3	8.7	7.3	5.9
68	9.6	8.1	6.8	5.5
70	9.1	7.6	6.3	5.0
72	8.5	7.1	5.9	4.6
74	8.0	6.6	5.4	4.2
76	7.4	6.1	5.0	3.8
78		5.6	4.6	3.5
80			4.1	3.1
82				2.7
主臂组合	210	220	221	222
倍率	2	1	1	1
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
52	18.2			
54	17.2			
56	16.2	15.4		
58	15.5	14.8	10.8	
60	15.0	14.3	10.4	
62	14.6	13.7	10.1	7.1
64	13.9	13.3	9.7	6.7
66	13.3	12.8	9.4	6.4
68	12.6	12.4	9.1	6.1
70	12.1	11.9	8.8	5.8
72	11.6	11.5	8.5	5.5
74	11.0	11.2	8.2	5.3
76	10.5	10.8	7.9	5.0
78		10.2	7.6	4.7
80			7.3	4.5
82				4.2
主臂组合	210	220	221	222
倍率	2	2	1	1
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
52	18.2			
54	17.2			
56	16.2	15.4		
58	15.5	14.8	10.8	

QAY800 全地面起重机操作手册
起重性能表

60	15.0	14.3	10.4	
62	14.6	13.7	10.1	7.1
64	13.9	13.3	9.7	6.7
66	13.3	12.8	9.4	6.4
68	12.6	12.4	9.1	6.1
70	12.1	11.9	8.8	5.8
72	11.6	11.5	8.5	5.5
74	11.0	11.2	8.2	5.3
76	10.5	10.8	7.9	5.0
78		10.5	7.6	4.7
80			7.3	4.5
82				4.2
主臂组合	210	220	221	222
倍率	2	2	1	1

八、 固定副臂起重性能表，安装角 0°

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 0_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	44.1		
16	40.3	35.0	29.6
18	37.1	32.2	27.4
20	34.2	29.9	25.5
22	31.6	27.7	23.9
24	29.3	25.8	22.3
26	27.1	24.0	21.0
28	24.9	22.2	19.5
30	23.1	20.6	18.1
32	21.4	19.1	16.7
34	19.8	17.6	15.4
36	18.4	16.3	14.1
38	16.5	15.0	13.1
40	13.8	13.8	12.0
42	11.3	12.6	11.1
44	9.1	10.4	10.2
46	7.1	8.4	9.3
48	5.3	6.6	7.8

QAY800 全地面起重机操作手册
起重性能表

50	3.6	5.0	6.1
52	2.1	3.5	4.6
54		2.1	3.3
56			2.0
主臂组合	222220	222221	222222
倍率	4	3	3
支腿全伸_平衡重 80_副臂安装角 0° 副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	44.1		
16	40.3	35.0	29.6
18	37.1	32.2	27.4
20	34.2	29.9	25.5
22	31.6	27.7	23.9
24	29.3	25.8	22.3
26	27.1	24.0	21.0
28	24.9	22.2	19.5
30	23.1	20.6	18.1
32	21.4	19.1	16.7
34	19.2	17.6	15.4
36	17.3	16.3	14.1
38	15.8	15.0	13.1
40	14.2	13.8	12.0
42	12.9	12.5	11.1
44	11.6	11.0	10.2
46	10.3	9.9	9.2
48	8.9	8.9	8.2
50	7.7	7.8	7.1
52	6.6	6.7	6.6
54	6.0	5.9	5.5
56	5.0	5.1	5.0
58	4.1	4.4	4.2
60	3.3	3.6	3.6
62	2.0	3.0	2.9
64		2.2	2.3
66			
主臂组合	222220	222221	222222
倍率	4	3	3
支腿全伸_平衡重 110_副臂安装角 0° 副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	44.1		
16	40.3	35.0	29.6
18	37.1	32.2	27.4
20	34.2	29.9	25.5

QAY800 全地面起重机操作手册
起重性能表

22	31.6	27.7	23.9
24	29.3	25.8	22.3
26	27.1	24.0	21.0
28	24.9	22.2	19.5
30	23.1	20.6	18.1
32	21.4	19.1	16.7
34	19.2	17.6	15.4
36	17.3	16.3	14.1
38	15.8	15.0	13.1
40	14.2	13.8	12.0
42	12.9	12.5	11.1
44	11.6	11.0	10.2
46	10.3	9.9	9.2
48	8.9	8.9	8.2
50	7.7	7.8	7.1
52	6.6	6.7	6.6
54	6.0	5.9	5.5
56	5.0	5.1	5.0
58	4.1	4.4	4.2
60	3.4	3.6	3.6
62	2.8	3.0	2.9
64	2.0	2.2	2.3
66			
主臂组合	222220	222221	222222
倍率	4	3	3

2、14 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
5	85.6							
6	76.5							
7	68.3							
8	61.4							
9	54.1							
10	48.9							
12	42.3	52.4	51.4					
14	37.0	47.6	44.8	38.9	34.4			
16	32.2	43.9	41.1	35.7	32.0	26.5	21.0	
18	27.9	40.8	38.4	32.9	30.1	24.5	20.2	17.7
20	24.2	37.7	35.8	30.2	28.2	22.8	19.6	16.4

QAY800 全地面起重机操作手册
起重性能表

22	21.5	35.2	33.6	27.9	26.3	21.3	19.2	15.4
24	19.7	33.1	30.6	25.8	24.3	19.7	18.5	14.4
26	17.9	31.2	29.0	23.8	22.2	18.3	17.3	13.5
28	16.4	29.0	26.8	22.1	21.2	16.9	15.8	12.5
30		26.8	25.0	20.5	19.4	15.6	14.7	11.8
32		24.7	22.7	19.1	17.9	14.5	13.6	10.9
34		21.8	21.1	17.7	16.4	13.3	12.5	10.2
36		18.2	18.9	16.4	15.4	12.4	11.7	9.3
38		15.1	15.8	15.3	14.6	11.4	10.8	8.5
40		12.3	13.0	13.6	13.4	10.5	10.1	7.8
42		9.9	10.5	11.1	12.0	9.8	9.1	7.1
44		7.7	8.3	8.9	9.8	9.0	8.5	6.4
46		5.7	6.4	6.9	7.8	8.3	7.8	5.9
48		3.9	4.6	5.1	6.0	6.8	7.1	5.3
50		2.3	2.9	3.5	4.4	5.2	6.2	4.8
52				2.0	2.9	3.7	4.7	4.1
54						2.3	3.3	3.7
56							2.1	3.0
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	7	4	4	3	3	2	2	2
支腿全伸_平衡重80_副臂安装角0_副臂长度14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
5	85.6							
6	76.5							
7	68.3							
8	61.4							
9	54.1							
10	48.9							
12	42.3	52.4	51.4					
14	37.0	47.6	44.8	38.9	34.4			
16	32.2	43.9	41.1	35.7	32.0	26.5	21.0	
18	27.9	40.8	38.4	32.9	30.1	24.5	20.2	17.7
20	24.2	37.7	35.8	30.2	28.2	22.8	19.6	16.4
22	21.5	35.2	33.6	27.9	26.3	21.3	19.2	15.4
24	19.7	33.1	30.6	25.8	24.3	19.7	18.5	14.4
26	17.9	31.2	29.0	23.8	22.2	18.3	17.3	13.5
28	16.4	29.0	26.8	22.1	21.2	16.9	15.8	12.5
30		26.8	25.0	20.5	19.4	15.6	14.7	11.8
32		24.7	22.7	19.1	17.9	14.5	13.6	10.9
34		22.8	21.1	17.7	16.4	13.3	12.5	10.2
36		21.0	19.6	16.4	15.4	12.4	11.7	9.3
38		19.2	17.8	15.3	14.6	11.4	10.8	8.5
40		17.4	16.0	14.1	13.4	10.5	10.1	7.8

QAY800 全地面起重机操作手册
起重性能表

42		15.6	14.5	13.1	12.4	9.8	9.1	7.1
44		14.1	13.2	12.1	11.6	9.0	8.5	6.4
46		12.9	12.0	11.0	10.4	8.3	7.8	5.9
48		11.7	10.7	9.9	9.4	7.6	7.1	5.3
50		9.7	10.0	8.9	8.1	6.8	6.3	4.8
52		7.9	8.5	7.8	7.5	6.2	5.9	4.1
54		6.2	6.9	6.9	6.7	5.5	5.3	3.7
56		4.7	5.3	5.9	5.6	4.9	4.9	3.2
58		3.3	3.9	4.5	5.0	4.2	3.9	2.8
60			2.6	3.2	4.0	3.5	3.4	
62				2.0	2.8	2.9	2.8	
64						2.1	2.3	
66								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	7	4	4	3	3	2	2	2
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
5	85.6							
6	76.5							
7	68.3							
8	61.4							
9	54.1							
10	48.9							
12	42.3	52.4	51.4					
14	37.0	47.6	44.8	38.9	34.4			
16	32.2	43.9	41.1	35.7	32.0	26.5	21.0	
18	27.9	40.8	38.4	32.9	30.1	24.5	20.2	17.7
20	24.2	37.7	35.8	30.2	28.2	22.8	19.6	16.4
22	21.5	35.2	33.6	27.9	26.3	21.3	19.2	15.4
24	19.7	33.1	30.6	25.8	24.3	19.7	18.5	14.4
26	17.9	31.2	29.0	23.8	22.2	18.3	17.3	13.5
28	16.4	29.0	26.8	22.1	21.2	16.9	15.8	12.5
30		26.8	25.0	20.5	19.4	15.6	14.7	11.8
32		24.7	22.7	19.1	17.9	14.5	13.6	10.9
34		22.8	21.1	17.7	16.4	13.3	12.5	10.2
36		21.0	19.6	16.4	15.4	12.4	11.7	9.3
38		19.2	17.8	15.3	14.6	11.4	10.8	8.5
40		17.4	16.0	14.1	13.4	10.5	10.1	7.8
42		15.6	14.5	13.1	12.4	9.8	9.1	7.1
44		14.1	13.2	12.1	11.6	9.0	8.5	6.4
46		12.9	12.0	11.0	10.4	8.3	7.8	5.9
48		11.7	10.7	9.9	9.4	7.6	7.1	5.3
50		10.8	10.0	8.9	8.1	6.8	6.3	4.8

52		9.8	9.0	7.8	7.5	6.2	5.9	4.1
54		8.9	8.1	6.9	6.7	5.5	5.3	3.7
56		7.8	7.2	6.0	5.6	4.9	4.9	3.2
58		6.2	6.0	5.2	5.0	4.2	3.9	2.8
60		4.9	4.9	4.4	4.0	3.5	3.4	
62			4.3	3.5	3.4	2.9	2.8	
64			3.1	2.8	2.6	2.1	2.3	
66					2.0			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	7	4	4	3	3	2	2	2

3、 21 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
6	59.0							
7	53.7							
8	48.4							
9	44.0							
10	40.3							
12	33.5	38.2	34.2					
14	29.3	35.2	32.4	32.0				
16	26.0	32.5	31.0	29.8	29.6			
18	23.0	30.1	29.8	27.9	27.6	20.7	18.8	
20	20.5	28.1	28.4	26.3	25.2	19.3	18.0	13.7
22	18.1	26.1	26.5	24.5	23.3	18.1	16.8+2.6	12.9
24	15.8	24.4	24.5	22.8	21.5	17.0	15.8	12.1
26	13.9	23.0	21.9	21.2	20.2	15.9	14.6	11.3
28	12.8	21.7	20.0	19.7	18.6	14.8	13.9	10.5
30	11.7	20.5	19.1	18.2	17.2	13.8	12.9	9.9
32	10.8	19.4	18.1	16.9	15.8	12.9	12.0	9.3
34	10.0	18.4	17.2	15.6	14.9	11.7	11.0	8.6
36	9.2	17.4	16.2	14.6	13.7	10.9	10.2	8.2
38		16.3	15.1	13.7	12.7	10.1	9.3	7.5
40		14.7	14.1	12.4	11.6	9.2	8.5	6.8
42		12.2	12.6	11.7	10.7	8.5	7.8	6.2
44		10.0	10.3	10.7	10.3	7.8	7.3	5.6
46		8.0	8.3	8.7	9.3	7.1	6.6	5.2
48		6.2	6.5	6.9	7.5	6.4	5.9	4.6
50		4.5	4.9	5.2	5.9	5.9	5.5	4.0
52		3.0	3.4	3.7	4.4	4.9	4.9	3.6

QAY800 全地面起重机操作手册
起重性能表

54			2.0	2.3	3.0	3.5	4.4	3.2
56						2.3	3.1	2.8
58								2.3
60								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	5	3	3	3	3	2	2	1
支腿全伸_平衡重80_副臂安装角0_副臂长度21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
6	59.0							
7	53.7							
8	48.4							
9	44.0							
10	40.3							
12	33.5	38.2	34.2					
14	29.3	35.2	32.4	32.0				
16	26.0	32.5	31.0	29.8	29.6			
18	23.0	30.1	29.8	27.9	27.6	20.7	18.8	
20	20.5	28.1	28.4	26.3	25.2	19.3	18.0	13.7
22	18.1	26.1	26.5	24.5	23.3	18.1	16.8+2.6	12.9
24	15.8	24.4	24.5	22.8	21.5	17.0	15.8	12.1
26	13.9	23.0	21.9	21.2	20.2	15.9	14.6	11.3
28	12.8	21.7	20.0	19.7	18.6	14.8	13.9	10.5
30	11.7	20.5	19.1	18.2	17.2	13.8	12.9	9.9
32	10.8	19.4	18.1	16.9	15.8	12.9	12.0	9.3
34	10.0	18.4	17.2	15.6	14.9	11.7	11.0	8.6
36	9.2	17.4	16.2	14.6	13.7	10.9	10.2	8.2
38		16.3	15.1	13.7	12.7	10.1	9.3	7.5
40		15.4	14.1	12.4	11.6	9.2	8.5	6.8
42		14.5	13.3	11.7	10.7	8.5	7.8	6.2
44		13.7	12.9	10.9	10.3	7.8	7.3	5.6
46		12.7	11.6	10.1	9.3	7.1	6.6	5.2
48		11.5	10.7	9.3	8.4	6.4	5.9	4.6
50		10.6	9.3	8.5	7.6	5.9	5.5	4.0
52		9.7	8.6	7.7	6.8	5.2	4.9	3.6
54		8.4	8.0	6.9	6.1	4.7	4.4	3.2
56		6.9	7.3	6.1	5.6	4.1	3.8	2.8
58		5.5	5.8	5.4	4.7	3.7	3.5	2.3
60		4.2	4.5	4.4	4.1	3.2	3.0	
62		2.9	3.3	3.6	3.4	2.7	2.5	
64					2.7	2.1		
66					2.0			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	5	3	3	3	3	2	2	1

支腿全伸_平衡重 110_副臂安装角 0_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
6	59.0							
7	53.7							
8	48.4							
9	44.0							
10	40.3							
12	33.5	38.2	34.2					
14	29.3	35.2	32.4	32.0				
16	26.0	32.5	31.0	29.8	29.6			
18	23.0	30.1	29.8	27.9	27.6	20.7	18.8	
20	20.5	28.1	28.4	26.3	25.2	19.3	18.0	13.7
22	18.1	26.1	26.5	24.5	23.3	18.1	16.8+2.6	12.9
24	15.8	24.4	24.5	22.8	21.5	17.0	15.8	12.1
26	13.9	23.0	21.9	21.2	20.2	15.9	14.6	11.3
28	12.8	21.7	20.0	19.7	18.6	14.8	13.9	10.5
30	11.7	20.5	19.1	18.2	17.2	13.8	12.9	9.9
32	10.8	19.4	18.1	16.9	15.8	12.9	12.0	9.3
34	10.0	18.4	17.2	15.6	14.9	11.7	11.0	8.6
36	9.2	17.4	16.2	14.6	13.7	10.9	10.2	8.2
38		16.3	15.1	13.7	12.7	10.1	9.3	7.5
40		15.4	14.1	12.4	11.6	9.2	8.5	6.8
42		14.5	13.3	11.7	10.7	8.5	7.8	6.2
44		13.7	12.9	10.9	10.3	7.8	7.3	5.6
46		12.7	11.6	10.1	9.3	7.1	6.6	5.2
48		11.5	10.7	9.3	8.4	6.4	5.9	4.6
50		10.6	9.3	8.5	7.6	5.9	5.5	4.0
52		9.7	8.6	7.7	6.8	5.2	4.9	3.6
54		8.9	8.0	6.9	6.1	4.7	4.4	3.2
56		8.1	7.4	6.1	5.6	4.1	3.8	2.8
58		7.4	6.7	5.4	4.7	3.7	3.5	2.3
60		6.4	5.6	4.4	4.1	3.2	3.0	
62		5.3	4.7	3.8	3.4	2.7	2.5	
64					2.7	2.1		
66					2.1			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	5	3	3	3	3	2	2	1

4、 28 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度28								
--------------------------	--	--	--	--	--	--	--	--

R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
8	39.8							
9	36.8							
10	32.0							
12	28.7							
14	24.7	27.5	27.0					
16	21.9	25.4	25.1	23.1	22.3			
18	19.4	23.6	23.4	21.7	21.1	17.5		
20	17.5	22.0	22.0	20.5	20.0	16.3	14.4	
22	15.5	20.5	20.7	19.3	19.0	15.2	13.4	10.6
24	13.9	19.2	19.7	18.3	18.2	14.3	12.7	9.9
26	12.3	17.8	18.3	17.4	17.1	13.5	12.1	9.2
28	10.9	16.9	17.5	16.4	15.4	12.7	11.5	8.6
30	9.7	16.1	16.5	15.5	14.7	11.8	10.8	8.1
32	8.7	15.3	15.7	14.7	13.6	11.2	10.4	7.6
34	8.1	14.4	14.3	13.9	12.8	10.2	9.2	7.1
36	7.4	13.7	13.0	13.0	12.0	9.4	8.8	6.7
38	6.8	13.0	11.7	12.2	11.5	8.7	8.1	6.2
40	6.2	12.2	11.1	11.4	10.9	8.1	7.4	5.6
42	5.9	11.5	10.4	10.5	9.5	7.2	6.7	5.2
44		10.8	10.0	9.8	8.8	6.7	6.1	4.7
46		9.8	9.3	9.1	8.2	6.1	5.7	4.3
48		8.0	8.1	8.3	7.7	5.5	5.1	3.8
50		6.3	6.5	6.6	7.1	5.1	4.7	3.2
52		4.8	5.0	5.1	5.5	4.5	4.0	2.8
54		3.4	3.6	3.7	4.2	3.9	3.6	2.0
56		2.1	2.3	2.4	2.9	3.3	3.1	
58						2.1	2.8	
60								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	2	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
8	39.8							
9	36.8							
10	32.0							
12	28.7							
14	24.7	27.5	27.0					
16	21.9	25.4	25.1	23.1	22.3			
18	19.4	23.6	23.4	21.7	21.1	17.5		
20	17.5	22.0	22.0	20.5	20.0	16.3	14.4	
22	15.5	20.5	20.7	19.3	19.0	15.2	13.4	10.6
24	13.9	19.2	19.7	18.3	18.2	14.3	12.7	9.9

QAY800 全地面起重机操作手册
起重性能表

26	12.3	17.8	18.3	17.4	17.1	13.5	12.1	9.2
28	10.9	16.9	17.5	16.4	15.4	12.7	11.5	8.6
30	9.7	16.1	16.5	15.5	14.7	11.8	10.8	8.1
32	8.7	15.3	15.7	14.7	13.6	11.2	10.4	7.6
34	8.1	14.4	14.3	13.9	12.8	10.2	9.2	7.1
36	7.4	13.7	13.0	13.0	12.0	9.4	8.8	6.7
38	6.8	13.0	11.7	12.2	11.5	8.7	8.1	6.2
40	6.2	12.2	11.1	11.4	10.9	8.1	7.4	5.6
42	5.9	11.5	10.4	10.5	9.5	7.2	6.7	5.2
44		10.8	10.0	9.8	8.8	6.7	6.1	4.7
46		10.1	9.3	9.1	8.2	6.1	5.7	4.3
48		9.4	8.3	8.4	7.7	5.5	5.1	3.8
50		8.9	8.0	7.8	7.1	5.1	4.7	3.2
52		8.3	7.5	7.1	6.4	4.5	4.0	2.8
54		7.7	6.9	6.6	6.1	3.9	3.6	2.0
56		7.4	6.4	6.0	5.2	3.5	3.1	
58		7.0	6.0	5.3	4.8	3.0	2.8	
60		5.9	5.6	4.7	4.0	2.5	2.4	
62		4.7	4.8	4.0	3.5			
64		3.5	3.7	3.3	2.9			
66		2.5	2.6	2.6	2.1			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	2	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
8	39.8							
9	36.8							
10	32.0							
12	28.7							
14	24.7	27.5	27.0					
16	21.9	25.4	25.1	23.1	22.3			
18	19.4	23.6	23.4	21.7	21.1	17.5		
20	17.5	22.0	22.0	20.5	20.0	16.3	14.4	
22	15.5	20.5	20.7	19.3	19.0	15.2	13.4	10.6
24	13.9	19.2	19.7	18.3	18.2	14.3	12.7	9.9
26	12.3	17.8	18.3	17.4	17.1	13.5	12.1	9.2
28	10.9	16.9	17.5	16.4	15.4	12.7	11.5	8.6
30	9.7	16.1	16.5	15.5	14.7	11.8	10.8	8.1
32	8.7	15.3	15.7	14.7	13.6	11.2	10.4	7.6
34	8.1	14.4	14.3	13.9	12.8	10.2	9.2	7.1
36	7.4	13.7	13.0	13.0	12.0	9.4	8.8	6.7
38	6.8	13.0	11.7	12.2	11.5	8.7	8.1	6.2
40	6.2	12.2	11.1	11.4	10.9	8.1	7.4	5.6

QAY800 全地面起重机操作手册
起重性能表

42	5.9	11.5	10.4	10.5	9.5	7.2	6.7	5.2
44		10.8	10.0	9.8	8.8	6.7	6.1	4.7
46		10.1	9.3	9.1	8.2	6.1	5.7	4.3
48		9.4	8.3	8.4	7.7	5.5	5.1	3.8
50		8.9	8.0	7.8	7.1	5.1	4.7	3.2
52		8.3	7.5	7.1	6.4	4.5	4.0	2.8
54		7.7	6.9	6.6	6.1	3.9	3.6	2.0
56		7.4	6.4	6.0	5.2	3.5	3.1	
58		7.0	6.0	5.3	4.8	3.0	2.8	
60		6.7	5.6	4.7	4.0	2.5	2.4	
62		5.9	5.2	4.0	3.5			
64		5.2	4.3	3.3	2.9			
66		4.5	3.8	2.6	2.1			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	2	1	1

5、35 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
9	31.1							
10	28.6							
12	24.6							
14	21.3	21.7						
16	18.6	19.9	19.5					
18	16.8	18.5	18.3	16.9	15.8			
20	15.1	17.3	17.2	16.0	15.1	13.9		
22	13.7	16.1	16.1	15.1	14.4	13.0	12.0	
24	12.2	15.1	15.3	14.1	13.6	12.2	11.2	8.3
26	11.0	14.1	14.4	13.5	13.1	11.4	10.4	7.7
28	9.9	12.9	13.0	12.8	12.5	10.8	9.8	7.1
30	8.9	12.4	12.6	12.1	12.0	10.1	9.3	6.7
32	7.8	11.7	11.9	11.4	11.5	9.5	8.9	6.2
34	6.8	11.2	11.5	10.8	10.2	9.1	8.3	5.8
36	6.2	10.6	11.0	10.2	9.4	8.5	7.9	5.4
38	5.8	10.0	10.3	9.8	9.3	7.9	7.2	5.1
40	5.4	9.5	9.9	9.2	8.6	7.2	6.8	4.5
42	4.8	9.1	9.0	8.9	8.1	6.6	6.0	4.1
44	4.5	8.5	8.1	8.4	7.6	6.0	5.4	3.8
46	4.1	8.1	7.3	7.9	7.0	5.5	5.1	3.5
48	3.9	7.6	6.8	7.4	6.4	4.9	4.5	3.1
50	3.7	7.0	6.2	6.8	6.0	4.5	4.0	2.7

QAY800 全地面起重机操作手册
起重性能表

52		6.2	6.1	6.2	5.5	3.9	3.5	2.1
54		4.8	4.8	4.8	4.9	3.6	3.2	
56		3.5	3.5	3.5	3.8	3.1	2.9	
58		2.3	2.3	2.3	2.6	2.8	2.3	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	1	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
9	31.1							
10	28.6							
12	24.6							
14	21.3	21.7						
16	18.6	19.9	19.5					
18	16.8	18.5	18.3	16.9	15.8			
20	15.1	17.3	17.2	16.0	15.1	13.9		
22	13.7	16.1	16.1	15.1	14.4	13.0	12.0	
24	12.2	15.1	15.3	14.1	13.6	12.2	11.2	8.3
26	11.0	14.1	14.4	13.5	13.1	11.4	10.4	7.7
28	9.9	12.9	13.0	12.8	12.5	10.8	9.8	7.1
30	8.9	12.4	12.6	12.1	12.0	10.1	9.3	6.7
32	7.8	11.7	11.9	11.4	11.5	9.5	8.9	6.2
34	6.8	11.2	11.5	10.8	10.2	9.1	8.3	5.8
36	6.2	10.6	11.0	10.2	9.4	8.5	7.9	5.4
38	5.8	10.0	10.3	9.8	9.3	7.9	7.2	5.1
40	5.4	9.5	9.9	9.2	8.6	7.2	6.8	4.5
42	4.8	9.1	9.0	8.9	8.1	6.6	6.0	4.1
44	4.5	8.5	8.1	8.4	7.6	6.0	5.4	3.8
46	4.1	8.1	7.3	7.9	7.0	5.5	5.1	3.5
48	3.9	7.6	6.8	7.4	6.4	4.9	4.5	3.1
50	3.7	7.0	6.2	6.8	6.0	4.5	4.0	2.7
52		6.7	6.1	6.3	5.5	3.9	3.5	2.1
54		6.2	5.3	5.6	4.9	3.6	3.2	
56		5.8	4.9	5.2	4.5	3.1	2.9	
58		5.4	4.8	4.7	4.2	2.8	2.3	
60		4.9	4.2	4.3	3.6	2.0		
62		4.8	4.1	3.8	3.2			
64		4.6	3.7	3.3	2.6			
66		3.8	3.8	2.5	2.1			
68		2.8	2.8					
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	1	1	1

支腿全伸_平衡重 110_副臂安装角 0_副臂长度 35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
9	31.1							
10	28.6							
12	24.6							
14	21.3	21.7						
16	18.6	19.9	19.5					
18	16.8	18.5	18.3	16.9	15.8			
20	15.1	17.3	17.2	16.0	15.1	13.9		
22	13.7	16.1	16.1	15.1	14.4	13.0	12.0	
24	12.2	15.1	15.3	14.1	13.6	12.2	11.2	8.3
26	11.0	14.1	14.4	13.5	13.1	11.4	10.4	7.7
28	9.9	12.9	13.0	12.8	12.5	10.8	9.8	7.1
30	8.9	12.4	12.6	12.1	12.0	10.1	9.3	6.7
32	7.8	11.7	11.9	11.4	11.5	9.5	8.9	6.2
34	6.8	11.2	11.5	10.8	10.2	9.1	8.3	5.8
36	6.2	10.6	11.0	10.2	9.4	8.5	7.9	5.4
38	5.8	10.0	10.3	9.8	9.3	7.9	7.2	5.1
40	5.4	9.5	9.9	9.2	8.6	7.2	6.8	4.5
42	4.8	9.1	9.0	8.9	8.1	6.6	6.0	4.1
44	4.5	8.5	8.1	8.4	7.6	6.0	5.4	3.8
46	4.1	8.1	7.3	7.9	7.0	5.5	5.1	3.5
48	3.9	7.6	6.8	7.4	6.4	4.9	4.5	3.1
50	3.7	7.0	6.2	6.8	6.0	4.5	4.0	2.7
52		6.7	6.1	6.3	5.5	3.9	3.5	2.1
54		6.2	5.3	5.6	4.9	3.6	3.2	
56		5.8	4.9	5.2	4.5	3.1	2.9	
58		5.4	4.8	4.7	4.2	2.8	2.3	
60		4.9	4.2	4.3	3.6	2.0		
62		4.8	4.1	3.8	3.2			
64		4.6	3.7	3.3	2.6			
66		4.4	3.9	2.5	2.1			
68		3.9	3.2					
70		3.3	2.5					
72			2.0					
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	2	2	2	2	1	1	1

6、 42 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度42								
--------------------------	--	--	--	--	--	--	--	--

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
10	24.6						
12	21.4						
14	18.9						
16	16.6	16.1	15.3				
18	14.6	14.8	14.2	14.1			
20	13.2	13.8	13.4	13.3	13.2		
22	12.0	12.9	12.6	12.4	12.3	10.4	
24	10.9	12.0	11.9	11.7	11.6	9.9	8.6
26	10.0	11.3	11.3	11.2	11.0	9.4	8.2
28	9.1	10.6	10.7	10.6	10.4	9.0	7.9
30	8.2	9.9	10.1	10.0	9.8	8.5	7.5
32	7.4	9.2	9.4	9.5	9.4	7.9	7.0
34	6.6	8.7	8.9	9.0	8.9	7.5	6.7
36	5.9	8.3	8.4	8.5	8.6	7.1	6.5
38	5.1	7.8	8.0	8.1	8.2	6.7	6.1
40	4.6	7.5	7.7	7.7	7.5	6.2	5.7
42	4.1	7.1	7.4	7.2	6.6	5.8	5.1
44	3.9	6.7	6.9	6.9	6.4	5.3	4.7
46	3.6	6.3	6.6	6.6	5.8	4.7	4.2
48	3.3	6.0	6.0	6.2	5.4	4.3	3.8
50	3.0	5.6	5.4	6.0	5.2	3.9	3.6
52	2.7	5.4	4.8	5.6	4.8	3.3	2.9
54	2.2	4.9	4.4	5.2	4.4	3.0	2.5
56		4.6	4.1	4.3	4.2	2.5	2.2
58		3.4	3.3	3.1	3.3	2.0	
60		2.3	2.2	2.0	2.2		
62							
64							
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	2	2	1	1	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度42							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
10	24.6						
12	21.4						
14	18.9						
16	16.6	16.1	15.3				
18	14.6	14.8	14.2	14.1			
20	13.2	13.8	13.4	13.3	13.2		
22	12.0	12.9	12.6	12.4	12.3	10.4	
24	10.9	12.0	11.9	11.7	11.6	9.9	8.6
26	10.0	11.3	11.3	11.2	11.0	9.4	8.2
28	9.1	10.6	10.7	10.6	10.4	9.0	7.9

QAY800 全地面起重机操作手册
起重性能表

30	8.2	9.9	10.1	10.0	9.8	8.5	7.5
32	7.4	9.2	9.4	9.5	9.4	7.9	7.0
34	6.6	8.7	8.9	9.0	8.9	7.5	6.7
36	5.9	8.3	8.4	8.5	8.6	7.1	6.5
38	5.1	7.8	8.0	8.1	8.2	6.7	6.1
40	4.6	7.5	7.7	7.7	7.5	6.2	5.7
42	4.1	7.1	7.4	7.2	6.6	5.8	5.1
44	3.9	6.7	6.9	6.9	6.4	5.3	4.7
46	3.6	6.3	6.6	6.6	5.8	4.7	4.2
48	3.3	6.0	6.0	6.2	5.4	4.3	3.8
50	3.0	5.6	5.4	6.0	5.2	3.9	3.6
52	2.7	5.4	4.8	5.6	4.8	3.3	2.9
54	2.2	4.9	4.4	5.2	4.4	3.0	2.5
56		4.7	4.1	4.7	4.2	2.5	2.2
58		4.4	3.6	4.4	3.7	2.0	
60		4.1	3.3	3.9	3.4		
62		3.7	3.1	3.6	2.8		
64		3.5	2.8	3.1	2.4		
66		3.3	2.6	2.5			
68		3.1	2.4	2.0			
70		2.9	2.3				
72		2.0					
74							
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	2	2	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 42							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
10	24.6						
12	21.4						
14	18.9						
16	16.6	16.1	15.3				
18	14.6	14.8	14.2	14.1			
20	13.2	13.8	13.4	13.3	13.2		
22	12.0	12.9	12.6	12.4	12.3	10.4	
24	10.9	12.0	11.9	11.7	11.6	9.9	8.6
26	10.0	11.3	11.3	11.2	11.0	9.4	8.2
28	9.1	10.6	10.7	10.6	10.4	9.0	7.9
30	8.2	9.9	10.1	10.0	9.8	8.5	7.5
32	7.4	9.2	9.4	9.5	9.4	7.9	7.0
34	6.6	8.7	8.9	9.0	8.9	7.5	6.7
36	5.9	8.3	8.4	8.5	8.6	7.1	6.5
38	5.1	7.8	8.0	8.1	8.2	6.7	6.1
40	4.6	7.5	7.7	7.7	7.5	6.2	5.7

QAY800 全地面起重机操作手册
起重性能表

42	4.1	7.1	7.4	7.2	6.6	5.8	5.1
44	3.9	6.7	6.9	6.9	6.4	5.3	4.7
46	3.6	6.3	6.6	6.6	5.8	4.7	4.2
48	3.3	6.0	6.0	6.2	5.4	4.3	3.8
50	3.0	5.6	5.4	6.0	5.2	3.9	3.6
52	2.7	5.4	4.8	5.6	4.8	3.3	2.9
54	2.2	4.9	4.4	5.2	4.4	3.0	2.5
56		4.7	4.1	4.7	4.2	2.5	2.2
58		4.4	3.6	4.4	3.7	2.0	
60		4.1	3.3	3.9	3.4		
62		3.7	3.1	3.6	2.8		
64		3.5	2.8	3.1	2.4		
66		3.3	2.6	2.5			
68		3.1	2.4	2.0			
70		3.0	2.3				
72		2.8	2.0				
74		2.3					
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	2	2	1	1	1	1

7、 49 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度49							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
12	17.7						
14	15.8						
16	13.8						
18	12.3	12.3					
20	10.8	11.4	11.0				
22	9.8	10.6	10.3	10.2	10.0		
24	8.9	9.9	9.8	9.5	9.4	7.4	7.3
26	8.2	9.3	9.4	9.0	8.9	6.9	6.8
28	7.4	8.6	8.7	8.5	8.5	6.4	6.3
30	6.7	8.1	8.1	8.1	8.1	6.1	5.9
32	6.1	7.5	7.6	7.5	7.5	5.8	5.5
34	5.5	7.0	7.2	7.0	7.0	5.5	5.3
36	5.1	6.6	6.6	6.7	6.6	5.3	5.0
38	4.5	6.1	6.1	6.3	6.3	4.9	4.6
40	3.9	5.8	5.8	6.0	6.0	4.7	4.3
42	3.4	5.4	5.5	5.6	5.7	4.5	4.0

QAY800 全地面起重机操作手册

起重性能表

44	3.0	5.1	5.2	5.3	5.4	4.0	3.6
46	2.5	4.8	5.0	4.9	4.7	3.7	3.2
48		4.5	4.6	4.6	4.1	3.2	2.8
50		4.3	4.4	4.4	3.9	2.8	2.4
52		4.0	4.2	4.0	3.7	2.4	2.0
54		3.8	3.9	3.8	3.3	2.0	
56		3.5	3.4	3.6	3.1		
58		3.1	2.7	3.3	2.9		
60		2.9	2.4	2.7	2.4		
62		2.1					
64							
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度49							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
12	17.7						
14	15.8						
16	13.8						
18	12.3	12.3					
20	10.8	11.4	11.0				
22	9.8	10.6	10.3	10.2	10.0		
24	8.9	9.9	9.8	9.5	9.4	7.4	7.3
26	8.2	9.3	9.4	9.0	8.9	6.9	6.8
28	7.4	8.6	8.7	8.5	8.5	6.4	6.3
30	6.7	8.1	8.1	8.1	8.1	6.1	5.9
32	6.1	7.5	7.6	7.5	7.5	5.8	5.5
34	5.5	7.0	7.2	7.0	7.0	5.5	5.3
36	5.1	6.6	6.6	6.7	6.6	5.3	5.0
38	4.5	6.1	6.1	6.3	6.3	4.9	4.6
40	3.9	5.8	5.8	6.0	6.0	4.7	4.3
42	3.4	5.4	5.5	5.6	5.7	4.5	4.0
44	3.0	5.1	5.2	5.3	5.4	4.0	3.6
46	2.5	4.8	5.0	4.9	4.7	3.7	3.2
48		4.5	4.6	4.6	4.1	3.2	2.8
50		4.3	4.4	4.4	3.9	2.8	2.4
52		4.0	4.2	4.0	3.7	2.4	2.0
54		3.8	3.9	3.8	3.3	2.0	
56		3.5	3.4	3.6	3.1		
58		3.1	2.7	3.3	2.9		
60		2.9	2.4	3.0	2.4		
62		2.8	2.3	2.8	2.1		
64		2.5	2.0	2.5	2.0		
66				2.3			

QAY800 全地面起重机操作手册
起重性能表

主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 49							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
12	17.7						
14	15.8						
16	13.8						
18	12.3	12.3					
20	10.8	11.4	11.0				
22	9.8	10.6	10.3	10.2	10.0		
24	8.9	9.9	9.8	9.5	9.4	7.4	7.3
26	8.2	9.3	9.4	9.0	8.9	6.9	6.8
28	7.4	8.6	8.7	8.5	8.5	6.4	6.3
30	6.7	8.1	8.1	8.1	8.1	6.1	5.9
32	6.1	7.5	7.6	7.5	7.5	5.8	5.5
34	5.5	7.0	7.2	7.0	7.0	5.5	5.3
36	5.1	6.6	6.6	6.7	6.6	5.3	5.0
38	4.5	6.1	6.1	6.3	6.3	4.9	4.6
40	3.9	5.8	5.8	6.0	6.0	4.7	4.3
42	3.4	5.4	5.5	5.6	5.7	4.5	4.0
44	3.0	5.1	5.2	5.3	5.4	4.0	3.6
46	2.5	4.8	5.0	4.9	4.7	3.7	3.2
48		4.5	4.6	4.6	4.1	3.2	2.8
50		4.3	4.4	4.4	3.9	2.8	2.4
52		4.0	4.2	4.0	3.7	2.4	2.0
54		3.8	3.9	3.8	3.3	2.0	
56		3.5	3.4	3.6	3.1		
58		3.1	2.7	3.3	2.9		
60		2.9	2.4	3.0	2.4		
62		2.8	2.3	2.8	2.1		
64		2.5	2.0	2.5	2.0		
66				2.3			
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	2	1	1	1	1	1	1

8、 56 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度56				
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6
12	14.7			
14	13.0			

16	11.6			
18	10.4	9.8		
20	9.1	9.0	8.6	
22	8.1	8.3	8.0	8.0
24	7.1	7.7	7.5	7.5
26	6.6	7.1	7.0	7.0
28	5.8	6.6	6.5	6.5
30	5.3	6.1	6.1	6.1
32	4.7	5.6	5.7	5.7
34	4.3	5.3	5.4	5.4
36	3.8	4.8	4.9	4.9
38	3.3	4.5	4.6	4.5
40	2.8	4.1	4.2	4.2
42	2.3	3.8	3.9	3.9
44		3.6	3.7	3.8
46		3.3	3.4	3.4
48		3.0	3.1	3.1
50		2.6	2.7	2.7
52		2.2	2.3	2.3
54			2.0	
主臂组合	000000	222000	222100	222200
倍率	1	1	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度56				
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6
12	14.7			
14	13.0			
16	11.6			
18	10.4	9.8		
20	9.1	9.0	8.6	
22	8.1	8.3	8.0	8.0
24	7.1	7.7	7.5	7.5
26	6.6	7.1	7.0	7.0
28	5.8	6.6	6.5	6.5
30	5.3	6.1	6.1	6.1
32	4.7	5.6	5.7	5.7
34	4.3	5.3	5.4	5.4
36	3.8	4.8	4.9	4.9
38	3.3	4.5	4.6	4.5
40	2.8	4.1	4.2	4.2
42	2.3	3.8	3.9	3.9
44		3.6	3.7	3.8
46		3.3	3.4	3.4
48		3.0	3.1	3.1

QAY800 全地面起重机操作手册
起重性能表

50		2.6	2.7	2.7
52		2.2	2.3	2.3
54			2.0	
主臂组合	000000	222000	222100	222200
倍率	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 56				
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6
12	14.7			
14	13.0			
16	11.6			
18	10.4	9.8		
20	9.1	9.0	8.6	
22	8.1	8.3	8.0	8.0
24	7.1	7.7	7.5	7.5
26	6.6	7.1	7.0	7.0
28	5.8	6.6	6.5	6.5
30	5.3	6.1	6.1	6.1
32	4.7	5.6	5.7	5.7
34	4.3	5.3	5.4	5.4
36	3.8	4.8	4.9	4.9
38	3.3	4.5	4.6	4.5
40	2.8	4.1	4.2	4.2
42	2.3	3.8	3.9	3.9
44		3.6	3.7	3.8
46		3.3	3.4	3.4
48		3.0	3.1	3.1
50		2.6	2.7	2.7
52		2.2	2.3	2.3
54			2.0	
主臂组合	000000	222000	222100	222200
倍率	1	1	1	1

九、 固定副臂起重性能表，安装角 20°

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	40.1		
18	36.8	32.0	27.2
20	33.9	29.6	25.4

QAY800 全地面起重机操作手册
起重性能表

22	31.4	27.5	23.6
24	29.1	25.6	22.1
26	26.9	23.8	20.7
28	24.9	22.1	19.4
30	23.0	20.6	18.2
32	21.3	19.1	16.8
34	19.7	17.6	15.6
36	18.2	16.2	14.3
38	16.8	15.0	13.2
40	15.0	13.9	12.2
42	12.5	12.7	11.1
44	10.2	11.5	10.2
46	8.1	9.4	9.3
48	6.2	7.5	8.6
50	4.5	5.8	7.0
52	2.9	4.3	5.4
54		2.8	4.0
56			2.7
主臂组合	222220	222221	222222
倍率	3	3	2
支腿全伸_平衡重 80_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	40.1		
18	36.8	32.0	27.2
20	33.9	29.6	25.4
22	31.4	27.5	23.6
24	29.1	25.6	22.1
26	26.9	23.8	20.7
28	24.9	22.1	19.4
30	23.0	20.6	18.2
32	21.3	19.1	16.8
34	19.3	17.6	15.6
36	17.5	16.2	14.3
38	16.0	15.0	13.2
40	14.7	13.9	12.2
42	13.3	12.5	11.1
44	11.7	11.3	10.2
46	10.5	10.2	9.3
48	9.0	8.9	8.5
50	7.8	7.8	7.4
52	7.3	6.9	6.6
54	6.2	5.9	5.8
56	5.1	5.2	5.0

QAY800 全地面起重机操作手册
起重性能表

58	4.3	4.5	4.5
60	3.6	3.9	3.7
62	2.5	3.1	3.1
64		2.5	2.4
66			
主臂组合	222220	222221	222222
倍率	3	3	2
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	40.1		
18	36.8	32.0	27.2
20	33.9	29.6	25.4
22	31.4	27.5	23.6
24	29.1	25.6	22.1
26	26.9	23.8	20.7
28	24.9	22.1	19.4
30	23.0	20.6	18.2
32	21.3	19.1	16.8
34	19.3	17.6	15.6
36	17.5	16.2	14.3
38	16.0	15.0	13.2
40	14.7	13.9	12.2
42	13.3	12.5	11.1
44	11.7	11.3	10.2
46	10.5	10.2	9.3
48	9.0	8.9	8.5
50	7.8	7.8	7.4
52	7.3	6.9	6.6
54	6.2	5.9	5.8
56	5.1	5.2	5.0
58	4.3	4.5	4.5
60	3.6	3.9	3.7
62	2.8	3.1	3.1
64	2.0	2.5	2.4
66			
主臂组合	222220	222221	222222
倍率	3	3	2

2、14 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 14			
------------------------------	--	--	--

R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
10	35.1							
12	30.9							
14	27.6							
16	25.0	30.4	31.2					
18	22.8	28.5	29.3	28.8	29.2			
20	20.8	27.0	27.8	27.4	27.8	22.3		
22	19.1	25.6	26.4	26.1	26.5	20.8	18.5	
24	17.7	24.2	24.9	24.8	25.2	19.7	17.7	14.5
26	16.6	22.9	23.9	23.7	22.4	18.4	16.8	13.6
28	15.9	21.9	22.7	22.2	20.8	17.4	16.1	12.7
30		20.9	21.6	20.7	19.4	16.2	15.3	11.8
32		20.0	19.4	19.2	18.2	15.0	14.1	11.2
34		19.2	17.9	17.9	16.5	13.9	13.1	10.5
36		18.4	16.8	16.8	15.4	12.8	12.0	9.8
38		17.7	16.0	15.5	14.6	11.8	11.2	9.1
40		15.2	15.7	14.5	13.8	10.9	10.4	8.4
42		12.5	13.3	13.5	12.9	10.1	9.7	7.7
44		10.0	10.8	11.5	11.6	9.4	8.8	7.0
46		7.8	8.6	9.3	10.2	8.6	8.0	6.4
48		5.8	6.6	7.3	8.3	7.9	7.5	5.9
50		3.9	4.8	5.5	6.5	7.2	6.8	5.2
52		2.2	3.1	3.8	4.8	5.6	6.4	4.7
54				2.3	3.3	4.1	5.2	4.1
56						2.7	3.8	3.7
58							2.5	3.2
60								2.2
62								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2	1
支腿全伸_平衡重80_副臂安装角20_副臂长度14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
10	35.1							
12	30.9							
14	27.6							
16	25.0	30.4	31.2					
18	22.8	28.5	29.3	28.8	29.2			
20	20.8	27.0	27.8	27.4	27.8	22.3		
22	19.1	25.6	26.4	26.1	26.5	20.8	18.5	
24	17.7	24.2	24.9	24.8	25.2	19.7	17.7	14.5
26	16.6	22.9	23.9	23.7	22.4	18.4	16.8	13.6
28	15.9	21.9	22.7	22.2	20.8	17.4	16.1	12.7
30		20.9	21.6	20.7	19.4	16.2	15.3	11.8

QAY800 全地面起重机操作手册
起重性能表

32		20.0	19.4	19.2	18.2	15.0	14.1	11.2
34		19.2	17.9	17.9	16.5	13.9	13.1	10.5
36		18.4	16.8	16.8	15.4	12.8	12.0	9.8
38		17.7	16.0	15.5	14.6	11.8	11.2	9.1
40		17.0	15.7	14.5	13.8	10.9	10.4	8.4
42		16.1	15.0	13.5	12.9	10.1	9.7	7.7
44		14.7	13.8	12.4	11.6	9.4	8.8	7.0
46		13.5	12.5	11.4	10.8	8.6	8.0	6.4
48		12.3	11.4	10.4	9.5	7.9	7.5	5.9
50		11.2	10.5	9.4	8.8	7.2	6.8	5.2
52		9.3	9.3	8.5	7.9	6.6	6.4	4.7
54		7.4	8.4	7.4	7.3	6.0	5.7	4.1
56		5.7	6.6	6.5	6.2	5.3	5.3	3.7
58		4.0	5.1	5.7	5.2	4.7	4.4	3.2
60			3.6	4.4	4.6	3.9	3.9	2.8
62			2.2	3.0	3.8	3.3	3.3	2.3
64						2.5		
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
10	35.1							
12	30.9							
14	27.6							
16	25.0	30.4	31.2					
18	22.8	28.5	29.3	28.8	29.2			
20	20.8	27.0	27.8	27.4	27.8	22.3		
22	19.1	25.6	26.4	26.1	26.5	20.8	18.5	
24	17.7	24.2	24.9	24.8	25.2	19.7	17.7	14.5
26	16.6	22.9	23.9	23.7	22.4	18.4	16.8+2.6	13.6
28	15.9	21.9	22.7	22.2	20.8	17.4	16.1	12.7
30		20.9	21.6	20.7	19.4	16.2	15.3	11.8
32		20.0	19.4	19.2	18.2	15.0	14.1	11.2
34		19.2	17.9	17.9	16.5	13.9	13.1	10.5
36		18.4	16.8+2.6	16.8+2.6	15.4	12.8	12.0	9.8
38		17.7	16.0	15.5	14.6	11.8	11.2	9.1
40		17.0	15.7	14.5	13.8	10.9	10.4	8.4
42		16.1	15.0	13.5	12.9	10.1	9.7	7.7
44		14.7	13.8	12.4	11.6	9.4	8.8	7.0
46		13.5	12.5	11.4	10.8	8.6	8.0	6.4
48		12.3	11.4	10.4	9.5	7.9	7.5	5.9
50		11.2	10.5	9.4	8.8	7.2	6.8	5.2
52		10.1	9.3	8.5	7.9	6.6	6.4	4.7

54		9.2	8.4	7.4	7.3	6.0	5.7	4.1
56		8.0	7.7	6.5	6.2	5.3	5.3	3.7
58		6.9	6.6	5.7	5.2	4.7	4.4	3.2
60			5.5	4.8	4.6	3.9	3.9	2.8
62			4.5	3.9	3.8	3.3	3.3	2.3
64						2.5		
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2	1

3、21 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	22.0							
16	19.7							
18	17.7							
20	16.2	19.3	19.1					
22	14.8	18.3	18.3	18.1	18.4			
24	13.6	17.1	17.4	17.3	17.6	15.8		
26	12.5	16.4	16.9	16.4	16.8	15.2	14.5	
28	11.5	15.4	15.9	15.8	16.1	14.6	14.1	11.0
30	10.7	14.7	15.0	15.0	15.2	13.8	13.4	10.4
32	10.0	14.1	14.6	14.4	14.7	13.0	12.1	9.7
34	9.5	13.6	13.9	13.7	13.8	12.3	11.6	9.1
36	9.1	13.0	13.3	13.2	13.3	11.6	10.8	8.4
38		12.5	12.8	12.3	11.7	10.8	10.1	7.8
40		12.0	12.2	12.2	11.6	10.0	9.2	7.4
42		11.4	11.8	11.7	11.1	9.2	8.5	6.9
44		10.9	10.9	11.3	10.6	8.5	8.0	6.4
46		10.6	9.9	10.6	9.6	7.8	7.5	5.9
48		9.2	9.4	9.8	9.1	7.2	6.9	5.4
50		7.3	7.8	8.3	8.5	6.6	6.1	4.8
52		5.6	6.1	6.6	7.3	6.0	5.7	4.4
54		3.9	4.5	5.0	5.7	5.4	4.9	3.9
56		2.4	3.0	3.5	4.2	4.8	4.6	3.5
58				2.1	2.9	3.5	4.0	3.0
60						2.3	3.1	2.6
62							2.0	2.1
64								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1	1

支腿全伸_平衡重80_副臂安装角20_副臂长度21

QAY800 全地面起重机操作手册
起重性能表

R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	22.0							
16	19.7							
18	17.7							
20	16.2	19.3	19.1					
22	14.8	18.3	18.3	18.1	18.4			
24	13.6	17.1	17.4	17.3	17.6	15.8		
26	12.5	16.4	16.9	16.4	16.8	15.2	14.5	
28	11.5	15.4	15.9	15.8	16.1	14.6	14.1	11.0
30	10.7	14.7	15.0	15.0	15.2	13.8	13.4	10.4
32	10.0	14.1	14.6	14.4	14.7	13.0	12.1	9.7
34	9.5	13.6	13.9	13.7	13.8	12.3	11.6	9.1
36	9.1	13.0	13.3	13.2	13.3	11.6	10.8	8.4
38		12.5	12.8	12.3	11.7	10.8	10.1	7.8
40		12.0	12.2	12.2	11.6	10.0	9.2	7.4
42		11.4	11.8	11.7	11.1	9.2	8.5	6.9
44		10.9	10.9	11.3	10.6	8.5	8.0	6.4
46		10.6	9.9	10.6	9.6	7.8	7.5	5.9
48		10.1	9.4	9.8	9.1	7.2	6.9	5.4
50		9.8	8.9	9.0	8.5	6.6	6.1	4.8
52		9.4	8.5	8.3	7.7	6.0	5.7	4.4
54		9.1	8.1	7.5	6.7	5.4	4.9	3.9
56		8.6	7.6	6.8	6.2	4.8	4.6	3.5
58		7.3	7.0	6.0	5.7	4.4	4.0	3.0
60		5.7	6.4	5.4	4.8	3.9	3.7	2.6
62		4.3	5.0	4.4	4.1	3.5	3.3	2.1
64		2.9	3.6	3.8	3.5	2.8	2.6	
66			2.3	2.9	2.8	2.3	2.0	
68					2.2			
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	22.0							
16	19.7							
18	17.7							
20	16.2	19.3	19.1					
22	14.8	18.3	18.3	18.1	18.4			
24	13.6	17.1	17.4	17.3	17.6	15.8		
26	12.5	16.4	16.9	16.4	16.8+2.6	15.2	14.5	
28	11.5	15.4	15.9	15.8	16.1	14.6	14.1	11.0
30	10.7	14.7	15.0	15.0	15.2	13.8	13.4	10.4
32	10.0	14.1	14.6	14.4	14.7	13.0	12.1	9.7

QAY800 全地面起重机操作手册
起重性能表

34	9.5	13.6	13.9	13.7	13.8	12.3	11.6	9.1
36	9.1	13.0	13.3	13.2	13.3	11.6	10.8	8.4
38		12.5	12.8	12.3	11.7	10.8	10.1	7.8
40		12.0	12.2	12.2	11.6	10.0	9.2	7.4
42		11.4	11.8	11.7	11.1	9.2	8.5	6.9
44		10.9	10.9	11.3	10.6	8.5	8.0	6.4
46		10.6	9.9	10.6	9.6	7.8	7.5	5.9
48		10.1	9.4	9.8	9.1	7.2	6.9	5.4
50		9.8	8.9	9.0	8.5	6.6	6.1	4.8
52		9.4	8.5	8.3	7.7	6.0	5.7	4.4
54		9.1	8.1	7.5	6.7	5.4	4.9	3.9
56		8.6	7.6	6.8	6.2	4.8	4.6	3.5
58		7.8	7.0	6.0	5.7	4.4	4.0	3.0
60		7.0	6.5	5.4	4.8	3.9	3.7	2.6
62		5.9	5.5	4.4	4.1	3.5	3.3	2.1
64		5.0	4.7	3.8	3.5	2.8	2.6	
66		3.8	4.0	3.2	2.8	2.3	2.0	
68			3.0	2.5	2.2			
70			2.3					
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1	1

4、28 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角20_副臂长度28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	16.2							
18	14.6							
20	13.1							
22	12.0	14.4						
24	10.9	13.6	14.5					
26	10.0	12.9	13.5	12.7	12.1			
28	9.2	12.2	12.5	12.1	11.7	11.0		
30	8.5	11.5	11.8	11.5	11.4	10.7	9.8	
32	7.8	10.9	11.1	11.0	11.1	10.2	9.6	8.2
34	7.1	10.4	10.6	10.5	10.7	9.9	9.5	7.7
36	6.7	9.9	10.1	10.0	10.3	9.5	9.3	7.1
38	6.3	9.4	9.7	9.7	9.9	9.1	9.1	6.7
40	6.0	9.1	9.3	9.2	9.3	8.7	8.6	6.2
42	5.8	8.7	9.0	8.7	9.0	8.3	7.7	5.8
44		8.4	8.7	8.5	8.7	7.8	7.2	5.4

QAY800 全地面起重机操作手册
起重性能表

46		8.1	8.4	8.2	8.3	7.4	6.7	4.9
48		7.6	7.9	7.8	7.4	6.8	6.2	4.5
50		7.2	7.5	7.5	6.9	6.1	5.7	4.1
52		7.0	7.3	7.2	6.6	5.5	5.1	3.7
54		6.6	6.8	6.9	6.5	5.1	4.6	3.3
56		5.2	5.5	5.8	5.9	4.6	4.3	3.0
58		3.8	4.1	4.4	4.9	4.1	3.8	2.5
60		2.4	2.8	3.1	3.6	3.7	3.4	
62					2.4	2.9	3.0	
64							2.3	
66								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	16.2							
18	14.6							
20	13.1							
22	12.0	14.4						
24	10.9	13.6	14.5					
26	10.0	12.9	13.5	12.7	12.1			
28	9.2	12.2	12.5	12.1	11.7	11.0		
30	8.5	11.5	11.8	11.5	11.4	10.7	9.8	
32	7.8	10.9	11.1	11.0	11.1	10.2	9.6	8.2
34	7.1	10.4	10.6	10.5	10.7	9.9	9.5	7.7
36	6.7	9.9	10.1	10.0	10.3	9.5	9.3	7.1
38	6.3	9.4	9.7	9.7	9.9	9.1	9.1	6.7
40	6.0	9.1	9.3	9.2	9.3	8.7	8.6	6.2
42	5.8	8.7	9.0	8.7	9.0	8.3	7.7	5.8
44		8.4	8.7	8.5	8.7	7.8	7.2	5.4
46		8.1	8.4	8.2	8.3	7.4	6.7	4.9
48		7.6	7.9	7.8	7.4	6.8	6.2	4.5
50		7.2	7.5	7.5	6.9	6.1	5.7	4.1
52		7.0	7.3	7.2	6.6	5.5	5.1	3.7
54		6.6	6.8	6.9	6.5	5.1	4.6	3.3
56		6.3	5.8	6.7	5.9	4.6	4.3	3.0
58		6.1	5.3	6.2	5.7	4.1	3.8	2.5
60		5.9	5.3	5.6	4.9	3.7	3.4	
62		5.8	4.9	4.9	4.4	3.2	3.0	
64		5.5	4.8	4.2	3.8	2.8	2.3	
66		4.3	4.6	3.6	3.0	2.4		
68		3.0	3.5	3.0	2.5			
70			2.4	2.2				

QAY800 全地面起重机操作手册
起重性能表

主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	16.2							
18	14.6							
20	13.1							
22	12.0	14.4						
24	10.9	13.6	14.5					
26	10.0	12.9	13.5	12.7	12.1			
28	9.2	12.2	12.5	12.1	11.7	11.0		
30	8.5	11.5	11.8	11.5	11.4	10.7	9.8	
32	7.8	10.9	11.1	11.0	11.1	10.2	9.6	8.2
34	7.1	10.4	10.6	10.5	10.7	9.9	9.5	7.7
36	6.7	9.9	10.1	10.0	10.3	9.5	9.3	7.1
38	6.3	9.4	9.7	9.7	9.9	9.1	9.1	6.7
40	6.0	9.1	9.3	9.2	9.3	8.7	8.6	6.2
42	5.8	8.7	9.0	8.7	9.0	8.3	7.7	5.8
44		8.4	8.7	8.5	8.7	7.8	7.2	5.4
46		8.1	8.4	8.2	8.3	7.4	6.7	4.9
48		7.6	7.9	7.8	7.4	6.8	6.2	4.5
50		7.2	7.5	7.5	6.9	6.1	5.7	4.1
52		7.0	7.3	7.2	6.6	5.5	5.1	3.7
54		6.6	6.8	6.9	6.5	5.1	4.6	3.3
56		6.3	5.8	6.7	5.9	4.6	4.3	3.0
58		6.1	5.3	6.2	5.7	4.1	3.8	2.5
60		5.9	5.3	5.6	4.9	3.7	3.4	
62		5.8	4.9	4.9	4.4	3.2	3.0	
64		5.5	4.8	4.2	3.8	2.8	2.3	
66		5.2	4.6	3.6	3.0	2.4		
68		4.5	3.9	3.0	2.5			
70		3.4	3.2	2.2				
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	1	1	1	1	1	1	1

5、35 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	11.8							
22	10.7							

QAY800 全地面起重机操作手册
起重性能表

24	9.7							
26	8.7	10.0	9.8					
28	7.9	9.4	9.3	9.2				
30	7.2	8.9	8.9	8.9	8.5			
32	6.8	8.3	8.4	8.4	8.2	7.6		
34	6.2	7.8	8.1	7.8	7.7	7.4	6.9	
36	5.8	7.4	7.6	7.5	7.5	7.0	6.7	6.0
38	5.3	7.0	7.2	7.1	7.2	6.8	6.6	5.5
40	4.9	6.7	6.9	6.8	6.9	6.3	6.2	5.2
42	4.6	6.4	6.6	6.4	6.6	6.1	6.1	4.7
44	4.4	6.1	6.3	6.2	6.3	5.9	5.9	4.5
46	4.0	5.9	6.1	6.0	6.1	5.6	5.7	4.1
48	3.9	5.6	5.9	5.8	5.9	5.4	5.1	3.8
50		5.4	5.6	5.6	5.8	5.3	4.8	3.3
52		5.2	5.3	5.3	5.4	4.9	4.5	3.1
54		5.1	5.2	5.1	5.2	4.5	4.1	2.8
56		4.8	5.0	4.9	4.6	4.0	3.5	2.4
58		4.5	4.6	4.8	4.4	3.7	3.3	
60		4.4	4.4	4.5	4.0	3.2	2.9	
62		3.3	3.5	3.7	3.7	2.9	2.5	
64		2.1	2.4	2.5	2.9	2.4	2.1	
66								
68								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	11.8							
22	10.7							
24	9.7							
26	8.7	10.0	9.8					
28	7.9	9.4	9.3	9.2				
30	7.2	8.9	8.9	8.9	8.5			
32	6.8	8.3	8.4	8.4	8.2	7.6		
34	6.2	7.8	8.1	7.8	7.7	7.4	6.9	
36	5.8	7.4	7.6	7.5	7.5	7.0	6.7	6.0
38	5.3	7.0	7.2	7.1	7.2	6.8	6.6	5.5
40	4.9	6.7	6.9	6.8	6.9	6.3	6.2	5.2
42	4.6	6.4	6.6	6.4	6.6	6.1	6.1	4.7
44	4.4	6.1	6.3	6.2	6.3	5.9	5.9	4.5
46	4.0	5.9	6.1	6.0	6.1	5.6	5.7	4.1
48	3.9	5.6	5.9	5.8	5.9	5.4	5.1	3.8
50		5.4	5.6	5.6	5.8	5.3	4.8	3.3

QAY800 全地面起重机操作手册
起重性能表

52		5.2	5.3	5.3	5.4	4.9	4.5	3.1
54		5.1	5.2	5.1	5.2	4.5	4.1	2.8
56		4.8	5.0	4.9	4.6	4.0	3.5	2.4
58		4.5	4.6	4.8	4.4	3.7	3.3	
60		4.4	4.4	4.5	4.0	3.2	2.9	
62		4.1	4.1	4.4	3.7	2.9	2.5	
64		4.0	3.7	4.1	3.7	2.4	2.1	
66		3.8	3.2	3.8	3.1			
68		3.7	3.2	3.0	2.5			
70		3.6	3.0	2.5	2.0			
72		2.9	2.8					
74			2.2					
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	11.8							
22	10.7							
24	9.7							
26	8.7	10.0	9.8					
28	7.9	9.4	9.3	9.2				
30	7.2	8.9	8.9	8.9	8.5			
32	6.8	8.3	8.4	8.4	8.2	7.6		
34	6.2	7.8	8.1	7.8	7.7	7.4	6.9	
36	5.8	7.4	7.6	7.5	7.5	7.0	6.7	6.0
38	5.3	7.0	7.2	7.1	7.2	6.8	6.6	5.5
40	4.9	6.7	6.9	6.8	6.9	6.3	6.2	5.2
42	4.6	6.4	6.6	6.4	6.6	6.1	6.1	4.7
44	4.4	6.1	6.3	6.2	6.3	5.9	5.9	4.5
46	4.0	5.9	6.1	6.0	6.1	5.6	5.7	4.1
48	3.9	5.6	5.9	5.8	5.9	5.4	5.1	3.8
50		5.4	5.6	5.6	5.8	5.3	4.8	3.3
52		5.2	5.3	5.3	5.4	4.9	4.5	3.1
54		5.1	5.2	5.1	5.2	4.5	4.1	2.8
56		4.8	5.0	4.9	4.6	4.0	3.5	2.4
58		4.5	4.6	4.8	4.4	3.7	3.3	
60		4.4	4.4	4.5	4.0	3.2	2.9	
62		4.1	4.1	4.4	3.7	2.9	2.5	
64		4.0	3.7	4.1	3.7	2.4	2.1	
66		3.8	3.2	3.8	3.1			
68		3.7	3.2	3.0	2.5			
70		3.6	3.0	2.5	2.0			
72		3.5	2.8					

74		2.9	2.4					
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1

6、 42 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角20_副臂长度42							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
24	8.2						
26	7.5						
28	6.8						
30	6.1	7.0	6.4				
32	5.6	6.6	6.1	6.4			
34	5.2	6.2	6.0	6.1	6.1		
36	4.8	5.9	5.9	5.9	5.9	5.2	
38	4.5	5.6	5.9	5.6	5.7	4.9	5.1
40	4.1	5.3	5.5	5.3	5.3	4.7	4.8
42	3.8	5.1	5.3	5.1	5.1	4.5	4.6
44	3.5	4.7	4.8	4.8	5.0	4.4	4.5
46	3.2	4.6	4.7	4.6	4.7	4.1	4.2
48	3.0	4.4	4.5	4.5	4.6	4.0	4.1
50	2.8	4.1	4.3	4.3	4.3	3.9	3.9
52	2.5	3.9	4.0	4.1	4.3	3.7	3.7
54	2.0	3.8	3.9	3.9	4.0	3.6	3.5
56		3.6	3.7	3.7	3.8	3.5	3.0
58		3.5	3.5	3.6	3.7	3.2	2.8
60		3.3	3.5	3.5	3.5	2.9	2.6
62		3.1	3.2	3.3	3.1	2.5	2.3
64		3.0	3.1	3.1	2.8	2.2	
66		2.9	2.9	3.0	2.4		
68					2.2		
70							
72							
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度42							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
24	8.2						
26	7.5						
28	6.8						
30	6.1	7.0	6.4				
32	5.6	6.6	6.1	6.4			

QAY800 全地面起重机操作手册
起重性能表

34	5.2	6.2	6.0	6.1	6.1		
36	4.8	5.9	5.9	5.9	5.9	5.2	
38	4.5	5.6	5.9	5.6	5.7	4.9	5.1
40	4.1	5.3	5.5	5.3	5.3	4.7	4.8
42	3.8	5.1	5.3	5.1	5.1	4.5	4.6
44	3.5	4.7	4.8	4.8	5.0	4.4	4.5
46	3.2	4.6	4.7	4.6	4.7	4.1	4.2
48	3.0	4.4	4.5	4.5	4.6	4.0	4.1
50	2.8	4.1	4.3	4.3	4.3	3.9	3.9
52	2.5	3.9	4.0	4.1	4.3	3.7	3.7
54	2.0	3.8	3.9	3.9	4.0	3.6	3.5
56		3.6	3.7	3.7	3.8	3.5	3.0
58		3.5	3.5	3.6	3.7	3.2	2.8
60		3.3	3.5	3.5	3.5	2.9	2.6
62		3.1	3.2	3.3	3.1	2.5	2.3
64		3.0	3.1	3.1	2.8	2.2	
66		2.9	2.9	3.0	2.4		
68		2.8	2.9	2.9	2.2		
70		2.5	2.5	2.8	2.0		
72		2.4	2.0	2.3			
74		2.3					
76		2.3					
78							
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 42							
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6
24	8.2						
26	7.5						
28	6.8						
30	6.1	7.0	6.4				
32	5.6	6.6	6.1	6.4			
34	5.2	6.2	6.0	6.1	6.1		
36	4.8	5.9	5.9	5.9	5.9	5.2	
38	4.5	5.6	5.9	5.6	5.7	4.9	5.1
40	4.1	5.3	5.5	5.3	5.3	4.7	4.8
42	3.8	5.1	5.3	5.1	5.1	4.5	4.6
44	3.5	4.7	4.8	4.8	5.0	4.4	4.5
46	3.2	4.6	4.7	4.6	4.7	4.1	4.2
48	3.0	4.4	4.5	4.5	4.6	4.0	4.1
50	2.8	4.1	4.3	4.3	4.3	3.9	3.9
52	2.5	3.9	4.0	4.1	4.3	3.7	3.7
54	2.0	3.8	3.9	3.9	4.0	3.6	3.5

QAY800 全地面起重机操作手册
起重性能表

56		3.6	3.7	3.7	3.8	3.5	3.0
58		3.5	3.5	3.6	3.7	3.2	2.8
60		3.3	3.5	3.5	3.5	2.9	2.6
62		3.1	3.2	3.3	3.1	2.5	2.3
64		3.0	3.1	3.1	2.8	2.2	
66		2.9	2.9	3.0	2.4		
68		2.8	2.9	2.9	2.2		
70		2.5	2.5	2.8	2.0		
72		2.4	2.0	2.3			
74		2.3					
76		2.3					
78		2.1					
主臂组合	000000	222000	222100	222200	222210	222220	222221
倍率	1	1	1	1	1	1	1

十、 固定副臂起重性能表，安装角 40°

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	34.6		
20	32.1	28.0	23.9
22	29.5	25.9	22.3
24	27.3	24.0	20.7
26	25.3	22.4	19.5
28	23.5	20.9	18.2
30	21.7	19.4	17.1
32	20.2	18.1	16.0
34	18.6	16.7	14.8
36	17.2	15.5	13.7
38	15.8	14.2	12.6
40	14.7	13.2	11.6
42	13.2	12.0	10.6
44	10.8	11.1	9.8
46	8.7	10.0	9.0
48	6.7	8.1	8.1
50	4.9	6.3	7.4
52	3.3	4.7	5.9
54		3.2	4.4
56			3.0

QAY800 全地面起重机操作手册
起重性能表

主臂组合	222220	222221	222222
倍率	3	3	2
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	34.6		
20	32.1	28.0	23.9
22	29.5	25.9	22.3
24	27.3	24.0	20.7
26	25.3	22.4	19.5
28	23.5	20.9	18.2
30	21.7	19.4	17.1
32	20.2	18.1	16.0
34	18.6	16.7	14.8
36	17.2	15.5	13.7
38	15.8	14.2	12.6
40	14.6	13.2	11.6
42	13.1	12.0	10.6
44	12.0	11.1	9.8
46	10.4	9.9	9.0
48	9.3	8.9	8.1
50	8.2	7.8	7.4
52	7.2	7.1	6.6
54	6.1	6.2	5.9
56	5.1	5.3	5.1
58		4.5	4.4
60			3.7
62			3.0
主臂组合	222220	222221	222222
倍率	3	2	2
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	34.6		
20	32.1	28.0	23.9
22	29.5	25.9	22.3
24	27.3	24.0	20.7
26	25.3	22.4	19.5
28	23.5	20.9	18.2
30	21.7	19.4	17.1
32	20.2	18.1	16.0
34	18.6	16.7	14.8
36	17.2	15.5	13.7
38	15.8	14.2	12.6
40	14.6	13.2	11.6

42	13.1	12.0	10.6
44	12.0	11.1	9.8
46	10.4	9.9	9.0
48	9.3	8.9	8.1
50	8.2	7.8	7.4
52	7.2	7.1	6.6
54	6.1	6.2	5.9
56	5.1	5.3	5.1
58		4.5	4.4
60			3.7
62			3.0
主臂组合	222220	222221	222222
倍率	3	2	2

2、14 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	19.9							
16	18.4							
18	17.1							
20	16.1	18.3	17.4					
22	15.1	17.7	17.1	17.7	17.3			
24	14.4	17.1	16.8	17.1	17.0	17.1		
26	13.9	16.7	16.5	16.7	16.7	16.8	16.6	
28		16.4	16.4	16.4	16.5	16.5	16.3	13.1
30		16.3	16.3	16.2	16.2	16.2	16.0	12.3
32		15.9	16.1	16.2	16.1	15.3	15.1	11.5
34		15.3	15.9	15.9	15.9	14.3	14.2	10.7
36		14.9	15.4	15.9	15.8	13.3	13.2	10.1
38		14.7	15.0	15.3	15.7	12.4	11.7	9.4
40		14.4	14.5	14.5	14.8	11.5	10.9	8.9
42		14.1	14.3	13.5	13.3	10.6	9.7	8.3
44		11.5	12.5	12.2	11.4	9.8	9.1	7.7
46		9.1	10.1	10.9	11.0	9.0	8.3	7.0
48		6.8	7.9	8.7	9.8	8.3	7.6	6.4
50		4.8	5.9	6.8	7.8	7.5	6.8	5.9
52			4.0	4.9	6.0	6.9	6.7	5.3
54			2.3	3.2	4.4	5.3	6.0	4.7
56					2.8	3.8	4.9	4.3
58						2.4	3.5	3.8
60							2.2	3.2

QAY800 全地面起重机操作手册
起重性能表

62								2.0
64								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2	1
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	19.9							
16	18.4							
18	17.1							
20	16.1	18.3	17.4					
22	15.1	17.7	17.1	17.7	17.3			
24	14.4	17.1	16.8	17.1	17.0	17.1		
26	13.9	16.7	16.5	16.7	16.7	16.8+2.6	16.6	
28		16.4	16.4	16.4	16.5	16.5	16.3	13.1
30		16.3	16.3	16.2	16.2	16.2	16.0	12.3
32		15.9	16.1	16.2	16.1	15.3	15.1	11.5
34		15.3	15.9	15.9	15.9	14.3	14.2	10.7
36		14.9	15.4	15.9	15.8	13.3	13.2	10.1
38		14.7	15.0	15.3	15.7	12.4	11.7	9.4
40		14.4	14.5	14.5	14.8	11.5	10.9	8.9
42		14.1	14.3	13.5	13.3	10.6	9.7	8.3
44		13.8	14.2	12.2	11.4	9.8	9.1	7.7
46		13.7	13.9	11.5	11.0	9.0	8.3	7.0
48		13.0	12.3	10.6	10.2	8.3	7.6	6.4
50		12.2	11.3	9.7	9.1	7.5	6.8	5.9
52			10.1	8.8	8.4	6.9	6.7	5.3
54			9.0	7.7	7.4	6.2	6.0	4.7
56				6.8	6.4	5.6	5.4	4.3
58				5.8	5.7	4.9	5.0	3.8
60						4.3	4.1	3.3
62						3.5	3.5	2.9
64						2.9	2.9	2.4
66							2.1	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 14								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	19.9							
16	18.4							
18	17.1							
20	16.1	18.3	17.4					
22	15.1	17.7	17.1	17.7	17.3			
24	14.4	17.1	16.8	17.1	17.0	17.1		

QAY800 全地面起重机操作手册
起重性能表

26	13.9	16.7	16.5	16.7	16.7	16.8	16.6	
28		16.4	16.4	16.4	16.5	16.5	16.3	13.1
30		16.3	16.3	16.2	16.2	16.2	16.0	12.3
32		15.9	16.1	16.2	16.1	15.3	15.1	11.5
34		15.3	15.9	15.9	15.9	14.3	14.2	10.7
36		14.9	15.4	15.9	15.8	13.3	13.2	10.1
38		14.7	15.0	15.3	15.7	12.4	11.7	9.4
40		14.4	14.5	14.5	14.8	11.5	10.9	8.9
42		14.1	14.3	13.5	13.3	10.6	9.7	8.3
44		13.8	14.2	12.2	11.4	9.8	9.1	7.7
46		13.7	13.9	11.5	11.0	9.0	8.3	7.0
48		13.0	12.3	10.6	10.2	8.3	7.6	6.4
50		12.3	11.3	9.7	9.1	7.5	6.8	5.9
52			10.1	8.8	8.4	6.9	6.7	5.3
54			9.0	7.7	7.4	6.2	6.0	4.7
56				6.8	6.4	5.6	5.4	4.3
58				5.8	5.7	4.9	5.0	3.8
60						4.3	4.1	3.3
62						3.5	3.5	2.9
64						2.9	2.9	2.4
66							2.1	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2	1

3、21 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	12.2							
22	11.3							
24	10.5	11.7						
26	9.9	11.2	10.3					
28	9.4	10.8	10.0	10.9	10.4			
30	8.8	10.5	9.9	10.6	10.1	9.9		
32	8.5	10.1	9.8	10.2	9.8	9.7	9.7	
34	8.2	9.8	9.6	9.9	9.6	9.6	9.6	9.1
36		9.6	9.5	9.6	9.5	9.5	9.4	9.0
38		9.3	9.3	9.4	9.5	9.3	9.3	8.4
40		8.9	9.2	9.4	9.4	9.3	9.2	7.8
42		8.6	8.9	9.1	9.3	9.2	9.1	7.4
44		8.4	8.7	9.0	9.2	9.2	9.0	6.9
46		8.3	8.5	8.7	8.9	8.6	8.6	6.3

QAY800 全地面起重机操作手册
起重性能表

48		8.0	8.3	8.5	8.7	7.9	7.9	5.9
50		8.0	8.2	8.3	8.5	7.4	6.8	5.4
52		7.2	8.0	8.2	8.4	6.7	6.2	4.9
54		5.3	6.2	6.8	7.6	6.1	5.7	4.5
56				5.1	6.0	5.6	5.3	4.0
58				3.6	4.5	5.1	4.8	3.6
60				2.1	3.0	3.8	4.1	3.1
62						2.5	3.4	2.6
64							2.2	2.3
66								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	12.2							
22	11.3							
24	10.5	11.7						
26	9.9	11.2	10.3					
28	9.4	10.8	10.0	10.9	10.4			
30	8.8	10.5	9.9	10.6	10.1	9.9		
32	8.5	10.1	9.8	10.2	9.8	9.7	9.7	
34	8.2	9.8	9.6	9.9	9.6	9.6	9.6	9.1
36		9.6	9.5	9.6	9.5	9.5	9.4	9.0
38		9.3	9.3	9.4	9.5	9.3	9.3	8.4
40		8.9	9.2	9.4	9.4	9.3	9.2	7.8
42		8.6	8.9	9.1	9.3	9.2	9.1	7.4
44		8.4	8.7	9.0	9.2	9.2	9.0	6.9
46		8.3	8.5	8.7	8.9	8.6	8.6	6.3
48		8.0	8.3	8.5	8.7	7.9	7.9	5.9
50		8.0	8.2	8.3	8.5	7.4	6.8	5.4
52		7.8	8.0	8.2	8.4	6.7	6.2	4.9
54		7.8	7.9	7.9	7.7	6.1	5.7	4.5
56				7.2	6.7	5.6	5.3	4.0
58				6.6	6.1	5.1	4.8	3.6
60				5.8	5.3	4.5	4.1	3.1
62				4.8	4.7	3.9	3.7	2.6
64					3.6	3.2	3.1	2.3
66					3.1	2.6	2.6	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 21								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	12.2							

QAY800 全地面起重机操作手册
起重性能表

22	11.3							
24	10.5	11.7						
26	9.9	11.2	10.3					
28	9.4	10.8	10.0	10.9	10.4			
30	8.8	10.5	9.9	10.6	10.1	9.9		
32	8.5	10.1	9.8	10.2	9.8	9.7	9.7	
34	8.2	9.8	9.6	9.9	9.6	9.6	9.6	9.1
36		9.6	9.5	9.6	9.5	9.5	9.4	9.0
38		9.3	9.3	9.4	9.5	9.3	9.3	8.4
40		8.9	9.2	9.4	9.4	9.3	9.2	7.8
42		8.6	8.9	9.1	9.3	9.2	9.1	7.4
44		8.4	8.7	9.0	9.2	9.2	9.0	6.9
46		8.3	8.5	8.7	8.9	8.6	8.6	6.3
48		8.0	8.3	8.5	8.7	7.9	7.9	5.9
50		8.0	8.2	8.3	8.5	7.4	6.8	5.4
52		7.8	8.0	8.2	8.4	6.7	6.2	4.9
54		7.8	7.9	7.9	7.7	6.1	5.7	4.5
56				7.2	6.7	5.6	5.3	4.0
58				6.6	6.1	5.1	4.8	3.6
60				5.8	5.3	4.5	4.1	3.1
62				4.8	4.7	3.9	3.7	2.6
64					3.6	3.2	3.1	2.3
66					3.1	2.6	2.6	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1

4、28 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	8.2							
26	7.6							
28	7.0							
30	6.6	7.3	6.6					
32	6.2	7.0	6.5	7.0				
34	5.8	6.7	6.3	6.7	6.2			
36	5.5	6.5	6.2	6.5	6.2	6.3		
38	5.3	6.3	6.2	6.3	6.2	6.1	5.9	
40	5.1	6.0	6.0	6.1	6.1	6.0	5.9	6.0
42		5.8	5.8	6.0	5.9	6.0	5.9	5.9
44		5.7	5.8	5.9	5.9	5.8	5.8	5.7
46		5.6	5.7	5.8	5.8	5.8	5.7	5.4

QAY800 全地面起重机操作手册
起重性能表

48		5.4	5.6	5.7	5.7	5.7	5.7	5.1
50		5.3	5.4	5.6	5.7	5.7	5.6	4.6
52		5.2	5.3	5.3	5.5	5.7	5.6	4.3
54		5.1	5.1	5.3	5.3	5.6	5.6	3.9
56		5.0	5.0	5.2	5.2	5.3	5.4	3.6
58		4.8	4.9	5.0	5.2	4.7	4.7	3.2
60		4.1	4.7	4.8	5.0	4.3	4.0	2.9
62			3.3	3.8	4.5	3.8	3.4	2.4
64				2.4	3.2	3.3	2.9	2.0
66						2.6	2.7	
68							2.2	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	8.2							
26	7.6							
28	7.0							
30	6.6	7.3	6.6					
32	6.2	7.0	6.5	7.0				
34	5.8	6.7	6.3	6.7	6.2			
36	5.5	6.5	6.2	6.5	6.2	6.3		
38	5.3	6.3	6.2	6.3	6.2	6.1	5.9	
40	5.1	6.0	6.0	6.1	6.1	6.0	5.9	6.0
42		5.8	5.8	6.0	5.9	6.0	5.9	5.9
44		5.7	5.8	5.9	5.9	5.8	5.8	5.7
46		5.6	5.7	5.8	5.8	5.8	5.7	5.4
48		5.4	5.6	5.7	5.7	5.7	5.7	5.1
50		5.3	5.4	5.6	5.7	5.7	5.6	4.6
52		5.2	5.3	5.3	5.5	5.7	5.6	4.3
54		5.1	5.1	5.3	5.3	5.6	5.6	3.9
56		5.0	5.0	5.2	5.2	5.3	5.4	3.6
58		4.8	4.9	5.0	5.2	4.7	4.7	3.2
60		4.8	4.8	4.8	5.0	4.3	4.0	2.9
62			4.7	4.8	4.9	3.8	3.4	2.4
64			4.6	4.7	4.4	3.3	2.9	2.0
66				4.1	3.8	2.9	2.7	
68				3.4	2.9	2.4	2.2	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 28								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	8.2							

QAY800 全地面起重机操作手册
起重性能表

26	7.6							
28	7.0							
30	6.6	7.3	6.6					
32	6.2	7.0	6.5	7.0				
34	5.8	6.7	6.3	6.7	6.2			
36	5.5	6.5	6.2	6.5	6.2	6.3		
38	5.3	6.3	6.2	6.3	6.2	6.1	5.9	
40	5.1	6.0	6.0	6.1	6.1	6.0	5.9	6.0
42		5.8	5.8	6.0	5.9	6.0	5.9	5.9
44		5.7	5.8	5.9	5.9	5.8	5.8	5.7
46		5.6	5.7	5.8	5.8	5.8	5.7	5.4
48		5.4	5.6	5.7	5.7	5.7	5.7	5.1
50		5.3	5.4	5.6	5.7	5.7	5.6	4.6
52		5.2	5.3	5.3	5.5	5.7	5.6	4.3
54		5.1	5.1	5.3	5.3	5.6	5.6	3.9
56		5.0	5.0	5.2	5.2	5.3	5.4	3.6
58		4.8	4.9	5.0	5.2	4.7	4.7	3.2
60		4.8	4.8	4.8	5.0	4.3	4.0	2.9
62			4.7	4.8	4.9	3.8	3.4	2.4
64			4.6	4.7	4.4	3.3	2.9	2.0
66				4.1	3.8	2.9	2.7	
68				3.4	2.9	2.4	2.2	
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1

5、 35 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	5.2							
32	4.8							
34	4.5							
36	4.3	4.8						
38	4.0	4.9	4.6	4.5				
40	3.8	4.4	4.4	4.4	4.1			
42	3.6	4.3	4.3	4.3	4.0	4.0		
44	3.4	4.1	4.1	4.2	4.0	3.9	3.7	
46	3.3	4.0	4.0	4.1	3.9	3.8	3.6	3.6
48	3.2	3.9	3.9	3.9	3.7	3.7	3.5	3.6
50		3.8	3.8	3.8	3.6	3.6	3.5	3.4
52		3.7	3.7	3.7	3.5	3.5	3.5	3.4
54		3.6	3.6	3.7	3.4	3.4	3.3	3.0

QAY800 全地面起重机操作手册
起重性能表

56		3.5	3.5	3.6	3.4	3.4	3.3	3.0
58		3.4	3.4	3.4	3.3	3.3	3.3	2.8
60		3.3	3.3	3.3	3.2	3.2	3.2	2.4
62		3.2	3.2	3.3	3.1	3.1	3.1	
64		3.1	3.1	3.1	2.9	2.8	2.8	
66		2.9	3.1	3.1	2.8	2.4	2.3	
68			2.1	2.5	2.8	2.1		
70								
72								
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角40_副臂长度35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	5.2							
32	4.8							
34	4.5							
36	4.3	4.8						
38	4.0	4.9	4.6	4.5				
40	3.8	4.4	4.4	4.4	4.1			
42	3.6	4.3	4.3	4.3	4.0	4.0		
44	3.4	4.1	4.1	4.2	4.0	3.9	3.7	
46	3.3	4.0	4.0	4.1	3.9	3.8	3.6	3.6
48	3.2	3.9	3.9	3.9	3.7	3.7	3.5	3.6
50		3.8	3.8	3.8	3.6	3.6	3.5	3.4
52		3.7	3.7	3.7	3.5	3.5	3.5	3.4
54		3.6	3.6	3.7	3.4	3.4	3.3	3.0
56		3.5	3.5	3.6	3.4	3.4	3.3	3.0
58		3.4	3.4	3.4	3.3	3.3	3.3	2.8
60		3.3	3.3	3.3	3.2	3.2	3.2	2.4
62		3.2	3.2	3.3	3.1	3.1	3.1	
64		3.1	3.1	3.1	2.9	2.8	2.8	
66		3.1	3.1	3.1	2.8	2.4	2.3	
68		3.0	3.0	3.0	2.8	2.1		
70		3.0	3.0	3.0	2.7			
72		2.9	2.8	2.7	2.2			
74			2.5	2.3				
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 35								
R/L	16.8+2.6	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	5.2							
32	4.8							
34	4.5							

QAY800 全地面起重机操作手册
起重性能表

36	4.3	4.8						
38	4.0	4.9	4.6	4.5				
40	3.8	4.4	4.4	4.4	4.1			
42	3.6	4.3	4.3	4.3	4.0	4.0		
44	3.4	4.1	4.1	4.2	4.0	3.9	3.7	
46	3.3	4.0	4.0	4.1	3.9	3.8	3.6	3.6
48	3.2	3.9	3.9	3.9	3.7	3.7	3.5	3.6
50		3.8	3.8	3.8	3.6	3.6	3.5	3.4
52		3.7	3.7	3.7	3.5	3.5	3.5	3.4
54		3.6	3.6	3.7	3.4	3.4	3.3	3.0
56		3.5	3.5	3.6	3.4	3.4	3.3	3.0
58		3.4	3.4	3.4	3.3	3.3	3.3	2.8
60		3.3	3.3	3.3	3.2	3.2	3.2	2.4
62		3.2	3.2	3.3	3.1	3.1	3.1	
64		3.1	3.1	3.1	2.9	2.8	2.8	
66		3.1	3.1	3.1	2.8	2.4	2.3	
68		3.0	3.0	3.0	2.8	2.1		
70		3.0	3.0	3.0	2.7			
72		2.9	2.8	2.7	2.2			
74			2.5	2.3				
主臂组合	000000	222000	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1	1

十一、 七节主臂+超起性能表—全伸支腿，超起安装角 20° (单边)

1、 七节臂主臂超起_支腿全伸_平衡重 50t

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
6	160.0	160.0																
7	160.0	160.0																
8	160.0	157.3	159.8	159.6	158.2	159.8												
9	160.0	157.1	159.6	158.1	158.3	156.8	133.4	153.1										
10	159.8	156.6	159.3	157.7	154.7	153.1	137.5	148.7	142.2	150.6								
12	158.5	154.0	152.5	149.9	147.2	144.6	141.2	138.7	143.1	138.8	136.1	141.0	133.3	131.7				
14	136.0	129.0	133.0	130.0	130.0	127.0	130.0	125.0	130.0	124.0	128.0	124.0	126.0	123.0	112.7	113.5		
16	116.0	109.0	114.0	111.0	111.0	108.0	112.0	107.0	111.0	106.0	110.0	106.0	109.0	106.0	105.8	104.1		
18	100.0	93.0	99.0	95.0	96.0	93.0	97.0	92.0	97.0	91.0	96.0	92.0	95.0	92.0	94.0	92.0	88.8	76.8
20	87.0	77.6	86.0	82.8	84.0	81.0	85.0	80.0	85.0	80.0	85.0	81.0	84.0	81.0	83.0	81.0	81.0	72.6
22	72.0	62.5	72.9	67.6	72.3	67.0	75.0	68.0	76.0	69.0	76.0	71.0	75.0	71.0	74.0	71.0	72.0	69.1
24	59.9	50.6	60.8	55.7	60.3	55.1	64.0	56.2	66.3	57.2	67.7	61.0	67.0	62.7	66.0	64.0	64.0	64.0
26	50.1	40.9	51.1	46.1	50.7	45.6	54.3	46.6	56.6	47.6	58.0	51.4	58.5	53.1	58.3	55.0	57.0	57.0
28	42.0	33.0	43.1	38.1	42.7	37.7	46.3	38.8	48.7	39.8	50.0	43.5	50.5	45.2	50.3	47.1	49.1	49.7
30	35.1	26.2	36.4	31.5	36.1	31.1	39.7	32.2	42.0	33.3	43.4	37.0	43.8	38.6	43.6	40.4	42.5	43.1
32	29.1	20.3	30.6	25.7	30.4	25.5	34.0	26.6	36.3	27.7	37.7	31.4	38.2	33.0	38.0	34.8	36.8	37.4
34			25.6	20.8	25.5	20.6	29.1	21.8	31.4	22.9	32.8	26.5	33.3	28.2	33.1	30.0	32.0	32.6
36			21.1	16.3	21.2	16.3	24.8	17.6	27.2	18.7	28.6	22.3	29.1	24.0	28.9	25.8	27.8	28.4
38			17.1	12.3	17.3	12.6	21.0	13.9	23.4	15.0	24.8	18.7	25.3	20.3	25.2	22.1	24.1	24.7
40					13.9	9.2	17.7	10.6	20.1	11.7	21.5	15.4	22.0	17.0	21.9	18.9	20.8	21.4
42							14.7	7.6	17.1	8.8	18.5	12.5	19.1	14.1	19.0	15.9	17.9	18.5

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
44							11.9	4.9	14.4	6.1	15.9	9.8	16.4	11.5	16.3	13.3	15.3	15.9
46									12.0	3.7	13.5	7.4	14.1	9.1	14.0	11.0	12.9	13.6
48									9.7		11.3	5.3	11.9	7.0	11.8	8.8	10.8	11.4
50											9.2	3.3	9.9	5.0	9.8	6.9	8.8	9.5
52											7.4		8.1	3.2	8.0	5.1	7.0	7.7
54											5.6		6.4		6.4	3.4	5.4	6.0
56											4.0		4.8		4.8		3.9	4.5
58													3.3		3.4		2.4	3.1
60															2.0			
62																		
主臂组合	001111	111100	011111	111110	111111	211110	111112	221110	111122	222200	111222	222111	112222	222211	122222	222221	222222	333333
倍率	13	13	13	13	13	13	11	12	11	12	11	11	11	10	9	9	7	6

2、七节臂主臂超起_支腿全伸_平衡重 80t

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
6	160.0	160.0																
7	160.0	160.0																
8	160.0	157.3	159.8	159.6	158.2	159.8												
9	160.0	157.1	159.6	158.1	158.3	156.8	133.4	153.1										
10	159.8	156.6	159.3	157.7	154.7	153.1	137.5	148.7	142.2	150.6								
12	158.5	154.0	152.5	149.9	147.2	144.6	141.2	138.7	143.1	138.8	136.1	141.0	133.3	131.7				
14	145.0	140.0	143.0	141.0	140.0	137.7	134.4	130.8	135.8	132.1	134.0	131.3	126.1	124.4	112.7	113.5		
16	129.0	122.0	127.0	123.0	124.0	121.0	124.0	119.0	124.0	118.0	122.0	118.0	117.8	115.1	105.8	104.1		
18	111.0	105.0	110.0	107.0	108.0	104.0	108.0	103.0	108.0	102.0	107.0	103.0	106.0	102.0	98.5	97.6	88.8	76.8

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
20	98.0	91.0	96.0	93.0	94.0	91.0	95.0	90.0	95.0	89.0	95.0	90.0	94.0	90.0	92.0	90.0	83.8	72.6
22	86.0	80.0	85.0	82.0	84.0	80.0	85.0	80.0	85.0	79.0	84.0	80.0	84.0	80.0	82.0	80.0	79.1	69.1
24	76.0	68.5	76.0	72.0	74.0	71.0	76.0	70.0	76.0	70.0	76.0	72.0	75.0	72.0	74.0	72.0	72.0	65.5
26	66.3	57.1	67.3	62.2	66.0	61.7	68.0	62.8	68.0	63.0	68.0	64.0	68.0	64.0	67.0	65.0	65.0	62.0
28	56.7	47.7	57.8	52.9	57.4	52.4	61.0	53.5	62.0	54.5	62.0	58.0	61.0	58.0	61.0	58.0	59.0	59.0
30	48.6	39.7	49.9	45.0	49.6	44.6	53.2	45.7	55.5	46.8	56.0	50.5	56.0	52.0	55.0	53.0	54.0	53.0
32	41.6	32.8	43.1	38.2	42.8	38.0	46.5	39.1	48.8	40.2	50.2	43.8	50.6	45.5	50.0	47.3	49.0	49.0
34			37.2	32.3	37.1	32.2	40.7	33.4	43.0	34.5	44.4	38.1	44.9	39.8	44.7	41.6	43.6	44.2
36			32.0	27.2	32.0	27.2	35.6	28.4	38.0	29.5	39.4	33.2	39.9	34.8	39.7	36.6	38.6	39.2
38			27.3	22.5	27.5	22.7	31.2	24.0	33.6	25.2	35.0	28.8	35.5	30.4	35.3	32.3	34.3	34.8
40					23.5	18.7	27.2	20.1	29.6	21.3	31.1	24.9	31.6	26.6	31.5	28.4	30.4	31.0
42							23.7	16.6	26.1	17.8	27.6	21.5	28.1	23.1	28.0	25.0	26.9	27.5
44							20.5	13.4	23.0	14.7	24.4	18.4	25.0	20.1	24.9	21.9	23.9	24.5
46									20.1	11.9	21.6	15.6	22.2	17.3	22.1	19.1	21.1	21.7
48									17.5	9.3	19.0	13.0	19.6	14.7	19.6	16.6	18.5	19.2
50											16.6	10.7	17.3	12.4	17.2	14.3	16.2	16.9
52											14.5	8.5	15.1	10.3	15.1	12.1	14.1	14.8
54											12.4	6.5	13.1	8.3	13.1	10.2	12.2	12.8
56											10.5	4.6	11.3	6.4	11.3	8.4	10.4	11.0
58													9.6	4.7	9.6	6.7	8.7	9.4
60													7.9	3.1	8.0	5.1	7.2	7.8
62													6.4		6.6	3.6	5.7	6.4
64															5.2	2.2	4.3	5.0
66															3.8		3.0	3.8
68																		2.6
70																		
72																		

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
主臂组合	001111	111100	011111	111110	111111	211110	111112	221110	111122	222200	111222	222111	112222	222211	122222	222221	222222	333333
倍率	13	13	13	13	13	13	11	12	11	12	11	11	11	10	9	9	7	6

3、七节臂主臂超起_支腿全伸_平衡重 110t

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
6	160.0	160.0																
7	160.0	160.0																
8	160.0	157.3	159.8	159.6	158.2	159.8												
9	160.0	157.1	159.6	158.1	158.3	156.8	133.4	153.1										
10	159.8	156.6	159.3	157.7	154.7	153.1	137.5	148.7	142.2	150.6								
12	158.5	154.0	152.5	149.9	147.2	144.6	141.2	138.7	143.1	138.8	136.1	141.0	133.3	131.7				
14	150.0	146.0	146.4	143.6	140.5	137.7	134.4	130.8	135.8	132.1	134.0	131.3	126.1	124.4	112.7	113.5		
16	133.0	128.0	131.0	129.0	129.0	126.0	128.4	124.6	128.0	123.0	126.8	122.9	117.8	115.1	105.8	104.1		
18	119.0	114.0	118.0	115.0	115.0	113.0	115.0	111.0	115.0	110.0	113.5	109.7	106.8	104.0	98.5	97.6	88.8	76.8
20	107.0	102.0	106.0	103.0	104.0	101.0	104.0	100.0	104.0	99.0	102.0	98.2	98.0	96.2	92.4	90.6	83.8	72.6
22	96.0	89.0	95.0	91.0	93.0	89.0	94.0	89.0	94.0	88.0	93.0	89.0	90.5	87.7	85.9	84.0	79.1	69.1
24	85.0	79.0	85.0	81.0	83.0	79.0	84.0	79.0	84.0	78.0	84.0	80.0	82.6	79.8	78.3	76.5	73.3	65.5
26	76.0	70.0	76.0	72.0	74.0	71.0	76.0	71.0	76.0	70.0	76.0	72.0	75.0	72.0	72.4	70.5	67.5	62.0
28	69.0	62.0	68.0	65.0	67.0	64.0	69.0	63.0	69.0	63.0	69.0	65.0	68.0	65.0	66.4	64.6	62.5	59.2
30	62.0	53.2	62.0	58.0	61.0	57.0	62.0	57.0	63.0	57.0	63.0	59.0	63.0	59.0	62.0	59.0	58.5	55.3
32	54.0	45.2	55.5	50.7	55.0	50.4	57.0	51.6	58.0	52.0	58.0	53.0	57.0	54.0	56.0	54.0	55.0	51.3
34			48.8	43.9	48.6	43.8	52.0	45.0	53.0	46.1	53.0	49.0	53.0	49.0	52.0	50.0	50.0	48.5
36			42.8	38.0	42.8	38.0	46.5	39.2	48.0	40.3	49.0	44.0	49.0	45.0	48.0	46.0	46.0	46.0
38			37.4	32.6	37.6	32.9	41.3	34.2	43.7	35.3	45.0	39.0	45.0	40.0	44.0	42.0	43.0	43.0
40					33.0	28.3	36.8	29.7	39.2	30.8	40.6	34.5	40.0	36.1	40.0	38.0	39.0	38.0

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
42							32.7	25.6	35.2	26.9	36.6	30.5	37.2	32.2	37.0	34.0	36.0	36.0
44							29.0	22.0	31.5	23.3	33.0	26.9	33.6	28.6	33.5	30.4	32.4	33.0
46									28.2	20.0	29.7	23.7	30.3	25.4	30.2	27.2	29.2	29.8
48									25.2	17.0	26.8	20.8	27.4	22.5	27.3	24.3	26.3	26.9
50											24.0	18.1	24.7	19.8	24.6	21.6	23.6	24.3
52											21.5	15.6	22.2	17.3	22.2	19.2	21.2	21.8
54											19.2	13.3	19.9	15.1	19.9	17.0	19.0	19.6
56											17.0	11.1	17.8	13.0	17.8	14.9	16.9	17.5
58													15.8	11.0	15.9	12.9	15.0	15.6
60													14.0	9.1	14.1	11.1	13.2	13.9
62													12.2	7.4	12.4	9.4	11.5	12.2
64															10.8	7.9	10.0	10.7
66															9.3	6.3	8.5	9.2
68																	7.1	7.8
70																	5.8	6.6
72																		5.3
74																		4.2
76																		3.0
78																		2.0
主臂组合	001111	111100	011111	111110	111111	211110	111112	221110	111122	222200	111222	222111	112222	222211	122222	222221	222222	333333
倍率	13	13	13	13	13	13	11	12	11	12	11	11	11	10	9	9	7	6

4、七节臂主臂超起_支腿全伸_平衡重 140t

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
6	160.0	160.0																

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
7	160.0	160.0																
8	160.0	157.3	159.8	159.6	158.2	159.8												
9	160.0	157.1	159.6	158.1	158.3	156.8	133.4	153.1										
10	159.8	156.6	159.3	157.7	154.7	153.1	137.5	148.7	142.2	150.6								
12	158.5	154.0	152.5	149.9	147.2	144.6	141.2	138.7	143.1	138.8	136.1	141.0	133.3	131.7				
14	154.9	149.9	146.4	143.6	140.5	137.7	134.4	130.8	135.8	132.1	134.0	131.3	126.1	124.4	112.7	113.5		
16	138.0	133.0	136.0	133.0	133.0	131.0	128.4	124.6	129.2	124.3	126.8	122.9	117.8	115.1	105.8	104.1		
18	123.0	118.0	122.0	119.0	119.0	117.0	115.0	111.1	118.1	113.1	113.5	109.7	106.8	104.0	98.5	97.6	88.8	76.8
20	111.0	106.0	110.0	107.0	108.0	105.0	104.0	100.1	106.6	101.7	102.0	98.2	98.0	96.2	92.4	90.6	83.8	72.6
22	98.8	93.9	99.0	96.0	97.0	95.0	94.0	90.2	98.0	93.0	94.8	91.8	90.5	87.7	85.9	84.0	79.1	69.1
24	88.3	83.5	90.0	87.0	89.0	86.0	85.0	80.3	89.8	84.8	86.8	82.9	82.6	79.8	78.3	76.5	73.3	65.5
26	79.3	74.5	81.9	78.9	81.0	78.0	78.0	74.2	82.0	77.0	80.3	76.3	77.0	74.2	72.4	70.5	67.5	62.0
28	71.8	66.1	74.4	70.5	74.0	71.0	71.0	66.3	75.2	69.2	74.0	70.1	71.0	68.2	66.4	64.6	62.5	59.2
30	65.1	59.3	67.6	63.7	67.0	64.0	64.0	59.4	69.2	63.3	68.0	63.2	66.7	62.8	63.0	61.2	58.5	55.3
32	54.0	48.2	61.6	57.7	61.0	58.0	58.0	53.4	63.8	57.8	63.3	59.3	62.2	59.2	59.5	57.6	55.5	51.3
34			54.0	51.2	56.0	53.0	53.0	48.4	59.0	53.0	58.8	53.8	57.7	54.7	56.0	53.1	53.0	48.5
36			46.0	43.0	51.0	48.0	48.0	43.5	54.0	48.0	54.0	50.0	53.6	49.6	52.6	50.6	50.3	46.3
38			37.5	34.3	46.0	42.0	44.0	39.5	50.0	44.0	50.0	46.0	50.0	46.0	48.8	46.8	47.3	44.8
40					41.0	36.4	39.0	33.8	46.0	39.0	47.0	42.0	46.0	43.0	45.8	42.8	44.0	42.5
42							34.6	28.7	43.0	35.8	43.0	38.0	43.0	39.0	42.0	39.0	40.0	40.0
44							30.5	24.8	39.0	31.7	39.0	35.0	39.0	36.0	39.0	36.0	37.0	37.0
46									36.0	28.1	37.0	31.8	37.0	33.0	36.0	34.0	35.0	35.0
48									32.9	24.7	34.0	28.4	34.0	30.1	34.0	31.0	32.0	32.0
50											31.4	25.4	32.0	27.1	31.0	29.0	30.0	30.0
52											28.6	22.6	29.2	24.3	29.0	26.2	28.0	28.0
54											25.9	20.0	26.6	21.8	26.6	23.7	25.7	26.0
56											23.5	17.6	24.3	19.4	24.3	21.3	23.3	24.0

R/L	37.4	37.4	42.6	42.6	47.7	47.7	52.9	52.9	58.0	58.0	63.2	63.2	68.3	68.3	73.5	73.5	78.6	84
58													22.0	17.2	22.1	19.2	21.2	21.8
60													20.0	15.1	20.1	17.1	19.2	19.8
62													18.0	13.2	18.2	15.2	17.3	18.0
64															16.4	13.4	15.5	16.2
66															14.7	11.7	13.9	14.6
68																	12.3	13.1
70																	10.8	11.6
72																		10.2
74																		8.9
76																		7.7
78																		6.5
主臂组合	001111	111100	011111	111110	111111	211110	111112	221110	111122	222200	111222	222111	112222	222211	122222	222221	222222	333333
倍率	13	13	13	13	13	13	11	12	11	12	11	11	11	10	9	9	7	6

十二、 四节主臂+超起性能表—全伸支腿，超起安装角 20° (单边)

1、 四节臂主臂超起_支腿全伸_平衡重 50t

R/L	33.9	39.0	44.2	49.3	52.0
5	292.0				
6	264.0	256.0			
7	240.0	233.0	227.0		
8	219.0	213.0	208.0	203.0	200.0
9	202.0	197.0	192.0	187.0	185.0
10	187.0	182.0	178.0	173.0	171.0
12	161.0	157.0	154.0	150.0	148.0
14	135.0	132.0	130.0	126.0	125.0
16	115.0	113.0	111.0	108.0	107.0
18	99.0	98.0	96.0	94.0	93.0
20	85.2	85.0	85.0	83.0	82.0
22	70.2	71.7	73.9	73.0	73.0
24	58.3	60.0	62.2	62.3	63.0
26	48.7	50.5	52.8	52.9	53.6
28	40.6	42.6	45.0	45.2	45.9
30	33.6	36.0	38.5	38.7	39.4
32		30.3	32.9	33.1	33.9
34		25.2	28.0	28.4	29.1
36			23.7	24.2	25.0
38			19.9	20.5	21.3
40			16.4	17.2	18.0
42				14.2	15.1
44				11.4	12.4
46				8.7	9.9
48					7.5
50					5.1
主臂组合	012	112	122	222	333
倍率	26	22	19	17	16

2、 四节臂主臂超起_支腿全伸_平衡重 80t

R/L	33.9	39.0	44.2	49.3	52.0
5	295.0				
6	270.0	258.7			
7	247.0	241.0	235.0		
8	227.0	221.0	215.0	210.0	207.0

R/L	33.9	39.0	44.2	49.3	52.0
9	208.0	203.0	199.0	193.0	191.0
10	193.0	188.0	184.0	179.0	177.0
12	167.0	163.0	160.0	156.0	154.0
14	147.0	143.0	141.0	137.0	136.0
16	128.0	125.0	123.0	120.0	119.0
18	111.0	109.0	107.0	105.0	104.0
20	97.0	96.0	95.0	92.0	92.0
22	86.0	85.0	84.0	82.0	81.0
24	76.0	75.0	75.0	73.0	73.0
26	64.9	66.7	67.0	66.0	66.0
28	55.4	57.4	59.7	59.9	59.0
30	36.0	49.5	52.0	52.2	52.9
32		42.7	45.3	45.6	46.4
34		36.8	39.6	40.0	40.7
36			34.6	35.0	35.8
38			30.0	30.6	31.5
40			25.9	26.7	27.6
42				23.2	24.1
44				19.9	20.9
46				16.9	18.0
48					15.3
50					12.5
主臂组合	012	112	122	222	333
倍率	26	22	20	17	17

3、四节臂主臂超起_支腿全伸_平衡重 110t

R/L	33.9	39.0	44.2	49.3	52.0
5	295.0				
6	270.0	258.7			
7	255.0	248.0	242.0		
8	234.0	228.0	222.0	216.0	214.0
9	215.0	210.0	205.0	200.0	197.0
10	199.0	194.0	190.0	185.0	183.0
12	173.0	169.0	165.0	161.0	159.0
14	152.0	148.0	145.0	142.0	140.0
16	134.0	132.0	129.0	126.0	125.0
18	120.0	118.0	116.0	113.0	112.0
20	108.0	106.0	104.0	102.0	101.0
22	95.0	94.0	93.0	91.0	90.0
24	85.0	84.0	83.0	81.0	81.0

QAY800 全地面起重机操作手册
起重性能表

R/L	33.9	39.0	44.2	49.3	52.0
26	76.0	75.0	75.0	73.0	73.0
28	66.0	68.0	68.0	67.0	66.0
30	36.0	62.0	62.0	61.0	60.0
32		55.2	56.0	55.0	55.0
34		48.4	51.0	50.0	50.0
36			45.4	45.8	46.0
38			40.2	40.8	41.6
40			35.5	36.3	37.2
42				32.2	33.1
44				28.5	29.5
46				25.0	26.2
48					22.0
50					14.0
主臂组合	012	112	122	222	333
倍率	26	22	21	18	18

4、四节臂主臂超起_支腿全伸_平衡重 140t

R/L	33.9	39.0	44.2	49.3	52.0
5	295.0				
6	270.0	258.7			
7	263.0	256.0	247.9		
8	241.0	234.0	229.0	223.0	214.3
9	222.0	216.0	211.0	206.0	201.9
10	205.0	200.0	196.0	191.0	188.0
12	182.0	174.0	170.0	166.0	164.0
14	162.0	153.0	150.0	146.0	145.0
16	145.0	136.0	134.0	130.0	129.0
18	130.0	122.0	120.0	117.0	116.0
20	120.0	110.0	109.0	106.0	105.0
22	105.0	98.3	98.3	96.0	96.0
24	90.0	87.8	87.8	87.7	86.6
26	80.0	78.8	78.9	79.4	78.8
28	66.0	71.3	71.4	72.0	71.6
30	36.0	64.7	65.3	65.2	64.9
32		58.7	59.3	59.3	59.3
34		50.6	54.1	54.7	54.4
36			49.6	50.2	49.9
38			45.8	45.8	45.8
40			37.6	42.7	42.4
42				39.0	39.0

R/L	33.9	39.0	44.2	49.3	52.0
44				35.5	35.6
46				26.8	29.8
48					22.0
50					14.0
主臂组合	012	112	122	222	333
倍率	26	22	21	19	18

十三、 变幅副臂+超起性能表—主臂仰角 83°，超起安装角 42° (单边)

1、 21 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	125.0	125.0		
16	125.0	125.0	124.5	122.1
18	120.0	119.0	115.5	113.3
20	109.0	107.0	106.0	104.7
22	99.0	98.0	97.0	96.0
24	91.0	90.0	89.0	87.9
26			81.1	79.9
主臂组合	210	220	221	222
倍率	10	10	10	10
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	125.0	125.0		
16	125.0	125.0	124.5	122.1
18	121.5	119.8	115.5	113.3
20	111.8	110.7	106.8	104.7
22	102.2	101.6	98.3	96.2
24	92.7	92.5	89.9	87.9
26			81.6	79.9
主臂组合	210	220	221	222
倍率	10	10	10	10
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
14	125.0	125.0		
16	125.0	125.0	124.5	122.1
18	121.5	119.8	115.5	113.3

20	111.8	110.7	106.8	104.7
22	102.2	101.6	98.3	96.2
24	92.7	92.5	89.9	87.9
26			81.6	79.9
主臂组合	210	220	221	222
倍率	10	10	10	10

2、28 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	105.0	105.0		
18	105.0	105.0	105.0	
20	105.0	104.0	101.3	101.0
22	96.0	95.0	94.0	93.0
24	89.0	88.0	87.0	86.0
26	82.0	81.0	80.0	79.0
28	74.5	73.8	73.4	72.9
30	67.8	67.2	66.8	66.3
32	61.9	61.4	61.1	60.7
34				55.7
主臂组合	210	220	221	222
倍率	8	8	8	8
支腿全伸_平衡重 80_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	105.0	105.0		
18	105.0	105.0	105.0	
20	105.0	105.0	101.3	101.0
22	100.8	99.7	94.8	94.4
24	93.5	92.9	88.4	88.0
26	86.2	86.1	82.1	81.7
28	79.0	79.2	75.9	75.5
30	71.8	72.4	69.8	69.5
32	64.7	65.6	63.6	63.6
34				57.8
主臂组合	210	220	221	222
倍率	8	8	8	8
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
16	105.0	105.0		
18	105.0	105.0	105.0	
20	105.0	105.0	101.3	101.0

22	100.8	99.7	94.8	94.4
24	93.5	92.9	88.4	88.0
26	86.2	86.1	82.1	81.7
28	79.0	79.2	75.9	75.5
30	71.8	72.4	69.8	69.5
32	64.7	65.6	63.6	63.6
34				57.8
主臂组合	210	220	221	222
倍率	8	8	8	8

3、 35 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	90.0			
20	90.0	90.0	90.0	
22	90.0	90.0	89.2	88.0
24	86.0	85.0	84.0	83.0
26	80.0	79.0	78.0	77.0
28	74.0	73.0	72.9	72.0
30	67.6	66.9	66.4	65.9
32	62.0	61.4	60.9	60.5
34	57.1	56.6	56.2	55.7
36	52.8	52.3	52.0	51.6
38	49.0	48.6	48.3	47.9
40			44.9	44.6
主臂组合	210	220	221	222
倍率	7	7	7	7
支腿全伸_平衡重80_主臂仰角83_副臂长度35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	90.0			
20	90.0	90.0	90.0	
22	90.0	90.0	89.2	88.0
24	87.4	86.2	84.4	83.2
26	82.2	81.5	79.7	78.5
28	77.0	76.7	75.1	73.8
30	71.8	71.9	70.6	69.3
32	66.7	67.1	66.1	64.8
34	61.5	62.2	61.7	60.5
36	56.4	57.3	57.2	56.3
38	51.3	52.5	52.6	52.1
40			48.1	47.9

QAY800 全地面起重机操作手册
起重性能表

主臂组合	210	220	221	222
倍率	7	7	7	7
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
18	90.0			
20	90.0	90.0	90.0	
22	90.0	90.0	89.2	88.0
24	87.4	86.2	84.4	83.2
26	82.2	81.5	79.7	78.5
28	77.0	76.7	75.1	73.8
30	71.8	71.9	70.6	69.3
32	66.7	67.1	66.1	64.8
34	61.5	62.2	61.7	60.5
36	56.4	57.3	57.2	56.3
38	51.3	52.5	52.6	52.1
40			48.1	47.9
主臂组合	210	220	221	222
倍率	7	7	7	7

4、 42 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	79.9			
22	79.5	80.0	79.1	
24	78.9	78.0	76.7	70.8
26	76.7	75.6	74.3	68.5
28	72.0	71.0	70.8	65.3
30	67.0	66.3	65.8	62.0
32	61.4	60.8	60.3	58.8
34	56.6	56.0	55.6	55.1
36	52.4	51.9	51.5	51.1
38	48.7	48.2	47.9	47.5
40	45.5	45.0	44.7	44.3
42	42.5	42.1	41.8	41.4
44	39.9	39.5	39.2	38.9
46	37.4	37.0	36.8	36.5
主臂组合	210	220	221	222
倍率	6	6	6	6
支腿全伸_平衡重80_主臂仰角83_副臂长度42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	79.9			

QAY800 全地面起重机操作手册
起重性能表

22	79.5	80.0	79.1	
24	78.9	78.0	76.7	70.8
26	76.7	75.6	74.3	68.5
28	73.1	72.4	70.8	65.3
30	69.5	69.1	67.5	62.0
32	65.8	65.7	64.3	58.8
34	62.1	62.3	61.1	55.7
36	58.4	58.9	58.0	52.7
38	54.7	55.4	54.8	49.7
40	51.0	51.8	51.5	46.8
42	47.3	48.3	48.2	44.0
44	43.6	44.7	44.9	41.1
46	40.0	41.2	41.5	38.2
主臂组合	210	220	221	222
倍率	6	6	6	6
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
20	79.9			
22	79.5	80.0	79.1	
24	78.9	78.0	76.7	70.8
26	76.7	75.6	74.3	68.5
28	73.1	72.4	70.8	65.3
30	69.5	69.1	67.5	62.0
32	65.8	65.7	64.3	58.8
34	62.1	62.3	61.1	55.7
36	58.4	58.9	58.0	52.7
38	54.7	55.4	54.8	49.7
40	51.0	51.8	51.5	46.8
42	47.3	48.3	48.2	44.0
44	43.6	44.7	44.9	41.1
46	40.0	41.2	41.5	38.2
主臂组合	210	220	221	222
倍率	6	6	6	6

5、 49 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	57.3			
24	51.6	54.1		
26	46.9	49.0	51.6	53.8
28	43.2	44.4	46.5	48.5

QAY800 全地面起重机操作手册
起重性能表

30	39.5	41.1	43.2	44.8
32	36.3	37.3	39.0	41.7
34	33.7	34.8	36.0	37.5
36	31.4	32.4	33.5	34.7
38	29.8	30.5	31.0	32.1
40	28.3	29.0	29.5	30.0
42	26.5	27.3	27.9	28.9
44	24.9	25.6	26.4	26.9
46	23.7	24.3	24.8	25.3
48	22.3	22.9	23.4	24.3
50	20.7	21.7	22.2	22.7
52	19.1	20.0	20.8	21.5
54			19.1	19.9
主臂组合	210	220	221	222
倍率	5	4	4	4
支腿全伸_平衡重80_主臂仰角83_副臂长度49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	57.3			
24	51.6	54.1		
26	46.9	49.0	51.6	53.8
28	43.2	44.4	46.5	48.5
30	39.5	41.1	43.2	44.8
32	36.3	37.3	39.0	41.7
34	33.7	34.8	36.0	37.5
36	31.4	32.4	33.5	34.7
38	29.8	30.5	31.0	32.1
40	28.3	29.0	29.5	30.0
42	26.5	27.3	27.9	28.9
44	24.9	25.6	26.4	26.9
46	23.7	24.3	24.8	25.3
48	22.3	22.9	23.4	24.3
50	20.7	21.7	22.2	22.7
52	19.1	20.0	20.8	21.5
54			19.1	19.9
主臂组合	210	220	221	222
倍率	5	4	4	4
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	57.3			
24	51.6	54.1		
26	46.9	49.0	51.6	53.8
28	43.2	44.4	46.5	48.5
30	39.5	41.1	43.2	44.8

QAY800 全地面起重机操作手册
起重性能表

32	36.3	37.3	39.0	41.7
34	33.7	34.8	36.0	37.5
36	31.4	32.4	33.5	34.7
38	29.8	30.5	31.0	32.1
40	28.3	29.0	29.5	30.0
42	26.5	27.3	27.9	28.9
44	24.9	25.6	26.4	26.9
46	23.7	24.3	24.8	25.3
48	22.3	22.9	23.4	24.3
50	20.7	21.7	22.2	22.7
52	19.1	20.0	20.8	21.5
54			19.1	19.9
主臂组合	210	220	221	222
倍率	5	4	4	4

6、56 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	52.4			
26	49.6	51.7		
28	45.8	46.8	48.8	49.9
30	42.5	43.8	44.9	46.7
32	39.3	40.6	41.8	43.4
34	35.9	36.7	38.1	39.8
36	33.6	34.6	35.5	36.9
38	31.3	32.1	33.5	34.4
40	29.2	29.8	30.5	31.8
42	27.4	28.1	29.4	29.8
44	25.8	26.3	27.4	27.8
46	24.5	25.2	25.4	26.2
48	23.2	23.8	24.3	24.6
50	22.2	22.7	22.8	23.5
52	21.4	21.7	21.9	22.5
54	20.3	20.7	21.4	21.4
56	18.7	19.3	20.4	20.9
58	17.1	17.7	18.4	19.2
60		16.4	17.0	17.7
主臂组合	210	220	221	222
倍率	4	4	4	4
支腿全伸_平衡重80_主臂仰角83_副臂长度56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8

QAY800 全地面起重机操作手册
起重性能表

24	52.4			
26	49.6	51.7		
28	45.8	46.8	48.8	49.9
30	42.5	43.8	44.9	46.7
32	39.3	40.6	41.8	43.4
34	35.9	36.7	38.1	39.8
36	33.6	34.6	35.5	36.9
38	31.3	32.1	33.5	34.4
40	29.2	29.8	30.5	31.8
42	27.4	28.1	29.4	29.8
44	25.8	26.3	27.4	27.8
46	24.5	25.2	25.4	26.2
48	23.2	23.8	24.3	24.6
50	22.2	22.7	22.8	23.5
52	21.4	21.7	21.9	22.5
54	20.3	20.7	21.4	21.4
56	18.7	19.3	20.4	20.9
58	17.1	17.7	18.4	19.2
60		16.4	17.0	17.7
主臂组合	210	220	221	222
倍率	4	4	4	4
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	52.4			
26	49.6	51.7		
28	45.8	46.8	48.8	49.9
30	42.5	43.8	44.9	46.7
32	39.3	40.6	41.8	43.4
34	35.9	36.7	38.1	39.8
36	33.6	34.6	35.5	36.9
38	31.3	32.1	33.5	34.4
40	29.2	29.8	30.5	31.8
42	27.4	28.1	29.4	29.8
44	25.8	26.3	27.4	27.8
46	24.5	25.2	25.4	26.2
48	23.2	23.8	24.3	24.6
50	22.2	22.7	22.8	23.5
52	21.4	21.7	21.9	22.5
54	20.3	20.7	21.4	21.4
56	18.7	19.3	20.4	20.9
58	17.1	17.7	18.4	19.2
60		16.4	17.0	17.7
主臂组合	210	220	221	222

倍率	4	4	4	4
----	---	---	---	---

7、63 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 83_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	36.5			
28	36.5	36.5		
30	36.3	36.5	35.2	33.6
32	36.0	36.5	35.7	34.1
34	35.9	36.5	35.7	34.5
36	34.9	35.9	35.7	35.0
38	32.4	33.8	34.4	34.8
40	30.1	30.9	32.0	33.4
42	28.4	29.3	29.9	31.1
44	26.4	27.2	27.9	28.8
46	24.7	25.3	26.3	27.1
48	23.5	23.8	24.3	25.2
50	22.1	22.7	23.2	23.9
52	21.1	21.3	21.7	22.5
54	20.1	20.2	20.7	21.3
56	19.3	19.3	19.7	20.3
58	18.7	18.8	19.2	19.2
60	17.8	18.1	18.6	18.7
62	16.3	17.1	17.9	18.1
64	15.2	15.7	16.3	17.0
66	14.4	14.7	15.3	15.5
68				14.7
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重80_主臂仰角83_副臂长度63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	36.5			
28	36.5	36.5		
30	36.3	36.5	35.2	33.6
32	36.0	36.5	35.7	34.1
34	35.9	36.5	35.7	34.5
36	34.9	35.9	35.7	35.0
38	32.4	33.8	34.4	34.8
40	30.1	30.9	32.0	33.4
42	28.4	29.3	29.9	31.1
44	26.4	27.2	27.9	28.8

QAY800 全地面起重机操作手册
起重性能表

46	24.7	25.3	26.3	27.1
48	23.5	23.8	24.3	25.2
50	22.1	22.7	23.2	23.9
52	21.1	21.3	21.7	22.5
54	20.1	20.2	20.7	21.3
56	19.3	19.3	19.7	20.3
58	18.7	18.8	19.2	19.2
60	17.8	18.1	18.6	18.7
62	16.3	17.1	17.9	18.1
64	15.2	15.7	16.3	17.0
66	14.4	14.7	15.3	15.5
68				14.7
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重 110_主臂仰角 83_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
26	36.5			
28	36.5	36.5		
30	36.3	36.5	35.2	33.6
32	36.0	36.5	35.7	34.1
34	35.9	36.5	35.7	34.5
36	34.9	35.9	35.7	35.0
38	32.4	33.8	34.4	34.8
40	30.1	30.9	32.0	33.4
42	28.4	29.3	29.9	31.1
44	26.4	27.2	27.9	28.8
46	24.7	25.3	26.3	27.1
48	23.5	23.8	24.3	25.2
50	22.1	22.7	23.2	23.9
52	21.1	21.3	21.7	22.5
54	20.1	20.2	20.7	21.3
56	19.3	19.3	19.7	20.3
58	18.7	18.8	19.2	19.2
60	17.8	18.1	18.6	18.7
62	16.3	17.1	17.9	18.1
64	15.2	15.7	16.3	17.0
66	14.4	14.7	15.3	15.5
68				14.7
主臂组合	210	220	221	222
倍率	3	3	3	3

十四、 变幅副臂+超起性能表—主臂仰角 75°，超起安装角 42° (单边)

1、 21 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	79.5	78.2		
24	73.9	72.9	71.2	
26	68.3	67.6	66.1	64.9
28	62.7	62.3	61.1	60.2
30	57.1	56.9	56.0	55.4
32			50.9	50.5
34				45.7
主臂组合	210	220	221	222
倍率	6	6	6	5
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	79.5	78.2		
24	73.9	72.9	71.2	
26	68.3	67.6	66.1	64.9
28	62.7	62.3	61.1	60.2
30	57.1	56.9	56.0	55.4
32			50.9	50.5
34				45.7
主臂组合	210	220	221	222
倍率	6	6	6	5
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
22	79.5	78.2		
24	73.9	72.9	71.2	
26	68.3	67.6	66.1	64.9
28	62.7	62.3	61.1	60.2
30	57.1	56.9	56.0	55.4
32			50.9	50.5
34				45.7
主臂组合	210	220	221	222
倍率	6	6	6	5

2、 28 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	70.6			
26	66.6	65.8		
28	62.5	61.9	60.5	
30	58.4	57.3	56.1	54.9
32	53.9	52.5	51.4	50.3
34	49.6	48.3	47.3	46.4
36	45.7	44.6	43.8	42.9
38		41.3	40.6	39.8
40				36.9
主臂组合	210	220	221	222
倍率	6	5	5	4
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	70.6			
26	66.6	65.8		
28	62.5	61.9	60.5	
30	58.4	58.0	56.8	55.9
32	54.3	54.1	53.1	52.4
34	50.2	50.2	49.4	48.8
36	46.0	46.2	45.6	45.3
38		42.3	41.9	41.7
40				38.2
主臂组合	210	220	221	222
倍率	6	5	5	4
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
24	70.6			
26	66.6	65.8		
28	62.5	61.9	60.5	
30	58.4	58.0	56.8	55.9
32	54.3	54.1	53.1	52.4
34	50.2	50.2	49.4	48.8
36	46.0	46.2	45.6	45.3
38		42.3	41.9	41.7
40				38.2
主臂组合	210	220	221	222
倍率	6	5	5	4

3、 35 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	59.9			
30	57.0	56.5		
32	53.3	51.8	50.7	
34	49.1	47.7	46.7	45.6
36	45.4	44.2	43.2	42.2
38	42.2	41.0	40.1	39.2
40	39.3	38.3	37.4	36.6
42	36.7	35.7	35.0	34.2
44		33.4	32.7	32.0
46			30.6	30.0
主臂组合	210	220	221	222
倍率	5	4	4	4
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	59.9			
30	57.0	56.5		
32	54.1	53.7	52.5	
34	51.1	50.9	49.8	49.0
36	48.1	48.0	47.1	46.4
38	45.1	45.1	44.3	43.8
40	42.1	42.3	41.6	41.2
42	39.1	39.4	38.8	38.5
44		36.5	36.0	35.9
46			33.3	33.2
主臂组合	210	220	221	222
倍率	5	4	4	4
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	59.9			
30	57.0	56.5		
32	54.1	53.7	52.5	
34	51.1	50.9	49.8	49.0
36	48.1	48.0	47.1	46.4
38	45.1	45.1	44.3	43.8
40	42.1	42.3	41.6	41.2
42	39.1	39.4	38.8	38.5
44		36.5	36.0	35.9
46			33.3	33.2

主臂组合	210	220	221	222
倍率	5	4	4	4

4、 42 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	54.7			
32	52.0			
34	48.4	47.0	45.9	
36	44.7	43.4	42.4	41.4
38	41.6	40.3	39.4	38.4
40	38.7	37.6	36.7	35.8
42	36.2	35.1	34.3	33.4
44	33.9	32.9	32.1	31.3
46	31.9	30.9	30.2	29.4
48	30.0	29.1	28.4	27.7
50	28.2	27.4	26.7	26.1
52		25.7	25.2	24.6
54				23.2
主臂组合	210	220	221	222
倍率	4	4	4	3
支腿全伸_平衡重 80_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	54.7			
32	52.0			
34	49.6	49.3	48.4	
36	47.4	47.1	46.1	45.4
38	45.2	45.0	44.0	43.3
40	43.0	42.9	42.0	41.3
42	40.8	40.8	39.9	39.3
44	38.6	38.7	37.8	37.3
46	36.4	36.5	35.8	35.3
48	34.2	34.4	33.7	33.3
50	31.9	32.2	31.6	31.3
52		30.1	29.6	29.3
54				27.3
主臂组合	210	220	221	222
倍率	4	4	4	4
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
30	54.7			

QAY800 全地面起重机操作手册
起重性能表

32	52.0			
34	49.6	49.3	48.4	
36	47.4	47.1	46.1	45.4
38	45.2	45.0	44.0	43.3
40	43.0	42.9	42.0	41.3
42	40.8	40.8	39.9	39.3
44	38.6	38.7	37.8	37.3
46	36.4	36.5	35.8	35.3
48	34.2	34.4	33.7	33.3
50	31.9	32.2	31.6	31.3
52		30.1	29.6	29.3
54				27.3
主臂组合	210	220	221	222
倍率	4	4	4	4

5、 49 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	41.8			
36	38.0	41.0		
38	35.0	37.1	38.9	
40	32.3	34.6	36.2	35.3
42	30.5	32.1	33.9	33.0
44	29.1	30.3	31.5	30.9
46	27.5	29.0	29.7	29.0
48	26.0	27.1	28.1	27.3
50	24.4	25.5	26.5	25.8
52	22.9	24.0	25.0	24.3
54	21.6	22.6	23.7	23.0
56	20.2	21.3	22.4	21.8
58		19.7	21.1	20.6
60			19.4	19.5
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重80_主臂仰角75_副臂长度49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	41.8			
36	38.0	41.0		
38	35.0	37.1	39.8	
40	32.3	34.6	36.6	39.2
42	30.5	32.1	34.0	36.2

QAY800 全地面起重机操作手册
起重性能表

44	29.1	30.3	31.5	33.6
46	27.5	29.0	29.7	31.4
48	26.0	27.1	28.6	29.8
50	24.4	25.5	26.6	28.2
52	22.9	24.0	25.1	26.7
54	21.6	22.6	24.0	25.1
56	20.2	21.3	22.5	23.5
58		19.7	21.1	22.4
60			19.4	20.8
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
34	41.8			
36	38.0	41.0		
38	35.0	37.1	39.8	
40	32.3	34.6	36.6	39.2
42	30.5	32.1	34.0	36.2
44	29.1	30.3	31.5	33.6
46	27.5	29.0	29.7	31.4
48	26.0	27.1	28.6	29.8
50	24.4	25.5	26.6	28.2
52	22.9	24.0	25.1	26.7
54	21.6	22.6	24.0	25.1
56	20.2	21.3	22.5	23.5
58		19.7	21.1	22.4
60			19.4	20.8
主臂组合	210	220	221	222
倍率	3	3	3	3

6、56 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	40.7			
38	37.0			
40	34.7	36.4	35.4	
42	31.9	33.9	33.0	32.1
44	30.1	31.6	30.9	30.0
46	28.4	29.6	29.0	28.2
48	26.5	28.0	27.3	26.5
50	25.0	26.1	25.7	25.0

QAY800 全地面起重机操作手册
起重性能表

52	23.6	25.0	24.3	23.6
54	22.6	23.5	22.9	22.3
56	21.8	22.4	21.7	21.1
58	21.0	21.2	20.6	19.9
60	19.7	20.1	19.5	18.9
62	18.1	19.1	18.5	17.9
64	16.6	17.7	17.6	17.0
66			16.6	16.1
68				15.3
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重80_主臂仰角75_副臂长度56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	40.7			
38	37.0			
40	34.7	36.6	38.4	
42	31.9	34.1	36.0	36.5
44	30.1	31.6	33.8	35.4
46	28.4	29.6	31.3	33.2
48	26.5	28.0	29.6	30.8
50	25.0	26.1	27.6	29.0
52	23.6	25.0	26.0	27.1
54	22.6	23.5	24.5	25.8
56	21.8	22.5	23.5	24.4
58	21.0	21.6	22.4	23.2
60	19.7	20.8	21.4	22.1
62	18.1	19.2	20.8	21.1
64	16.6	17.7	19.1	20.5
66			17.5	18.5
68				17.3
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重110_主臂仰角75_副臂长度56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	40.7			
38	37.0			
40	34.7	36.6	38.4	
42	31.9	34.1	36.0	36.5
44	30.1	31.6	33.8	35.4
46	28.4	29.6	31.3	33.2
48	26.5	28.0	29.6	30.8
50	25.0	26.1	27.6	29.0
52	23.6	25.0	26.0	27.1

54	22.6	23.5	24.5	25.8
56	21.8	22.5	23.5	24.4
58	21.0	21.6	22.4	23.2
60	19.7	20.8	21.4	22.1
62	18.1	19.2	20.8	21.1
64	16.6	17.7	19.1	20.5
66			17.5	18.5
68				17.3
主臂组合	210	220	221	222
倍率	3	3	3	3

7、63 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 75_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	35.2			
42	33.9	33.2		
44	31.1	31.0	30.1	
46	29.2	29.1	28.2	27.4
48	27.2	27.3	26.5	25.7
50	25.3	25.7	25.0	24.2
52	23.9	24.3	23.5	22.8
54	22.7	22.9	22.2	21.5
56	21.3	21.7	21.0	20.3
58	20.3	20.5	19.9	19.2
60	19.4	19.5	18.8	18.2
62	18.9	18.5	17.9	17.3
64	18.2	17.5	16.9	16.4
66	17.1	16.6	16.1	15.5
68	15.8	15.8	15.3	14.7
70	14.8	15.0	14.5	14.0
72		14.2	13.8	13.3
74			13.0	12.6
主臂组合	210	220	221	222
倍率	3	3	3	2
支腿全伸_平衡重80_主臂仰角75_副臂长度63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	35.2			
42	33.9	35.0		
44	31.1	33.5	32.7	
46	29.2	30.4	31.8	31.0
48	27.2	28.9	30.4	30.2

QAY800 全地面起重机操作手册
起重性能表

50	25.3	26.8	28.3	29.2
52	23.9	25.3	26.6	28.3
54	22.7	23.8	24.6	26.2
56	21.3	22.3	23.4	24.7
58	20.3	21.2	22.0	23.4
60	19.4	20.2	20.9	21.8
62	18.9	19.3	19.8	20.6
64	18.2	18.8	19.3	19.9
66	17.1	18.1	18.8	19.0
68	15.8	16.9	18.2	18.3
70	14.8	15.5	16.6	17.8
72		14.7	15.6	16.3
74			14.5	15.2
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重 110_主臂仰角 75_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	35.2			
42	33.9	35.0		
44	31.1	33.5	32.7	
46	29.2	30.4	31.8	31.0
48	27.2	28.9	30.4	30.2
50	25.3	26.8	28.3	29.2
52	23.9	25.3	26.6	28.3
54	22.7	23.8	24.6	26.2
56	21.3	22.3	23.4	24.7
58	20.3	21.2	22.0	23.4
60	19.4	20.2	20.9	21.8
62	18.9	19.3	19.8	20.6
64	18.2	18.8	19.3	19.9
66	17.1	18.1	18.8	19.0
68	15.8	16.9	18.2	18.3
70	14.8	15.5	16.6	17.8
72		14.7	15.6	16.3
74			14.5	15.2
主臂组合	210	220	221	222
倍率	3	3	3	3

十五、 变幅副臂+超起性能表—主臂仰角 67°，超起安装角 42° (单边)

1、 21 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	55.7			
30	50.6			
32	46.3	44.2		
34	42.4	40.6	39.2	
36		37.4	36.2	34.8
38			33.4	32.2
40				29.8
主臂组合	210	220	221	222
倍率	4	4	3	3
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	56.3			
30	52.7			
32	49.0	48.4		
34	45.4	45.0	43.8	
36		41.6	40.6	40.2
38			37.4	37.2
40				34.2
主臂组合	210	220	221	222
倍率	4	4	4	3
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 21				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
28	56.3			
30	52.7			
32	49.0	48.4		
34	45.4	45.0	43.8	
36		41.6	40.6	40.2
38			37.4	37.2
40				34.2
主臂组合	210	220	221	222
倍率	4	4	4	3

2、 28 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	45.6			
34	42.0	39.9		
36	38.8	36.9		
38	36.0	34.2	32.9	
40	33.4	31.8	30.6	29.3
42		29.6	28.5	27.3
44			26.6	25.5
46				23.9
主臂组合	210	220	221	222
倍率	4	3	3	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	48.0			
34	45.4	44.8		
36	42.9	42.4		
38	40.3	40.0	38.8	
40	37.7	37.5	36.5	36.0
42		35.1	34.2	33.9
44			32.0	31.8
46				29.6
主臂组合	210	220	221	222
倍率	4	4	3	3
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 28				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
32	48.0			
34	45.4	44.8		
36	42.9	42.4		
38	40.3	40.0	38.8	
40	37.7	37.5	36.5	36.0
42		35.1	34.2	33.9
44			32.0	31.8
46				29.6
主臂组合	210	220	221	222
倍率	4	4	3	3

3、 35 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	38.1			

QAY800 全地面起重机操作手册
起重性能表

38	35.4			
40	32.9	31.2		
42	30.7	29.1	27.8	
44	28.8	27.2	26.0	24.8
46	26.9	25.5	24.4	23.3
48	25.2	23.9	22.9	21.8
50		22.4	21.5	20.5
52			20.1	19.3
54				18.1
主臂组合	210	220	221	222
倍率	3	3	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	42.1			
38	40.2			
40	38.3	37.8		
42	36.4	36.1	34.9	
44	34.6	34.3	33.2	32.6
46	32.8	32.6	31.5	31.1
48	30.9	30.8	29.9	29.5
50		29.1	28.3	27.9
52			26.7	26.4
54				24.8
主臂组合	210	220	221	222
倍率	3	3	3	3
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 35				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
36	42.1			
38	40.2			
40	38.3	37.8		
42	36.4	36.1	34.9	
44	34.6	34.3	33.2	32.6
46	32.8	32.6	31.5	31.1
48	30.9	30.8	29.9	29.5
50		29.1	28.3	27.9
52			26.7	26.4
54				24.9
主臂组合	210	220	221	222
倍率	3	3	3	3

4、 42 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	32.1			
42	30.0			
44	28.0	26.4		
46	26.3	24.8	23.6	
48	24.7	23.3	22.1	21.0
50	23.2	21.9	20.8	19.7
52	21.9	20.6	19.6	18.6
54	20.6	19.4	18.5	17.5
56		18.3	17.4	16.5
58			16.4	15.5
60				14.6
主臂组合	210	220	221	222
倍率	3	2	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	37.8			
42	36.2			
44	34.7	34.0		
46	33.2	32.6	31.3	
48	31.8	31.0	29.9	28.7
50	30.4	29.3	28.2	27.1
52	29.0	27.7	26.7	25.6
54	27.4	26.2	25.2	24.3
56		24.8	23.9	23.0
58			22.6	21.8
60				20.6
主臂组合	210	220	221	222
倍率	3	3	3	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 42				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
40	37.8			
42	36.2			
44	34.7	34.0		
46	33.2	32.6	31.3	
48	31.8	31.3	30.0	29.3
50	30.4	30.0	28.8	28.1
52	29.1	28.7	27.6	26.9
54	27.7	27.5	26.3	25.8

QAY800 全地面起重机操作手册
起重性能表

56		26.2	25.1	24.6
58			24.0	23.5
60				22.3
主臂组合	210	220	221	222
倍率	3	3	3	2

5、 49 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	27.6			
46	25.9	24.3		
48	24.3	22.8		
50	22.9	21.5	20.3	
52	21.6	20.2	19.1	18.0
54	20.4	19.1	18.0	17.0
56	19.3	18.0	17.0	16.0
58	18.2	17.0	16.1	15.1
60	17.2	16.1	15.2	14.3
62	16.2	15.2	14.4	13.5
64		14.3	13.6	12.8
66			12.8	12.0
68				11.3
主臂组合	210	220	221	222
倍率	2	2	2	2
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	33.4			
46	31.3	31.3		
48	29.4	30.4		
50	28.0	28.9	27.5	
52	26.1	27.3	26.2	25.1
54	24.8	25.9	24.8	23.8
56	23.5	24.5	23.6	22.6
58	22.2	23.3	22.4	21.4
60	20.6	22.1	21.2	20.3
62	19.1	20.9	20.2	19.3
64		19.2	19.2	18.4
66			18.2	17.5
68				16.6
主臂组合	210	220	221	222
倍率	3	3	2	2

支腿全伸_平衡重 110_主臂仰角 67_副臂长度 49				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
44	33.4			
46	31.3	31.3		
48	29.4	30.4		
50	28.0	29.4	27.5	
52	26.1	28.3	26.7	25.7
54	24.8	26.4	25.7	24.9
56	23.5	25.0	24.8	24.0
58	22.2	23.8	23.8	23.1
60	20.6	22.4	22.9	22.1
62	19.1	20.9	22.0	21.3
64		19.2	21.1	20.4
66			19.4	19.6
68				18.7
主臂组合	210	220	221	222
倍率	3	3	2	2

6、 56 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
50	22.1			
52	20.8	19.4		
54	19.6	18.3	17.2	
56	18.5	17.2	16.2	15.2
58	17.5	16.3	15.3	14.3
60	16.6	15.4	14.4	13.5
62	15.7	14.5	13.6	12.7
64	14.8	13.7	12.9	12.0
66	14.0	13.0	12.2	11.3
68	13.3	12.3	11.5	10.7
70		11.6	10.8	10.1
72			10.2	9.5
74				8.9
主臂组合	210	220	221	222
倍率	2	2	2	2

支腿全伸_平衡重 80_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
50	28.6			
52	27.1	26.5		
54	25.5	25.0	23.9	

QAY800 全地面起重机操作手册
起重性能表

56	24.2	23.7	22.7	21.4
58	23.1	22.5	21.5	20.5
60	22.1	21.4	20.5	19.5
62	21.3	20.4	19.4	18.5
64	20.3	19.4	18.5	17.6
66	18.7	18.4	17.6	16.8
68	17.1	17.5	16.8	15.9
70		16.7	15.9	15.2
72			15.1	14.4
74				13.7
主臂组合	210	220	221	222
倍率	2	2	2	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 56				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
50	28.6			
52	27.1	26.7		
54	25.5	25.7	23.9	
56	24.2	24.9	22.9	21.4
58	23.1	24.2	22.0	20.6
60	22.1	23.3	21.2	19.9
62	21.3	22.3	20.7	19.3
64	20.3	21.4	20.1	18.9
66	18.7	20.5	19.5	18.4
68	17.1	18.9	18.8	17.8
70		17.3	18.1	17.2
72			17.5	16.6
74				16.0
主臂组合	210	220	221	222
倍率	2	2	2	2

7、 63 米变幅副臂+超起性能表

支腿全伸_平衡重 50_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
54	18.9			
56	17.8	16.4		
58	16.8	15.5	14.5	
60	15.8	14.6	13.6	12.6
62	15.0	13.8	12.8	11.9
64	14.2	13.0	12.1	11.2
66	13.4	12.3	11.4	10.5
68	12.7	11.6	10.8	9.9

QAY800 全地面起重机操作手册
起重性能表

70	12.0	11.0	10.2	9.3
72	11.4	10.4	9.6	8.8
74	10.7	9.8	9.0	8.3
76	10.1	9.2	8.5	7.8
78		8.6	8.0	7.3
80			7.4	6.8
82				6.3
主臂组合	210	220	221	222
倍率	2	2	1	1
支腿全伸_平衡重 80_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
54	25.6			
56	24.3	23.0		
58	23.0	21.8	20.7	
60	21.7	20.6	19.7	18.7
62	20.7	19.6	18.7	17.7
64	19.8	18.6	17.7	16.8
66	18.8	17.7	16.9	16.0
68	17.9	16.9	16.0	15.2
70	17.1	16.1	15.3	14.4
72	16.3	15.3	14.5	13.7
74	15.2	14.6	13.8	13.1
76	14.4	13.9	13.2	12.4
78		13.2	12.5	11.8
80			11.8	11.2
82				10.6
主臂组合	210	220	221	222
倍率	2	2	2	2
支腿全伸_平衡重 110_主臂仰角 67_副臂长度 63				
R/L	31.5+3.8	36.6+3.8	41.8+3.8	47.0+3.8
54	25.7			
56	24.3	23.7		
58	23.2	22.8	21.0	
60	21.7	22.0	20.2	19.0
62	20.7	21.2	19.4	18.1
64	19.8	20.4	18.6	17.3
66	19.2	19.7	17.9	16.5
68	18.3	18.9	17.2	15.7
70	17.6	18.4	16.6	14.9
72	16.3	17.7	16.0	14.3
74	15.2	16.5	15.6	13.9
76	14.4	15.3	15.2	13.6
78		14.5	14.8	13.4

80			14.2	13.1
82				12.7
主臂组合	210	220	221	222
倍率	2	2	2	2

十六、 固定副臂+超起性能表，安装角 0° ，超起安装角 15° (单边)

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 0_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	80.0		
16	79.2	69.2	59.2
18	76.0	66.4	56.8
20	72.0	63.2	54.4
22	68.0	59.6	51.2
24	63.0	57.2	49.6
26	53.2	54.3	47.0
28	45.1	46.9	45.1
30	38.3	40.1	41.6
32	32.6	34.3	35.9
34	27.7	29.4	30.9
36	23.4	25.1	26.6
38	19.6	21.3	22.8
40	16.3	18.0	19.5
42	13.3	15.0	16.5
44	10.6	12.4	13.9
46	8.2	9.9	11.5
48	6.0	7.8	9.3
50	4.0	5.8	7.3
52	2.2	3.9	5.4
54		2.3	3.8
56			2.2
主臂组合	222220	222221	222222
倍率	6	5	5
支腿全伸_平衡重 80_副臂安装角 0_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	80.0		
16	79.2	69.2	59.2
18	76.0	66.4	56.8

QAY800 全地面起重机操作手册
起重性能表

20	72.0	63.2	54.4
22	68.0	59.6	51.2
24	64.8	57.2	49.6
26	61.6	54.3	47.0
28	57.6	51.4	45.1
30	51.8	48.5	43.4
32	45.1	45.9	41.4
34	39.2	41.0	39.8
36	34.2	35.9	37.4
38	29.8	31.5	33.0
40	25.8	27.6	29.1
42	22.3	24.1	25.6
44	19.2	20.9	22.4
46	16.4	18.1	19.6
48	13.8	15.5	17.0
50	11.4	13.2	14.7
52	9.3	11.0	12.5
54	7.3	9.0	10.6
56	5.5	7.2	8.7
58	3.8	5.5	7.0
60	2.2	3.9	5.5
62		2.5	4.0
64			2.7
主臂组合	222220	222221	222222
倍率	6	5	5
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
14	80.0		
16	79.2	69.2	59.2
18	76.0	66.4	56.8
20	72.0	63.2	54.4
22	68.0	59.6	51.2
24	64.8	57.2	49.6
26	61.6	54.3	47.0
28	57.6	51.4	45.1
30	53.6	48.5	43.4
32	50.4	45.9	41.4
34	46.7	43.3	39.8
36	43.5	40.7	37.9
38	39.7	37.8	36.0
40	35.4	35.1	33.9
42	31.4	32.5	32.0
44	27.8	29.5	30.2

46	24.5	26.2	27.7
48	21.5	23.3	24.8
50	18.8	20.6	22.1
52	16.4	18.1	19.6
54	14.1	15.8	17.3
56	12.0	13.7	15.2
58	10.0	11.8	13.3
60	8.2	10.0	11.5
62	6.5	8.3	9.8
64	4.9	6.7	8.3
66	3.4	5.2	6.8
68	2.0	3.8	5.4
70		2.5	4.1
72			2.9
74			
主臂组合	222220	222221	222222
倍率	6	5	5

2、14 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 0_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	73.2						
18	68.4	67.2	66.0				
20	64.8	63.6	62.4	56.4	50.4		
22	61.2	60.3	59.4	54.0	48.6	41.6	34.7
24	57.6	57.3	57.0	51.3	45.6	39.4	33.1
26	50.5	51.8	52.8	48.9	43.2	37.4	31.7
28	42.5	43.7	44.8	46.1	41.4	35.9	30.5
30	35.8	37.0	38.0	39.3	39.6	34.5	29.4
32	30.0	31.3	32.3	33.6	34.7	33.1	28.4
34	25.1	26.3	27.4	28.7	29.8	31.2	27.4
36	20.9	22.1	23.1	24.4	25.5	26.9	26.3
38	17.1	18.3	19.3	20.6	21.8	23.1	24.3
40	13.8	15.0	16.0	17.3	18.5	19.8	21.0
42	10.8	12.0	13.1	14.4	15.5	16.8	18.0
44	8.1	9.4	10.4	11.7	12.8	14.2	15.4
46	5.7	6.9	8.0	9.3	10.4	11.8	13.0
48	3.5	4.7	5.8	7.1	8.3	9.6	10.8
50		2.7	3.8	5.1	6.3	7.6	8.8
52			2.0	3.3	4.5	5.8	7.0
54					2.8	4.1	5.3

QAY800 全地面起重机操作手册
起重性能表

56						2.6	3.8
58							2.4
60							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	6	5	5	4	4	3	3
支腿全伸_平衡重 80_副臂安装角 0_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	73.2						
18	68.4	67.2	66.0				
20	64.8	63.6	62.4	56.4	50.4		
22	61.2	60.3	59.4	54.0	48.6	41.6	34.7
24	57.6	57.3	57.0	51.3	45.6	39.4	33.1
26	54.6	54.6	54.6	48.9	43.2	37.4	31.7
28	51.6	51.6	51.6	46.5	41.4	35.9	30.5
30	48.6	48.3	48.0	43.8	39.6	34.5	29.4
32	42.5	43.7	44.4	41.1	37.8	33.1	28.4
34	36.7	37.9	39.0	38.6	35.9	31.6	27.4
36	31.7	32.9	33.9	35.2	33.8	30.1	26.3
38	27.2	28.5	29.5	30.8	31.8	28.6	25.3
40	23.3	24.5	25.6	26.9	28.0	27.1	24.4
42	19.8	21.0	22.1	23.4	24.5	25.7	23.4
44	16.7	17.9	19.0	20.3	21.4	22.7	22.3
46	13.8	15.1	16.1	17.4	18.6	19.9	21.1
48	11.2	12.5	13.6	14.9	16.0	17.3	18.5
50	8.8	10.1	11.2	12.5	13.7	15.0	16.2
52	6.6	8.0	9.1	10.4	11.5	12.9	14.1
54	4.6	6.0	7.1	8.4	9.6	10.9	12.1
56	2.7	4.1	5.3	6.6	7.8	9.1	10.3
58		2.4	3.5	4.9	6.1	7.4	8.6
60			2.0	3.3	4.5	5.9	7.1
62					3.1	4.4	5.6
64						3.1	4.3
66							3.0
68							
70							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	6	5	5	4	4	3	3
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	73.2						
18	68.4	67.2	66.0				
20	64.8	63.6	62.4	56.4	50.4		
22	61.2	60.3	59.4	54.0	48.6	41.6	34.7

QAY800 全地面起重机操作手册
起重性能表

24	57.6	57.3	57.0	51.3	45.6	39.4	33.1
26	54.6	54.6	54.6	48.9	43.2	37.4	31.7
28	51.6	51.6	51.6	46.5	41.4	35.9	30.5
30	48.6	48.3	48.0	43.8	39.6	34.5	29.4
32	46.2	45.3	44.4	41.1	37.8	33.1	28.4
34	44.4	42.9	41.4	38.6	35.9	31.6	27.4
36	41.4	39.9	38.4	36.1	33.8	30.1	26.3
38	37.2	36.6	36.0	33.9	31.8	28.6	25.3
40	32.9	33.7	33.6	31.7	29.9	27.1	24.4
42	28.8	30.1	30.7	29.4	28.1	25.7	23.4
44	25.2	26.5	27.5	27.2	26.4	24.4	22.3
46	21.9	23.2	24.3	25.2	24.8	23.1	21.4
48	19.0	20.2	21.3	22.6	23.4	21.9	20.4
50	16.2	17.5	18.6	19.9	21.1	20.5	19.4
52	13.7	15.0	16.1	17.5	18.6	19.0	18.4
54	11.4	12.7	13.9	15.2	16.3	17.7	17.4
56	9.2	10.6	11.8	13.1	14.3	15.6	16.4
58	7.1	8.6	9.8	11.2	12.3	13.7	14.9
60	5.2	6.8	8.0	9.4	10.5	11.9	13.1
62		5.0	6.3	7.7	8.9	10.2	11.4
64			4.7	6.1	7.3	8.7	9.9
66			3.2	4.6	5.8	7.2	8.4
68				3.2	4.5	5.8	7.1
70					3.2	4.6	5.8
72						3.3	4.6
74						2.2	3.4
76							2.3
78							
80							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	6	5	5	4	4	3	3

3、21 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度21							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
12	53.7						
14	49.7	49.6	49.6				
16	46.1	46.1	46.1				
18	43.7	43.8	43.8	40.5	37.1		
20	40.8	41.2	41.5	38.4	35.3	30.8	26.2
22	38.4	39.0	39.7	36.8	33.9	29.4	25.0

QAY800 全地面起重机操作手册
起重性能表

24	36.1	37.0	37.8	35.2	32.5	28.2	23.9
26	34.3	35.1	35.9	33.6	31.3	27.1	23.0
28	32.4	33.4	34.4	32.3	30.1	26.1	22.1
30	30.8	31.9	32.9	31.0	29.1	25.2	21.3
32	29.3	30.4	31.5	29.8	28.2	24.4	20.6
34	27.7	29.0	29.9	28.7	27.1	23.6	20.0
36	24.1	24.9	25.6	26.5	26.0	22.6	19.2
38	20.3	21.1	21.8	22.8	23.6	21.5	18.6
40	17.0	17.8	18.5	19.4	20.3	20.5	18.1
42	14.0	14.8	15.5	16.4	17.3	18.4	17.5
44	11.3	12.1	12.8	13.8	14.6	15.7	16.7
46	8.9	9.7	10.4	11.4	12.2	13.3	14.3
48	6.7	7.5	8.2	9.2	10.0	11.1	12.1
50	4.7	5.5	6.2	7.2	8.0	9.1	10.1
52	2.8	3.7	4.4	5.4	6.2	7.3	8.3
54		2.0	2.7	3.7	4.6	5.6	6.6
56				2.1	3.0	4.1	5.0
58						2.7	3.6
60							2.3
62							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	4	4	4	3	3	3	2
支腿全伸_平衡重80_副臂安装角0_副臂长度21							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
12	53.7						
14	49.7	49.6	49.6				
16	46.1	46.1	46.1				
18	43.7	43.8	43.8	40.5	37.1		
20	40.8	41.2	41.5	38.4	35.3	30.8	26.2
22	38.4	39.0	39.7	36.8	33.9	29.4	25.0
24	36.1	37.0	37.8	35.2	32.5	28.2	23.9
26	34.3	35.1	35.9	33.6	31.3	27.1	23.0
28	32.4	33.4	34.4	32.3	30.1	26.1	22.1
30	30.8	31.9	32.9	31.0	29.1	25.2	21.3
32	29.3	30.4	31.5	29.8	28.2	24.4	20.6
34	27.7	29.0	30.2	28.7	27.1	23.6	20.0
36	26.3	27.3	28.3	27.1	26.0	22.6	19.2
38	25.1	25.8	26.5	25.4	24.4	21.5	18.6
40	23.9	24.3	24.6	23.7	22.9	20.5	18.1
42	22.9	23.0	23.1	22.3	21.5	19.5	17.5
44	19.9	20.7	21.4	21.0	20.2	18.5	16.8
46	17.0	17.8	18.5	19.3	19.1	17.7	16.3
48	14.4	15.3	16.0	16.9	17.8	16.8	15.8

QAY800 全地面起重机操作手册
起重性能表

50	12.1	12.9	13.6	14.6	15.4	15.8	15.0
52	9.9	10.8	11.5	12.4	13.3	14.4	14.0
54	7.9	8.8	9.5	10.5	11.3	12.4	13.3
56	6.0	6.9	7.7	8.7	9.5	10.6	11.6
58	4.3	5.2	6.0	7.0	7.8	8.9	9.9
60	2.7	3.6	4.4	5.4	6.3	7.4	8.3
62		2.1	2.9	3.9	4.8	5.9	6.9
64				2.6	3.5	4.6	5.5
66					2.2	3.3	4.3
68						2.1	3.1
70							2.0
72							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	4	4	4	3	3	3	2
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
12	53.7						
14	49.7	49.6	49.6				
16	46.1	46.1	46.1				
18	43.7	43.8	43.8	40.5	37.1		
20	40.8	41.2	41.5	38.4	35.3	30.8	26.2
22	38.4	39.0	39.7	36.8	33.9	29.4	25.0
24	36.1	37.0	37.8	35.2	32.5	28.2	23.9
26	34.3	35.1	35.9	33.6	31.3	27.1	23.0
28	32.4	33.4	34.4	32.3	30.1	26.1	22.1
30	30.8	31.9	32.9	31.0	29.1	25.2	21.3
32	29.3	30.4	31.5	29.8	28.2	24.4	20.6
34	27.7	29.0	30.2	28.7	27.1	23.6	20.0
36	26.3	27.3	28.3	27.1	26.0	22.6	19.2
38	25.1	25.8	26.5	25.4	24.4	21.5	18.6
40	23.9	24.3	24.6	23.7	22.9	20.5	18.1
42	22.9	23.0	23.1	22.3	21.5	19.5	17.5
44	20.7	21.2	21.7	21.0	20.2	18.5	16.8
46	18.1	18.8	19.6	19.3	19.1	17.7	16.3
48	15.9	16.6	17.4	17.6	17.8	16.8	15.8
50	13.7	14.4	15.2	15.9	16.7	15.8	15.0
52	11.8	12.6	13.3	14.0	14.7	14.4	14.0
54	10.0	10.8	11.6	12.3	13.0	13.2	13.3
56	8.4	9.2	10.0	10.7	11.4	11.9	12.4
58	6.9	7.7	8.5	9.2	9.9	10.6	11.3
60	5.4	6.2	7.0	7.8	8.5	9.2	9.9
62	4.1	4.9	5.8	6.5	7.2	7.9	8.6
64	2.9	3.7	4.5	5.2	6.0	6.7	7.4

66		2.5	3.3	4.1	4.8	5.6	6.3
68			2.3	3.0	3.8	4.5	5.2
70					2.8	3.5	4.3
72						2.6	3.3
74							2.4
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	4	4	4	3	3	3	2

4、28 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度28							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	36.8						
16	34.2	34.1	34.0				
18	32.1	32.0	32.0				
20	30.0	30.1	30.2	28.9	27.5		
22	28.4	28.6	28.9	27.5	26.2	23.3	20.4
24	26.9	27.2	27.5	26.3	25.2	22.3	19.4
26	25.3	25.8	26.3	25.2	24.2	21.3	18.4
28	23.8	24.5	25.2	24.2	23.2	20.5	17.7
30	22.5	23.3	24.2	23.3	22.4	19.7	17.0
32	21.5	22.4	23.2	22.5	21.7	19.0	16.3
34	20.5	21.4	22.3	21.6	20.9	18.3	15.8
36	19.6	20.5	21.4	20.8	20.2	17.7	15.2
38	18.5	19.6	20.6	20.1	19.6	17.1	14.6
40	17.6	18.7	19.9	19.4	18.9	16.5	14.1
42	16.6	17.1	17.5	18.2	18.3	16.0	13.7
44	13.9	14.4	14.8	15.5	16.1	15.5	13.2
46	11.5	12.0	12.4	13.1	13.7	14.6	12.9
48	9.3	9.8	10.2	10.9	11.5	12.4	12.4
50	7.2	7.7	8.2	8.9	9.5	10.4	11.2
52	5.4	5.9	6.4	7.1	7.7	8.6	9.3
54	3.7	4.2	4.7	5.4	6.0	6.9	7.7
56	2.1	2.7	3.1	3.8	4.5	5.3	6.1
58				2.4	3.0	3.9	4.7
60						2.6	3.4
62							2.1
64							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2
支腿全伸_平衡重80_副臂安装角0_副臂长度28							

R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	36.8						
16	34.2	34.1	34.0				
18	32.1	32.0	32.0				
20	30.0	30.1	30.2	28.9	27.5		
22	28.4	28.6	28.9	27.5	26.2	23.3	20.4
24	26.9	27.2	27.5	26.3	25.2	22.3	19.4
26	25.3	25.8	26.3	25.2	24.2	21.3	18.4
28	23.8	24.5	25.2	24.2	23.2	20.5	17.7
30	22.5	23.3	24.2	23.3	22.4	19.7	17.0
32	21.5	22.4	23.2	22.5	21.7	19.0	16.3
34	20.5	21.4	22.3	21.6	20.9	18.3	15.8
36	19.6	20.5	21.4	20.8	20.2	17.7	15.2
38	18.5	19.6	20.6	20.1	19.6	17.1	14.6
40	17.6	18.7	19.9	19.4	18.9	16.5	14.1
42	16.8	18.0	19.2	18.7	18.3	16.0	13.7
44	16.0	17.3	18.5	18.1	17.7	15.5	13.2
46	15.4	16.6	17.7	17.5	17.3	15.1	12.9
48	14.7	15.9	17.0	16.7	16.3	14.4	12.4
50	14.1	15.1	15.6	15.9	15.4	13.7	12.0
52	12.5	13.0	13.4	14.1	14.3	12.9	11.6
54	10.5	11.0	11.4	12.2	12.8	12.4	11.2
56	8.6	9.2	9.6	10.3	11.0	11.5	10.8
58	6.9	7.5	7.9	8.7	9.3	10.2	10.5
60	5.3	5.9	6.4	7.1	7.7	8.6	9.4
62	3.9	4.4	4.9	5.6	6.3	7.2	7.9
64	2.5	3.1	3.5	4.3	4.9	5.8	6.6
66			2.3	3.0	3.7	4.5	5.3
68					2.5	3.4	4.1
70						2.2	3.0
72							2.0
74							
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 28							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	36.8						
16	34.2	34.1	34.0				
18	32.1	32.0	32.0				
20	30.0	30.1	30.2	28.9	27.5		
22	28.4	28.6	28.9	27.5	26.2	23.3	20.4
24	26.9	27.2	27.5	26.3	25.2	22.3	19.4

QAY800 全地面起重机操作手册
起重性能表

26	25.3	25.8	26.3	25.2	24.2	21.3	18.4
28	23.8	24.5	25.2	24.2	23.2	20.5	17.7
30	22.5	23.3	24.2	23.3	22.4	19.7	17.0
32	21.5	22.4	23.2	22.5	21.7	19.0	16.3
34	20.5	21.4	22.3	21.6	20.9	18.3	15.8
36	19.6	20.5	21.4	20.8	20.2	17.7	15.2
38	18.5	19.6	20.6	20.1	19.6	17.1	14.6
40	17.6	18.7	19.9	19.4	18.9	16.5	14.1
42	16.8	18.0	19.2	18.7	18.3	16.0	13.7
44	16.0	17.3	18.5	18.1	17.7	15.5	13.2
46	15.4	16.6	17.7	17.5	17.3	15.1	12.9
48	14.7	15.9	17.0	16.7	16.3	14.4	12.4
50	14.1	15.2	16.3	15.9	15.4	13.7	12.0
52	13.5	14.0	14.6	14.4	14.3	12.9	11.6
54	11.8	12.3	12.8	13.2	13.7	12.4	11.2
56	10.2	10.7	11.2	11.7	12.2	11.5	10.8
58	8.6	9.1	9.7	10.2	10.7	10.6	10.5
60	7.2	7.8	8.3	8.8	9.3	9.7	10.1
62	5.9	6.4	7.0	7.5	8.1	8.6	9.2
64	4.7	5.2	5.8	6.3	6.8	7.4	7.9
66	3.6	4.1	4.6	5.1	5.6	6.2	6.8
68	2.4	3.0	3.6	4.1	4.6	5.2	5.8
70		2.0	2.5	3.0	3.6	4.1	4.7
72				2.1	2.6	3.2	3.8
74						2.3	2.9
76							2.1
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	2	2	2	2

5、35 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度35							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	28.8						
16	26.7						
18	24.8	24.8	24.8				
20	23.3	23.3	23.3				
22	22.1	22.1	22.1	21.4	20.7		
24	20.8	21.0	21.2	20.5	19.8		
26	19.7	19.9	20.1	19.6	19.0	16.8	14.7
28	18.5	18.9	19.2	18.7	18.2	16.2	14.1
30	17.5	17.9	18.4	17.9	17.5	15.5	13.6

QAY800 全地面起重机操作手册
起重性能表

32	16.4	17.1	17.7	17.3	16.9	15.0	13.0
34	15.6	16.3	17.0	16.7	16.3	14.4	12.5
36	15.0	15.6	16.2	16.0	15.8	13.9	12.1
38	14.4	15.0	15.6	15.4	15.2	13.5	11.7
40	13.5	14.2	15.0	14.8	14.7	13.0	11.3
42	12.8	13.6	14.5	14.3	14.1	12.5	10.9
44	12.2	13.1	13.9	13.8	13.7	12.1	10.6
46	11.5	12.5	13.5	13.3	13.2	11.7	10.2
48	11.0	11.5	11.7	12.2	12.7	11.4	9.9
50	9.2	9.5	9.7	10.2	10.7	11.0	9.5
52	7.4	7.6	7.9	8.4	8.9	9.6	9.2
54	5.7	6.0	6.2	6.7	7.2	7.9	8.5
56	4.1	4.4	4.6	5.2	5.6	6.3	7.0
58	2.7	2.9	3.2	3.7	4.2	4.9	5.5
60				2.4	2.9	3.6	4.2
62						2.3	3.0
64							
66							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1
支腿全伸_平衡重80_副臂安装角0_副臂长度35							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	28.8						
16	26.7						
18	24.8	24.8	24.8				
20	23.3	23.3	23.3				
22	22.1	22.1	22.1	21.4	20.7		
24	20.8	21.0	21.2	20.5	19.8		
26	19.7	19.9	20.1	19.6	19.0	16.8	14.7
28	18.5	18.9	19.2	18.7	18.2	16.2	14.1
30	17.5	17.9	18.4	17.9	17.5	15.5	13.6
32	16.4	17.1	17.7	17.3	16.9	15.0	13.0
34	15.6	16.3	17.0	16.7	16.3	14.4	12.5
36	15.0	15.6	16.2	16.0	15.8	13.9	12.1
38	14.4	15.0	15.6	15.4	15.2	13.5	11.7
40	13.5	14.2	15.0	14.8	14.7	13.0	11.3
42	12.8	13.6	14.5	14.3	14.1	12.5	10.9
44	12.2	13.1	13.9	13.8	13.7	12.1	10.6
46	11.5	12.5	13.5	13.3	13.2	11.7	10.2
48	11.0	12.0	13.0	12.9	12.9	11.4	9.9
50	10.6	11.5	12.4	12.4	12.4	11.0	9.5
52	10.2	11.0	11.7	11.9	12.1	10.6	9.2
54	9.8	10.5	11.3	11.5	11.7	10.3	8.9

QAY800 全地面起重机操作手册
起重性能表

56	9.3	10.1	10.9	11.2	11.4	10.0	8.6
58	8.9	9.2	9.5	10.0	10.5	9.6	8.3
60	7.3	7.6	7.9	8.4	8.9	9.0	7.9
62	5.9	6.2	6.4	7.0	7.4	8.1	7.7
64	4.5	4.8	5.1	5.6	6.1	6.8	7.4
66	3.2	3.5	3.8	4.3	4.8	5.5	6.2
68	2.0	2.3	2.6	3.1	3.6	4.3	5.0
70				2.0	2.5	3.2	3.9
72						2.2	2.8
74							
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
14	28.8						
16	26.7						
18	24.8	24.8	24.8				
20	23.3	23.3	23.3				
22	22.1	22.1	22.1	21.4	20.7		
24	20.8	21.0	21.2	20.5	19.8		
26	19.7	19.9	20.1	19.6	19.0	16.8	14.7
28	18.5	18.9	19.2	18.7	18.2	16.2	14.1
30	17.5	17.9	18.4	17.9	17.5	15.5	13.6
32	16.4	17.1	17.7	17.3	16.9	15.0	13.0
34	15.6	16.3	17.0	16.7	16.3	14.4	12.5
36	15.0	15.6	16.2	16.0	15.8	13.9	12.1
38	14.4	15.0	15.6	15.4	15.2	13.5	11.7
40	13.5	14.2	15.0	14.8	14.7	13.0	11.3
42	12.8	13.6	14.5	14.3	14.1	12.5	10.9
44	12.2	13.1	13.9	13.8	13.7	12.1	10.6
46	11.5	12.5	13.5	13.3	13.2	11.7	10.2
48	11.0	12.0	13.0	12.9	12.9	11.4	9.9
50	10.6	11.5	12.4	12.4	12.4	11.0	9.5
52	10.2	11.0	11.7	11.9	12.1	10.6	9.2
54	9.8	10.5	11.3	11.5	11.7	10.3	8.9
56	9.3	10.1	10.9	11.2	11.4	10.0	8.6
58	9.0	9.7	10.5	10.7	10.9	9.6	8.3
60	8.5	8.9	9.3	9.7	10.0	9.0	7.9
62	7.4	7.6	7.9	8.3	8.6	8.2	7.7
64	6.1	6.4	6.7	7.0	7.4	7.4	7.5
66	4.9	5.2	5.5	5.9	6.3	6.8	7.2
68	3.8	4.1	4.5	4.8	5.2	5.6	6.1

70	2.8	3.1	3.5	3.9	4.3	4.7	5.1
72		2.2	2.5	2.9	3.2	3.7	4.1
74				2.0	2.4	2.8	3.2
76						2.0	2.4
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	1

6、42 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度42							
	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	20.6						
18	19.2						
20	18.1	18.0	17.9				
22	17.0	17.0	17.0				
24	16.1	16.2	16.2	15.6	15.0		
26	15.2	15.3	15.4	14.9	14.4		
28	14.3	14.5	14.7	14.3	13.8	12.6	11.4
30	13.6	13.9	14.1	13.7	13.2	12.1	10.9
32	12.8	13.2	13.6	13.1	12.7	11.6	10.5
34	12.1	12.5	13.0	12.7	12.3	11.2	10.0
36	11.4	11.8	12.3	12.1	11.8	10.8	9.7
38	10.8	11.3	11.7	11.6	11.5	10.4	9.3
40	10.4	10.8	11.3	11.2	11.2	10.1	9.0
42	9.8	10.3	10.8	10.8	10.8	9.8	8.7
44	9.3	9.8	10.4	10.4	10.5	9.5	8.5
46	8.9	9.4	10.0	10.0	10.0	9.1	8.2
48	8.3	9.0	9.7	9.7	9.8	8.8	7.8
50	7.9	8.6	9.3	9.4	9.4	8.5	7.5
52	7.6	8.2	8.9	9.0	9.2	8.2	7.2
54	7.2	7.4	7.5	7.8	8.2	8.0	7.0
56	5.7	5.8	5.9	6.3	6.6	7.2	6.8
58	4.3	4.4	4.5	4.8	5.2	5.7	6.2
60	2.9	3.0	3.1	3.5	3.8	4.4	4.9
62				2.3	2.6	3.1	3.7
64						2.0	2.5
66							
68							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度42							

QAY800 全地面起重机操作手册
起重性能表

R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	20.6						
18	19.2						
20	18.1	18.0	17.9				
22	17.0	17.0	17.0				
24	16.1	16.2	16.2	15.6	15.0		
26	15.2	15.3	15.4	14.9	14.4		
28	14.3	14.5	14.7	14.3	13.8	12.6	11.4
30	13.6	13.9	14.1	13.7	13.2	12.1	10.9
32	12.8	13.2	13.6	13.1	12.7	11.6	10.5
34	12.1	12.5	13.0	12.7	12.3	11.2	10.0
36	11.4	11.8	12.3	12.1	11.8	10.8	9.7
38	10.8	11.3	11.7	11.6	11.5	10.4	9.3
40	10.4	10.8	11.3	11.2	11.2	10.1	9.0
42	9.8	10.3	10.8	10.8	10.8	9.8	8.7
44	9.3	9.8	10.4	10.4	10.5	9.5	8.5
46	8.9	9.4	10.0	10.0	10.0	9.1	8.2
48	8.3	9.0	9.7	9.7	9.8	8.8	7.8
50	7.9	8.6	9.3	9.4	9.4	8.5	7.5
52	7.6	8.2	8.9	9.0	9.2	8.2	7.2
54	7.2	7.9	8.5	8.7	9.0	8.0	7.0
56	7.0	7.5	8.1	8.3	8.6	7.7	6.8
58	6.7	7.2	7.7	8.0	8.3	7.4	6.4
60	6.4	6.9	7.4	7.7	8.1	7.1	6.2
62	6.1	6.6	7.1	7.4	7.7	6.8	6.0
64	5.8	6.2	6.3	6.7	7.1	6.7	5.9
66	4.8	5.0	5.1	5.4	5.8	6.2	5.6
68	3.6	3.8	3.9	4.3	4.6	5.2	5.4
70	2.5	2.6	2.7	3.1	3.5	4.0	4.6
72				2.1	2.4	3.0	3.5
74						2.0	2.5
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 42							
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
16	20.6						
18	19.2						
20	18.1	18.0	17.9				
22	17.0	17.0	17.0				
24	16.1	16.2	16.2	15.6	15.0		
26	15.2	15.3	15.4	14.9	14.4		
28	14.3	14.5	14.7	14.3	13.8	12.6	11.4

QAY800 全地面起重机操作手册
起重性能表

30	13.6	13.9	14.1	13.7	13.2	12.1	10.9
32	12.8	13.2	13.6	13.1	12.7	11.6	10.5
34	12.1	12.5	13.0	12.7	12.3	11.2	10.0
36	11.4	11.8	12.3	12.1	11.8	10.8	9.7
38	10.8	11.3	11.7	11.6	11.5	10.4	9.3
40	10.4	10.8	11.3	11.2	11.2	10.1	9.0
42	9.8	10.3	10.8	10.8	10.8	9.8	8.7
44	9.3	9.8	10.4	10.4	10.5	9.5	8.5
46	8.9	9.4	10.0	10.0	10.0	9.1	8.2
48	8.3	9.0	9.7	9.7	9.8	8.8	7.8
50	7.9	8.6	9.3	9.4	9.4	8.5	7.5
52	7.6	8.2	8.9	9.0	9.2	8.2	7.2
54	7.2	7.9	8.5	8.7	9.0	8.0	7.0
56	7.0	7.5	8.1	8.3	8.6	7.7	6.8
58	6.7	7.2	7.7	8.0	8.3	7.4	6.4
60	6.4	6.9	7.4	7.7	8.1	7.1	6.2
62	6.1	6.6	7.1	7.4	7.7	6.8	6.0
64	5.8	6.3	6.8	7.1	7.5	6.7	5.9
66	5.4	5.9	6.3	6.6	6.8	6.2	5.6
68	4.9	5.1	5.3	5.5	5.8	5.6	5.4
70	3.9	4.1	4.3	4.5	4.7	4.9	5.2
72	2.9	3.0	3.2	3.5	3.7	4.1	4.5
74	2.0	2.1	2.3	2.6	2.9	3.2	3.6
76					2.0	2.3	2.6
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	1	1

7、 49 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度49					
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6
16	15.5				
18	14.5				
20	13.5	13.8	14.1		
22	12.7	13.0	13.3		
24	11.8	12.2	12.7		
26	11.2	11.6	12.0	11.6	11.2
28	10.5	10.9	11.4	11.0	10.7
30	9.9	10.4	10.9	10.6	10.2
32	9.3	9.8	10.4	10.1	9.9
34	8.7	9.3	9.9	9.7	9.4
36	8.3	8.8	9.3	9.2	9.1

QAY800 全地面起重机操作手册
起重性能表

38	7.8	8.4	9.0	8.9	8.9
40	7.4	7.9	8.5	8.5	8.5
42	6.9	7.5	8.2	8.2	8.3
44	6.6	7.1	7.7	7.8	7.9
46	6.2	6.8	7.4	7.5	7.7
48	5.9	6.5	7.1	7.2	7.2
50	5.6	6.2	6.8	6.9	7.0
52	5.3	5.9	6.6	6.6	6.7
54	4.9	5.6	6.3	6.4	6.4
56	4.7	5.3	6.0	6.2	6.3
58	4.5	5.1	5.5	5.7	5.9
60	4.2	4.1	4.1	4.4	4.6
62	2.9	2.9	2.9	3.1	3.3
64				2.0	2.2
66					
68					
主臂组合	221100	222100	222200	222210	222220
倍率	2	1	1	1	1
支腿全伸_平衡重80_副臂安装角0_副臂长度49					
R/L	47.7 +2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6
16	15.5				
18	14.5				
20	13.5	13.8	14.1		
22	12.7	13.0	13.3		
24	11.8	12.2	12.7		
26	11.2	11.6	12.0	11.6	11.2
28	10.5	10.9	11.4	11.0	10.7
30	9.9	10.4	10.9	10.6	10.2
32	9.3	9.8	10.4	10.1	9.9
34	8.7	9.3	9.9	9.7	9.4
36	8.3	8.8	9.3	9.2	9.1
38	7.8	8.4	9.0	8.9	8.9
40	7.4	7.9	8.5	8.5	8.5
42	6.9	7.5	8.2	8.2	8.3
44	6.6	7.1	7.7	7.8	7.9
46	6.2	6.8	7.4	7.5	7.7
48	5.9	6.5	7.1	7.2	7.2
50	5.6	6.2	6.8	6.9	7.0
52	5.3	5.9	6.6	6.6	6.7
54	4.9	5.6	6.3	6.4	6.4
56	4.7	5.3	6.0	6.2	6.3
58	4.5	5.1	5.8	5.9	6.1
60	4.4	4.9	5.5	5.7	5.9

QAY800 全地面起重机操作手册
起重性能表

62	4.1	4.7	5.2	5.4	5.6
64	4.0	4.5	4.9	5.2	5.5
66	3.7	4.2	4.7	5.0	5.3
68	3.6	4.1	4.6	4.8	5.1
70	3.3	3.7	3.7	4.0	4.2
72	2.7	2.7	2.7	2.9	3.2
74					2.2
76					
主臂组合	221100	222100	222200	222210	222220
倍率	2	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 49					
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6
16	15.5				
18	14.5				
20	13.5	13.8	14.1		
22	12.7	13.0	13.3		
24	11.8	12.2	12.7		
26	11.2	11.6	12.0	11.6	11.2
28	10.5	10.9	11.4	11.0	10.7
30	9.9	10.4	10.9	10.6	10.2
32	9.3	9.8	10.4	10.1	9.9
34	8.7	9.3	9.9	9.7	9.4
36	8.3	8.8	9.3	9.2	9.1
38	7.8	8.4	9.0	8.9	8.9
40	7.4	7.9	8.5	8.5	8.5
42	6.9	7.5	8.2	8.2	8.3
44	6.6	7.1	7.7	7.8	7.9
46	6.2	6.8	7.4	7.5	7.7
48	5.9	6.5	7.1	7.2	7.2
50	5.6	6.2	6.8	6.9	7.0
52	5.3	5.9	6.6	6.6	6.7
54	4.9	5.6	6.3	6.4	6.4
56	4.7	5.3	6.0	6.2	6.3
58	4.5	5.1	5.8	5.9	6.1
60	4.4	4.9	5.5	5.7	5.9
62	4.1	4.7	5.2	5.4	5.6
64	4.0	4.5	4.9	5.2	5.5
66	3.7	4.2	4.7	5.0	5.3
68	3.6	4.1	4.6	4.8	5.1
70	3.3	3.8	4.3	4.5	4.8
72	3.1	3.5	3.8	4.0	4.1
74	2.9	2.9	2.9	3.0	3.2
76	2.0	2.0	2.1	2.2	2.3

主臂组合	221100	222100	222200	222210	222220
倍率	2	1	1	1	1

8、 56 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角0_副臂长度56	
R/L	47.7 +2.6
18	11.6
20	10.7
22	10.0
24	9.3
26	8.7
28	8.2
30	7.7
32	7.2
34	6.8
36	6.3
38	5.9
40	5.4
42	5.1
44	4.7
46	4.5
48	4.3
50	4.0
52	3.7
54	3.5
56	3.3
58	3.1
60	2.9
62	2.8
64	2.5
66	
68	
主臂组合	221100
倍率	1
支腿全伸_平衡重80_副臂安装角0_副臂长度56	
R/L	47.7 +2.6
18	11.6
20	10.7
22	10.0
24	9.3
26	8.7

QAY800 全地面起重机操作手册
起重性能表

28	8.2
30	7.7
32	7.2
34	6.8
36	6.3
38	5.9
40	5.4
42	5.1
44	4.7
46	4.5
48	4.3
50	4.0
52	3.7
54	3.5
56	3.3
58	3.1
60	2.9
62	2.8
64	2.5
66	2.3
68	2.2
主臂组合	221100
倍率	1
支腿全伸_平衡重 110_副臂安装角 0_副臂长度 56	
R/L	47.7 +2.6
18	11.6
20	10.7
22	10.0
24	9.3
26	8.7
28	8.2
30	7.7
32	7.2
34	6.8
36	6.3
38	5.9
40	5.4
42	5.1
44	4.7
46	4.5
48	4.3
50	4.0
52	3.7

54	3.5
56	3.3
58	3.1
60	2.9
62	2.8
64	2.5
66	2.3
68	2.2
主臂组合	221100
倍率	1

十七、 固定副臂+超起性能表，安装角 20°，超起安装角 15° (单边)

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	80.0		
18	76.0	64.8	53.6
20	72.0	62.0	52.0
22	68.0	59.2	50.4
24	64.0	56.4	48.8
26	56.2	53.5	47.0
28	47.8	49.5	45.1
30	40.8	42.5	43.4
32	34.8	36.5	38.0
34	29.7	31.4	32.9
36	25.2	26.9	28.4
38	21.3	23.0	24.5
40	17.9	19.6	21.0
42	14.8	16.5	18.0
44	12.0	13.7	15.2
46	9.5	11.2	12.7
48	7.2	8.9	10.4
50	5.1	6.8	8.3
52	3.2	4.9	6.4
54		3.2	4.7
56			3.1
58			
主臂组合	222220	222221	222222

QAY800 全地面起重机操作手册
起重性能表

倍率	6	5	4
支腿全伸_平衡重 80_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	80.0		
18	76.0	64.8	53.6
20	72.0	62.0	52.0
22	68.0	59.2	50.4
24	64.0	56.4	48.8
26	60.0	53.5	47.0
28	56.8	51.0	45.1
30	52.8	48.1	43.4
32	47.3	45.5	41.4
34	41.3	43.0	39.5
36	36.1	37.8	37.8
38	31.5	33.2	34.7
40	27.4	29.1	30.6
42	23.8	25.5	27.0
44	20.5	22.3	23.7
46	17.6	19.3	20.8
48	14.9	16.7	18.2
50	12.5	14.2	15.7
52	10.2	12.0	13.5
54	8.2	9.9	11.5
56	6.3	8.1	9.6
58	4.5	6.3	7.8
60	2.8	4.6	6.2
62		3.1	4.7
64			3.3
66			
主臂组合	222220	222221	222222
倍率	6	5	4
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
16	80.0		
18	76.0	64.8	53.6
20	72.0	62.0	52.0
22	68.0	59.2	50.4
24	64.0	56.4	48.8
26	60.0	53.5	47.0
28	56.8	51.0	45.1
30	52.8	48.1	43.4
32	49.6	45.5	41.4
34	46.6	43.0	39.5

36	43.7	40.7	37.8
38	41.0	38.5	36.0
40	37.0	35.9	34.2
42	32.8	33.3	32.3
44	29.1	30.8	30.6
46	25.7	27.5	28.9
48	22.7	24.4	25.9
50	19.9	21.6	23.1
52	17.3	19.1	20.6
54	15.0	16.7	18.3
56	12.8	14.6	16.1
58	10.7	12.6	14.1
60	8.9	10.7	12.2
62	7.1	8.9	10.5
64	5.4	7.3	8.9
66	3.8	5.7	7.4
68	2.3	4.3	5.9
70		2.9	4.6
72			3.3
74			2.1
主臂组合	222220	222221	222222
倍率	6	5	4

2、14 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	37.8						
26	36.6	37.5	38.4				
28	35.3	36.2	37.2	36.9	36.6		
30	34.2	35.4	36.6	36.1	35.6		
32	33.4	34.5	35.6	35.1	34.6	31.1	27.6
34	30.0	31.2	32.2	33.4	33.5	30.1	26.6
36	25.2	26.5	27.5	28.7	29.8	29.1	25.7
38	21.1	22.4	23.4	24.7	25.7	27.0	24.8
40	17.4	18.7	19.8	21.0	22.1	23.4	24.1
42	14.1	15.4	16.5	17.8	18.9	20.2	21.3
44	11.1	12.5	13.6	14.9	16.0	17.3	18.4
46	8.4	9.8	10.9	12.3	13.4	14.7	15.8
48	5.9	7.4	8.5	9.9	11.0	12.3	13.5
50	3.6	5.1	6.3	7.7	8.9	10.2	11.3
52		3.1	4.3	5.7	6.9	8.2	9.4

QAY800 全地面起重机操作手册
起重性能表

54			2.4	3.8	5.0	6.4	7.6
56				2.1	3.3	4.7	5.9
58						3.1	4.3
60							2.9
62							
64							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	3	3	3	2
支腿全伸_平衡重 80_副臂安装角 20_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	37.8						
26	36.6	37.5	38.4				
28	35.3	36.2	37.2	36.9	36.6		
30	34.2	35.4	36.6	36.1	35.6		
32	33.4	34.5	35.6	35.1	34.6	31.1	27.6
34	32.5	33.7	34.9	34.2	33.5	30.1	26.6
36	31.8	33.0	34.2	33.4	32.5	29.1	25.7
38	31.1	32.3	33.6	32.6	31.7	28.3	24.8
40	27.0	28.3	29.3	30.6	30.8	27.5	24.1
42	23.1	24.5	25.5	26.8	27.9	26.7	23.4
44	19.7	21.0	22.1	23.5	24.6	25.9	22.7
46	16.5	17.9	19.1	20.4	21.5	22.8	22.1
48	13.7	15.1	16.3	17.6	18.8	20.1	21.2
50	11.0	12.5	13.7	15.1	16.3	17.6	18.7
52	8.6	10.1	11.4	12.8	13.9	15.3	16.4
54	6.3	7.9	9.2	10.6	11.8	13.2	14.3
56	4.1	5.8	7.2	8.6	9.8	11.2	12.4
58	2.0	3.9	5.3	6.8	8.0	9.4	10.6
60		2.0	3.5	5.0	6.3	7.7	8.9
62				3.4	4.7	6.1	7.4
64					3.2	4.7	5.9
66						3.3	4.5
68						2.0	3.2
70							2.0
72							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	3	3	3	2
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	37.8						
26	36.6	37.5	38.4				
28	35.3	36.2	37.2	36.9	36.6		
30	34.2	35.4	36.6	36.1	35.6		

QAY800 全地面起重机操作手册
起重性能表

32	33.4	34.5	35.6	35.1	34.6	31.1	27.6
34	32.5	33.7	34.9	34.2	33.5	30.1	26.6
36	31.8	33.0	34.2	33.4	32.5	29.1	25.7
38	31.1	32.3	33.6	32.6	31.7	28.3	24.8
40	30.5	31.7	33.0	31.9	30.8	27.5	24.1
42	30.0	31.2	32.4	31.2	30.0	26.7	23.4
44	28.2	29.6	30.7	30.6	29.4	26.0	22.7
46	24.7	26.1	27.2	28.5	28.2	25.1	22.1
48	21.4	22.9	24.0	25.4	26.5	24.1	21.5
50	18.4	19.9	21.1	22.5	23.6	23.0	20.9
52	15.6	17.2	18.4	19.8	21.0	22.0	20.2
54	13.0	14.7	16.0	17.4	18.6	19.9	19.4
56	10.6	12.4	13.7	15.1	16.4	17.7	18.6
58	8.3	10.2	11.6	13.0	14.3	15.7	16.9
60		8.1	9.6	11.1	12.3	13.7	15.0
62		6.1	7.7	9.2	10.5	12.0	13.2
64		4.1	5.9	7.5	8.8	10.3	11.5
66			4.2	5.9	7.2	8.7	10.0
68			2.5	4.3	5.7	7.2	8.5
70				2.8	4.3	5.8	7.1
72					2.9	4.5	5.8
74						3.2	4.6
76						2.0	3.4
78							2.3
80							
82							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	3	3	3	3	3	3	2

3、21 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	21.3	21.7	22.2				
22	20.5	21.0	21.6	21.7	21.9		
24	19.9	20.5	21.0	21.2	21.4		
26	19.3	19.9	20.5	20.7	20.9	19.6	18.3
28	18.7	19.4	20.0	20.2	20.5	19.1	17.7
30	18.3	18.9	19.4	19.7	20.0	18.6	17.3
32	17.7	18.4	19.1	19.4	19.7	18.2	16.7
34	17.4	18.1	18.7	19.0	19.3	17.8	16.2
36	17.0	17.7	18.4	18.6	18.9	17.3	15.8

QAY800 全地面起重机操作手册
起重性能表

38	16.7	17.4	18.1	18.2	18.3	16.8	15.4
40	16.3	17.1	17.8	17.7	17.6	16.3	15.0
42	16.0	16.7	17.5	17.4	17.3	15.9	14.5
44	15.8	16.4	17.1	17.0	16.8	15.5	14.1
46	13.1	14.1	14.8	15.8	16.3	15.0	13.7
48	10.6	11.5	12.3	13.3	14.1	14.6	13.3
50	8.3	9.2	10.0	11.0	11.9	12.9	13.0
52	6.1	7.1	8.0	9.0	9.8	10.9	11.8
54	4.1	5.2	6.0	7.1	7.9	9.0	9.9
56	2.2	3.3	4.2	5.3	6.2	7.3	8.2
58			2.6	3.6	4.6	5.7	6.6
60				2.1	3.1	4.2	5.1
62						2.8	3.7
64							2.4
66							
68							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2
支腿全伸_平衡重80_副臂安装角20_副臂长度21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	21.3	21.7	22.2				
22	20.5	21.0	21.6	21.7	21.9		
24	19.9	20.5	21.0	21.2	21.4		
26	19.3	19.9	20.5	20.7	20.9	19.6	18.3
28	18.7	19.4	20.0	20.2	20.5	19.1	17.7
30	18.3	18.9	19.4	19.7	20.0	18.6	17.3
32	17.7	18.4	19.1	19.4	19.7	18.2	16.7
34	17.4	18.1	18.7	19.0	19.3	17.8	16.2
36	17.0	17.7	18.4	18.6	18.9	17.3	15.8
38	16.7	17.4	18.1	18.2	18.3	16.8	15.4
40	16.3	17.1	17.8	17.7	17.6	16.3	15.0
42	16.0	16.7	17.5	17.4	17.3	15.9	14.5
44	15.8	16.4	17.1	17.0	16.8	15.5	14.1
46	15.5	16.2	16.8	16.6	16.3	15.0	13.7
48	15.3	15.9	16.6	16.2	15.9	14.6	13.3
50	14.5	15.4	16.2	15.8	15.4	14.2	13.0
52	12.4	13.3	14.1	14.7	15.2	13.9	12.7
54	10.5	11.4	12.3	13.1	13.9	13.1	12.2
56	8.7	9.7	10.7	11.4	12.2	12.0	11.8
58	6.7	7.9	8.8	9.9	10.7	11.1	11.5
60	4.8	6.1	7.0	8.1	9.1	10.0	10.8
62	3.0	4.3	5.3	6.5	7.5	8.6	9.4
64		2.5	3.8	4.9	5.9	7.1	8.1

66			2.3	3.5	4.5	5.6	6.6
68				2.1	3.1	4.3	5.3
70						3.0	4.1
72							2.9
74							
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
20	21.3	21.7	22.2				
22	20.5	21.0	21.6	21.7	21.9		
24	19.9	20.5	21.0	21.2	21.4		
26	19.3	19.9	20.5	20.7	20.9	19.6	18.3
28	18.7	19.4	20.0	20.2	20.5	19.1	17.7
30	18.3	18.9	19.4	19.7	20.0	18.6	17.3
32	17.7	18.4	19.1	19.4	19.7	18.2	16.7
34	17.4	18.1	18.7	19.0	19.3	17.8	16.2
36	17.0	17.7	18.4	18.6	18.9	17.3	15.8
38	16.7	17.4	18.1	18.2	18.3	16.8	15.4
40	16.3	17.1	17.8	17.7	17.6	16.3	15.0
42	16.0	16.7	17.5	17.4	17.3	15.9	14.5
44	15.8	16.4	17.1	17.0	16.8	15.5	14.1
46	15.5	16.2	16.8	16.6	16.3	15.0	13.7
48	15.3	15.9	16.6	16.2	15.9	14.6	13.3
50	14.5	15.4	16.2	15.8	15.4	14.2	13.0
52	12.4	13.3	14.1	14.7	15.2	13.9	12.7
54	10.5	11.4	12.3	13.1	13.9	13.1	12.2
56	8.7	9.7	10.7	11.4	12.2	12.0	11.8
58	7.0	8.1	9.1	9.9	10.7	11.1	11.5
60	5.5	6.6	7.6	8.4	9.2	10.0	10.8
62	3.9	5.1	6.2	7.1	7.9	8.7	9.4
64		2.5	4.9	5.8	6.7	7.4	8.2
66			3.7	4.5	5.4	6.2	7.0
68			2.4	3.3	4.3	5.1	5.9
70					3.2	4.0	4.8
72					2.2	3.0	3.8
74							2.9
76							2.0
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2

4、 28 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角20_副臂长度28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
22	14.7						
24	14.1						
26	13.6	14.3	14.8				
28	13.1	13.9	14.6	14.5	14.4		
30	12.7	13.4	14.1	14.1	14.0		
32	12.3	13.1	13.8	13.7	13.7		
34	11.8	12.6	13.3	13.4	13.5	12.9	12.4
36	11.5	12.2	13.0	13.1	13.1	12.6	12.1
38	11.2	11.9	12.7	12.8	12.9	12.3	11.7
40	10.9	11.7	12.4	12.5	12.7	12.0	11.4
42	10.7	11.4	12.2	12.3	12.4	11.7	11.0
44	10.5	11.2	11.8	12.0	12.1	11.4	10.7
46	10.2	10.9	11.6	11.7	11.8	11.2	10.5
48	10.0	10.7	11.4	11.6	11.7	10.9	10.1
50	9.8	10.5	11.3	11.4	11.5	10.6	9.8
52	9.5	10.3	11.0	11.2	11.4	10.5	9.5
54	7.9	8.6	9.1	9.9	10.5	10.3	9.3
56	6.0	6.7	7.3	8.1	8.7	9.6	9.0
58	4.3	5.0	5.6	6.4	7.1	7.9	8.7
60	2.6	3.4	4.0	4.8	5.5	6.4	7.1
62			2.5	3.3	4.1	4.9	5.7
64				2.0	2.7	3.6	4.4
66						2.3	3.1
68							2.0
70							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
22	14.7						
24	14.1						
26	13.6	14.3	14.8				
28	13.1	13.9	14.6	14.5	14.4		
30	12.7	13.4	14.1	14.1	14.0		
32	12.3	13.1	13.8	13.7	13.7		
34	11.8	12.6	13.3	13.4	13.5	12.9	12.4
36	11.5	12.2	13.0	13.1	13.1	12.6	12.1
38	11.2	11.9	12.7	12.8	12.9	12.3	11.7

QAY800 全地面起重机操作手册
起重性能表

40	10.9	11.7	12.4	12.5	12.7	12.0	11.4
42	10.7	11.4	12.2	12.3	12.4	11.7	11.0
44	10.5	11.2	11.8	12.0	12.1	11.4	10.7
46	10.2	10.9	11.6	11.7	11.8	11.2	10.5
48	10.0	10.7	11.4	11.6	11.7	10.9	10.1
50	9.8	10.5	11.3	11.4	11.5	10.6	9.8
52	9.5	10.3	11.0	11.2	11.4	10.5	9.5
54	9.4	10.1	10.8	11.0	11.3	10.3	9.3
56	9.4	10.1	10.7	10.9	11.2	10.1	9.0
58	9.2	9.8	10.5	10.6	10.8	9.8	8.7
60	8.6	9.4	10.0	10.4	10.6	9.5	8.5
62	6.9	7.7	8.3	9.2	9.9	9.3	8.3
64	5.2	6.1	6.7	7.6	8.3	8.8	8.1
66	3.6	4.5	5.2	6.1	6.9	7.8	7.7
68	2.0	3.0	3.8	4.7	5.5	6.4	7.2
70			2.4	3.4	4.2	5.1	5.9
72				2.1	2.9	3.9	4.7
74						2.7	3.6
76							2.5
78							
80							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
22	14.7						
24	14.1						
26	13.6	14.3	14.8				
28	13.1	13.9	14.6	14.5	14.4		
30	12.7	13.4	14.1	14.1	14.0		
32	12.3	13.1	13.8	13.7	13.7		
34	11.8	12.6	13.3	13.4	13.5	12.9	12.4
36	11.5	12.2	13.0	13.1	13.1	12.6	12.1
38	11.2	11.9	12.7	12.8	12.9	12.3	11.7
40	10.9	11.7	12.4	12.5	12.7	12.0	11.4
42	10.7	11.4	12.2	12.3	12.4	11.7	11.0
44	10.5	11.2	11.8	12.0	12.1	11.4	10.7
46	10.2	10.9	11.6	11.7	11.8	11.2	10.5
48	10.0	10.7	11.4	11.6	11.7	10.9	10.1
50	9.8	10.5	11.3	11.4	11.5	10.6	9.8
52	9.5	10.3	11.0	11.2	11.4	10.5	9.5
54	9.4	10.1	10.8	11.0	11.3	10.3	9.3
56	9.4	10.1	10.7	10.9	11.2	10.1	9.0

QAY800 全地面起重机操作手册
起重性能表

58	9.2	9.8	10.5	10.6	10.8	9.8	8.7
60	9.0	9.6	10.2	10.4	10.6	9.5	8.5
62	8.4	9.1	9.8	10.0	10.2	9.3	8.3
64	6.9	7.6	8.4	9.0	9.5	8.8	8.1
66	5.4	6.2	6.9	7.5	8.2	7.9	7.7
68	4.0	4.8	5.6	6.3	7.0	7.2	7.5
70	2.8	3.6	4.5	5.2	5.9	6.5	7.1
72			3.3	4.0	4.7	5.3	6.0
74			2.3	3.0	3.7	4.3	4.9
76					2.8	3.4	4.0
78						2.5	3.1
80							2.3
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

5、35 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 20_副臂长度 35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
26	10.2						
28	9.8						
30	9.4	9.5	9.7				
32	9.0	9.2	9.4				
34	8.6	8.9	9.1	9.0	8.9		
36	8.3	8.6	8.9	8.7	8.6		
38	7.9	8.2	8.5	8.5	8.4	8.3	8.3
40	7.7	8.0	8.3	8.3	8.3	8.2	8.1
42	7.5	7.8	8.1	8.1	8.1	8.0	7.9
44	7.2	7.5	7.8	7.8	7.8	7.8	7.8
46	7.1	7.4	7.6	7.6	7.7	7.7	7.7
48	6.8	7.1	7.5	7.5	7.5	7.5	7.5
50	6.7	7.0	7.2	7.3	7.4	7.4	7.4
52	6.4	6.8	7.1	7.2	7.2	7.2	7.1
54	6.3	6.7	7.0	7.1	7.1	7.1	7.0
56	6.2	6.6	6.9	7.0	7.0	6.9	6.8
58	6.1	6.4	6.7	6.8	6.9	6.7	6.6
60	5.7	6.1	6.5	6.6	6.7	6.5	6.3
62	4.1	4.6	5.0	5.6	6.1	6.4	6.2
64	2.6	3.2	3.6	4.2	4.7	5.4	6.0
66			2.2	2.9	3.4	4.1	4.8
68					2.2	2.9	3.6
70							2.4

QAY800 全地面起重机操作手册
起重性能表

72							
74							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
26	10.2						
28	9.8						
30	9.4	9.5	9.7				
32	9.0	9.2	9.4				
34	8.6	8.9	9.1	9.0	8.9		
36	8.3	8.6	8.9	8.7	8.6		
38	7.9	8.2	8.5	8.5	8.4	8.3	8.3
40	7.7	8.0	8.3	8.3	8.3	8.2	8.1
42	7.5	7.8	8.1	8.1	8.1	8.0	7.9
44	7.2	7.5	7.8	7.8	7.8	7.8	7.8
46	7.1	7.4	7.6	7.6	7.7	7.7	7.7
48	6.8	7.1	7.5	7.5	7.5	7.5	7.5
50	6.7	7.0	7.2	7.3	7.4	7.4	7.4
52	6.4	6.8	7.1	7.2	7.2	7.2	7.1
54	6.3	6.7	7.0	7.1	7.1	7.1	7.0
56	6.2	6.6	6.9	7.0	7.0	6.9	6.8
58	6.1	6.4	6.7	6.8	6.9	6.7	6.6
60	6.1	6.3	6.6	6.6	6.7	6.5	6.3
62	6.0	6.2	6.4	6.6	6.7	6.4	6.2
64	5.9	6.2	6.4	6.5	6.6	6.3	6.1
66	5.8	6.0	6.2	6.3	6.4	6.2	5.9
68	5.2	5.8	6.2	6.3	6.3	6.0	5.8
70	3.7	4.4	4.9	5.6	6.1	5.9	5.5
72	2.4	3.1	3.6	4.3	4.9	5.6	5.3
74			2.4	3.1	3.7	4.5	5.1
76					2.6	3.4	4.0
78						2.3	3.0
80							2.0
82							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
26	10.2						
28	9.8						
30	9.4	9.5	9.7				
32	9.0	9.2	9.4				

QAY800 全地面起重机操作手册
起重性能表

34	8.6	8.9	9.1	9.0	8.9		
36	8.3	8.6	8.9	8.7	8.6		
38	7.9	8.2	8.5	8.5	8.4	8.3	8.3
40	7.7	8.0	8.3	8.3	8.3	8.2	8.1
42	7.5	7.8	8.1	8.1	8.1	8.0	7.9
44	7.2	7.5	7.8	7.8	7.8	7.8	7.8
46	7.1	7.4	7.6	7.6	7.7	7.7	7.7
48	6.8	7.1	7.5	7.5	7.5	7.5	7.5
50	6.7	7.0	7.2	7.3	7.4	7.4	7.4
52	6.4	6.8	7.1	7.2	7.2	7.2	7.1
54	6.3	6.7	7.0	7.1	7.1	7.1	7.0
56	6.2	6.6	6.9	7.0	7.0	6.9	6.8
58	6.1	6.4	6.7	6.8	6.9	6.7	6.6
60	6.1	6.3	6.6	6.6	6.7	6.5	6.3
62	6.0	6.2	6.4	6.6	6.7	6.4	6.2
64	5.9	6.2	6.4	6.5	6.6	6.3	6.1
66	5.8	6.0	6.2	6.3	6.4	6.2	5.9
68	5.5	5.9	6.2	6.3	6.3	6.0	5.8
70	5.2	5.6	6.1	6.2	6.3	5.9	5.5
72	4.0	4.6	5.2	5.6	6.1	5.7	5.3
74	2.8	3.4	4.0	4.5	5.1	5.1	5.2
76			3.0	3.5	4.0	4.5	4.9
78			2.0	2.5	3.0	3.6	4.1
80					2.2	2.7	3.2
82							2.3
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

6、42 米固定副臂性能表

支腿全伸_平衡重50_副臂安装角20_副臂长度42							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	7.1						
32	6.8	6.7	6.7				
34	6.4	6.4	6.4				
36	6.1	6.2	6.2	6.0	5.8		
38	5.9	5.9	6.0	5.8	5.6		
40	5.5	5.6	5.8	5.6	5.4		
42	5.3	5.4	5.5	5.4	5.3	5.2	5.1
44	4.9	5.1	5.3	5.2	5.2	5.1	4.9
46	4.7	4.9	5.2	5.1	5.1	4.9	4.8
48	4.6	4.8	4.9	4.9	4.9	4.9	4.8

QAY800 全地面起重机操作手册
起重性能表

50	4.5	4.7	4.8	4.8	4.8	4.8	4.7
52	4.4	4.5	4.7	4.7	4.7	4.7	4.6
54	4.3	4.4	4.6	4.6	4.6	4.5	4.5
56	4.1	4.4	4.6	4.5	4.5	4.5	4.5
58	4.0	4.3	4.5	4.5	4.5	4.4	4.4
60	4.0	4.2	4.4	4.4	4.4	4.4	4.4
62	3.9	4.1	4.3	4.3	4.3	4.3	4.3
64	3.8	4.0	4.3	4.3	4.3	4.3	4.2
66	3.8	4.0	4.1	4.1	4.0	4.0	4.0
68	2.5	2.8	3.1	3.5	3.9	4.0	2.9
70				2.4	2.8	3.3	2.0
72						2.3	
74							
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角20_副臂长度42							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	7.1						
32	6.8	6.7	6.7				
34	6.4	6.4	6.4				
36	6.1	6.2	6.2	6.0	5.8		
38	5.9	5.9	6.0	5.8	5.6		
40	5.5	5.6	5.8	5.6	5.4		
42	5.3	5.4	5.5	5.4	5.3	5.2	5.1
44	4.9	5.1	5.3	5.2	5.2	5.1	4.9
46	4.7	4.9	5.2	5.1	5.1	4.9	4.8
48	4.6	4.8	4.9	4.9	4.9	4.9	4.8
50	4.5	4.7	4.8	4.8	4.8	4.8	4.7
52	4.4	4.5	4.7	4.7	4.7	4.7	4.6
54	4.3	4.4	4.6	4.6	4.6	4.5	4.5
56	4.1	4.4	4.6	4.5	4.5	4.5	4.5
58	4.0	4.3	4.5	4.5	4.5	4.4	4.4
60	4.0	4.2	4.4	4.4	4.4	4.4	4.4
62	3.9	4.1	4.3	4.3	4.3	4.3	4.3
64	3.8	4.0	4.3	4.3	4.3	4.3	4.2
66	3.8	4.0	4.1	4.1	4.0	4.0	4.0
68	3.7	3.9	4.1	4.1	4.0	4.0	2.9
70	3.7	3.9	4.0	4.0	3.9	3.8	2.0
72	3.6	3.7	3.9	3.9	3.9	3.7	
74	3.5	3.7	3.9	3.9	3.9	3.7	
76	2.5	2.9	3.3	3.7	3.8	3.5	
78			2.2	2.7	3.2	3.4	

80					2.2	2.8	
82							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 20_副臂长度 42							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	7.1						
32	6.8	6.7	6.7				
34	6.4	6.4	6.4				
36	6.1	6.2	6.2	6.0	5.8		
38	5.9	5.9	6.0	5.8	5.6		
40	5.5	5.6	5.8	5.6	5.4		
42	5.3	5.4	5.5	5.4	5.3	5.2	5.1
44	4.9	5.1	5.3	5.2	5.2	5.1	4.9
46	4.7	4.9	5.2	5.1	5.1	4.9	4.8
48	4.6	4.8	4.9	4.9	4.9	4.9	4.8
50	4.5	4.7	4.8	4.8	4.8	4.8	4.7
52	4.4	4.5	4.7	4.7	4.7	4.7	4.6
54	4.3	4.4	4.6	4.6	4.6	4.5	4.5
56	4.1	4.4	4.6	4.5	4.5	4.5	4.5
58	4.0	4.3	4.5	4.5	4.5	4.4	4.4
60	4.0	4.2	4.4	4.4	4.4	4.4	4.4
62	3.9	4.1	4.3	4.3	4.3	4.3	4.3
64	3.8	4.0	4.3	4.3	4.3	4.3	4.2
66	3.8	4.0	4.1	4.1	4.0	4.0	4.0
68	3.7	3.9	4.1	4.1	4.0	4.0	2.9
70	3.7	3.9	4.0	4.0	3.9	3.8	2.0
72	3.6	3.7	3.9	3.9	3.9	3.7	
74	3.5	3.7	3.9	3.9	3.9	3.7	
76	3.3	3.5	3.7	3.7	3.8	3.5	
78	2.5	3.0	3.5	3.6	3.8	3.4	
80		2.1	2.5	2.9	3.3	3.0	
82				2.0	2.4	2.4	
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

十八、 固定副臂+超起性能表，安装角 40°，超起安装角 15° (单边)

1、 6.3 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	53.3		
20	51.8	48.6	45.5
22	51.0	47.2	43.4
24	49.5	45.8	42.0
26	48.8	44.8	40.9
28	47.3	43.4	39.6
30	42.6	42.3	38.1
32	36.4	38.1	36.3
34	31.1	32.8	34.3
36	26.5	28.2	29.7
38	22.5	24.2	25.7
40	18.9	20.6	22.1
42	15.7	17.4	18.9
44	12.8	14.5	16.1
46	10.2	11.9	13.5
48	7.8	9.6	11.1
50	5.6	7.4	9.0
52	3.6	5.5	7.0
54		3.6	5.2
56			3.5
58			2.0
主臂组合	222220	222221	222222
倍率	4	4	4
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	53.3		
20	51.8	48.6	45.5
22	51.0	47.2	43.4
24	49.5	45.8	42.0
26	48.8	44.8	40.9
28	47.3	43.4	39.6
30	46.5	42.3	38.1
32	45.8	41.0	36.3
34	42.7	39.2	34.6
36	37.4	37.1	33.2
38	32.6	34.3	31.6
40	28.5	30.2	30.0
42	24.7	26.4	27.9
44	21.4	23.1	24.6
46	18.3	20.1	21.6
48	15.6	17.3	18.9

QAY800 全地面起重机操作手册
起重性能表

50	13.0	14.8	16.4
52	10.7	12.5	14.1
54	8.6	10.4	12.0
56	6.6	8.4	10.0
58		6.6	8.2
60		4.9	6.6
62			5.0
64			3.5
主臂组合	222220	222221	222222
倍率	4	4	4
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 6.3			
R/L	68.3+2.6	73.5+2.6	78.6+2.6
18	53.3		
20	51.8	48.6	45.5
22	51.0	47.2	43.4
24	49.5	45.8	42.0
26	48.8	44.8	40.9
28	47.3	43.4	39.6
30	46.5	42.3	38.1
32	45.8	41.0	36.3
34	43.8	39.2	34.6
36	41.1	37.1	33.2
38	38.9	35.2	31.6
40	36.2	33.1	30.0
42	33.0	30.7	28.4
44	29.9	28.4	26.9
46	26.5	26.4	25.5
48	23.3	24.4	24.2
50	20.4	22.2	22.1
52	17.8	19.6	20.2
54	15.4	17.2	18.5
56	13.1	15.0	16.6
58		12.9	14.5
60		11.0	12.6
62			10.8
64			9.1
主臂组合	222220	222221	222222
倍率	4	4	4

2、 14 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	24.1						
32	23.9	24.3	24.7				
34	23.8	24.2	24.7	25.0	25.3		
36	23.6	24.1	24.6	25.0	25.3	23.9	22.6
38	23.5	24.1	24.6	25.0	25.3	23.6	22.0
40	19.9	21.4	22.5	23.8	24.9	23.4	21.5
42	16.3	17.8	19.0	20.3	21.5	22.7	21.0
44	13.0	14.6	15.8	17.2	18.4	19.6	20.5
46	10.0	11.7	12.9	14.3	15.5	16.9	18.0
48	7.3	9.0	10.3	11.8	13.0	14.3	15.5
50	4.7	6.5	7.9	9.4	10.6	12.0	13.2
52		4.2	5.7	7.2	8.5	9.9	11.1
54		2.0	3.6	5.2	6.5	7.9	9.1
56				3.3	4.6	6.1	7.3
58					2.9	4.4	5.6
60						2.8	4.1
62							2.6
64							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	24.1						
32	23.9	24.3	24.7				
34	23.8	24.2	24.7	25.0	25.3		
36	23.6	24.1	24.6	25.0	25.3	23.9	22.6
38	23.5	24.1	24.6	25.0	25.3	23.6	22.0
40	23.5	24.0	24.5	24.9	25.3	23.4	21.5
42	23.4	23.9	24.5	24.9	25.3	23.2	21.0
44	21.6	23.1	24.4	24.8	25.2	22.9	20.5
46	18.2	19.8	21.1	22.5	23.7	22.4	20.0
48	15.0	16.7	18.1	19.5	20.7	22.0	19.6
50	12.1	13.9	15.3	16.8	18.0	19.4	19.2
52		11.3	12.7	14.3	15.5	16.9	18.1
54		8.8	10.4	12.0	13.3	14.7	15.9
56			8.2	9.8	11.1	12.6	13.8
58			6.1	7.8	9.2	10.6	11.9
60				5.9	7.3	8.8	10.1
62				4.1	5.6	7.1	8.4
64					4.0	5.5	6.9
66					2.4	4.0	5.4

68						2.6	4.0
70							2.7
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 14							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	24.1						
32	23.9	24.3	24.7				
34	23.8	24.2	24.7	25.0	25.3		
36	23.6	24.1	24.6	25.0	25.3	23.9	22.6
38	23.5	24.1	24.6	25.0	25.3	23.6	22.0
40	23.5	24.0	24.5	24.9	25.3	23.4	21.5
42	23.4	23.9	24.5	24.9	25.3	23.2	21.0
44	23.4	23.9	24.5	24.8	25.2	22.9	20.5
46	23.4	23.9	24.5	24.7	24.8	22.4	20.0
48	22.8	23.9	24.5	24.5	24.5	22.0	19.6
50	19.5	21.3	22.7	24.2	24.2	21.7	19.2
52		18.4	19.8	21.3	22.6	21.3	18.7
54		15.6	17.2	18.7	20.0	21.0	18.2
56			14.7	16.3	17.7	19.1	17.8
58			12.4	14.1	15.4	16.9	17.3
60				11.9	13.4	14.9	16.1
62				9.9	11.4	13.0	14.3
64					9.6	11.2	12.5
66					7.9	9.5	10.8
68						7.9	9.3
70						6.4	7.8
72							6.4
74							5.1
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	2	2	2	2	2	2	2

3、21 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	13.9						
26	13.7						
28	13.6	13.7	13.9				
30	13.5	13.6	13.8	13.9	14.0		
32	13.2	13.5	13.7	13.8	13.9		
34	13.2	13.5	13.7	13.8	13.9	13.8	13.7

QAY800 全地面起重机操作手册
起重性能表

36	13.0	13.3	13.6	13.7	13.9	13.7	13.5
38	13.0	13.3	13.6	13.7	13.9	13.6	13.2
40	13.0	13.3	13.6	13.7	13.9	13.4	12.9
42	13.0	13.3	13.6	13.7	13.8	13.2	12.7
44	13.0	13.3	13.6	13.7	13.8	13.1	12.4
46	13.0	13.3	13.6	13.7	13.8	13.0	12.2
48	13.0	13.3	13.6	13.7	13.8	12.8	11.8
50	10.7	11.9	12.8	13.6	13.7	12.7	11.6
52	8.2	9.5	10.5	11.6	12.5	12.5	11.4
54	5.9	7.2	8.3	9.5	10.4	11.5	11.3
56	3.7	5.2	6.3	7.5	8.5	9.6	10.6
58			4.4	5.6	6.7	7.8	8.8
60			2.6	3.9	5.0	6.1	7.1
62				2.2	3.4	4.6	5.6
64						3.1	4.2
66							2.8
68							
70							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	13.9						
26	13.7						
28	13.6	13.7	13.9				
30	13.5	13.6	13.8	13.9	14.0		
32	13.2	13.5	13.7	13.8	13.9		
34	13.2	13.5	13.7	13.8	13.9	13.8	13.7
36	13.0	13.3	13.6	13.7	13.9	13.7	13.5
38	13.0	13.3	13.6	13.7	13.9	13.6	13.2
40	13.0	13.3	13.6	13.7	13.9	13.4	12.9
42	13.0	13.3	13.6	13.7	13.8	13.2	12.7
44	13.0	13.3	13.6	13.7	13.8	13.1	12.4
46	13.0	13.3	13.6	13.7	13.8	13.0	12.2
48	13.0	13.3	13.6	13.7	13.8	12.8	11.8
50	13.0	13.3	13.6	13.6	13.7	12.7	11.6
52	12.9	13.2	13.5	13.6	13.7	12.5	11.4
54	12.7	13.1	13.3	13.3	13.3	12.3	11.3
56	10.2	11.7	12.8	13.1	13.0	12.0	11.0
58			10.6	11.9	12.9	11.9	10.8
60			8.6	9.9	11.0	11.4	10.6
62			6.7	8.1	9.2	10.4	10.4
64			4.9	6.3	7.5	8.7	9.8

QAY800 全地面起重机操作手册
起重性能表

66					5.9	7.1	8.2
68					4.3	5.7	6.8
70					2.9	4.3	5.4
72							4.1
74							2.9
76							
78							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 21							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
24	13.9						
26	13.7						
28	13.6	13.7	13.9				
30	13.5	13.6	13.8	13.9	14.0		
32	13.2	13.5	13.7	13.8	13.9		
34	13.2	13.5	13.7	13.8	13.9	13.8	13.7
36	13.0	13.3	13.6	13.7	13.9	13.7	13.5
38	13.0	13.3	13.6	13.7	13.9	13.6	13.2
40	13.0	13.3	13.6	13.7	13.9	13.4	12.9
42	13.0	13.3	13.6	13.7	13.8	13.2	12.7
44	13.0	13.3	13.6	13.7	13.8	13.1	12.4
46	13.0	13.3	13.6	13.7	13.8	13.0	12.2
48	13.0	13.3	13.6	13.7	13.8	12.8	11.8
50	13.0	13.3	13.6	13.6	13.7	12.7	11.6
52	12.9	13.2	13.5	13.6	13.7	12.5	11.4
54	12.8	13.1	13.3	13.3	13.3	12.3	11.3
56	11.7	12.5	13.2	13.1	13.0	12.0	11.0
58			12.1	12.5	13.0	11.9	10.8
60			10.2	11.2	12.2	11.4	10.6
62			8.6	9.6	10.6	10.5	10.4
64			7.0	8.1	9.1	9.6	10.1
66					7.7	8.6	9.4
68					6.3	7.2	8.2
70					5.1	6.0	6.9
72							5.8
74							4.6
76							3.6
78							2.6
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

4、 28 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	8.4						
32	8.2	8.2	8.3				
34	8.1	8.1	8.2				
36	7.9	8.1	8.2	8.1	7.9		
38	7.7	7.9	8.1	8.0	7.9		
40	7.7	7.9	8.1	8.0	7.9	7.8	7.7
42	7.6	7.8	7.9	7.9	7.9	7.8	7.7
44	7.6	7.8	7.9	7.9	7.8	7.8	7.7
46	7.6	7.8	7.9	7.9	7.8	7.8	7.7
48	7.6	7.8	7.9	7.9	7.8	7.8	7.7
50	7.6	7.8	7.9	7.9	7.8	7.7	7.6
52	7.6	7.8	7.9	7.9	7.8	7.7	7.6
54	7.6	7.8	7.9	7.9	7.8	7.7	7.6
56	7.6	7.7	7.8	7.8	7.8	7.7	7.6
58	6.7	7.6	7.8	7.8	7.8	7.6	7.5
60	4.8	5.8	6.6	7.6	7.8	7.6	7.4
62	2.9	4.0	4.9	5.9	6.7	7.5	7.1
64			3.3	4.3	5.1	6.1	6.9
66				2.8	3.7	4.7	5.5
68					2.3	3.3	4.2
70						2.0	2.9
72							
74							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 80_副臂安装角 40_副臂长度 28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	8.4						
32	8.2	8.2	8.3				
34	8.1	8.1	8.2				
36	7.9	8.1	8.2	8.1	7.9		
38	7.7	7.9	8.1	8.0	7.9		
40	7.7	7.9	8.1	8.0	7.9	7.8	7.7
42	7.6	7.8	7.9	7.9	7.9	7.8	7.7
44	7.6	7.8	7.9	7.9	7.8	7.8	7.7
46	7.6	7.8	7.9	7.9	7.8	7.8	7.7
48	7.6	7.8	7.9	7.9	7.8	7.8	7.7
50	7.6	7.8	7.9	7.9	7.8	7.7	7.6

QAY800 全地面起重机操作手册
起重性能表

52	7.6	7.8	7.9	7.9	7.8	7.7	7.6
54	7.6	7.8	7.9	7.9	7.8	7.7	7.6
56	7.6	7.7	7.8	7.8	7.8	7.7	7.6
58	7.5	7.6	7.8	7.8	7.8	7.6	7.5
60	7.5	7.6	7.8	7.8	7.8	7.6	7.4
62	7.4	7.6	7.8	7.8	7.8	7.5	7.1
64			7.7	7.7	7.7	7.3	6.9
66			7.1	7.6	7.7	7.2	6.8
68			5.5	6.6	7.5	7.2	6.7
70			3.9	5.1	6.0	6.9	6.4
72					4.6	5.7	6.3
74					3.3	4.4	5.4
76					2.0	3.1	4.1
78							3.0
80							
82							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 28							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
30	8.4						
32	8.2	8.2	8.3				
34	8.1	8.1	8.2				
36	7.9	8.1	8.2	8.1	7.9		
38	7.7	7.9	8.1	8.0	7.9		
40	7.7	7.9	8.1	8.0	7.9	7.8	7.7
42	7.6	7.8	7.9	7.9	7.9	7.8	7.7
44	7.6	7.8	7.9	7.9	7.8	7.8	7.7
46	7.6	7.8	7.9	7.9	7.8	7.8	7.7
48	7.6	7.8	7.9	7.9	7.8	7.8	7.7
50	7.6	7.8	7.9	7.9	7.8	7.7	7.6
52	7.6	7.8	7.9	7.9	7.8	7.7	7.6
54	7.6	7.8	7.9	7.9	7.8	7.7	7.6
56	7.6	7.7	7.8	7.8	7.8	7.7	7.6
58	7.5	7.6	7.8	7.8	7.8	7.6	7.5
60	7.5	7.6	7.8	7.8	7.8	7.6	7.4
62	7.4	7.6	7.8	7.8	7.8	7.5	7.1
64			7.7	7.7	7.7	7.3	6.9
66			7.6	7.6	7.7	7.2	6.8
68			7.0	7.4	7.7	7.2	6.7
70			5.6	6.5	7.4	6.9	6.4
72					6.1	6.2	6.3
74					4.8	5.5	6.2

76					3.7	4.5	5.4
78					2.6	3.5	4.3
80							3.3
82							2.3
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

5、35 米固定副臂性能表

支腿全伸_平衡重 50_副臂安装角 40_副臂长度 35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
36	5.3						
38	5.1	5.1	5.2				
40	4.9	5.0	5.1				
42	4.8	4.9	4.9	4.9	4.8		
44	4.6	4.7	4.8	4.7	4.6		
46	4.6	4.7	4.8	4.7	4.6	4.5	4.5
48	4.5	4.6	4.7	4.7	4.6	4.5	4.5
50	4.5	4.5	4.6	4.5	4.5	4.5	4.5
52	4.4	4.5	4.6	4.5	4.5	4.5	4.5
54	4.4	4.5	4.6	4.5	4.5	4.5	4.5
56	4.4	4.5	4.6	4.5	4.5	4.5	4.5
58	4.4	4.5	4.6	4.5	4.5	4.4	4.4
60	4.4	4.5	4.6	4.5	4.5	4.4	4.4
62	4.4	4.5	4.6	4.5	4.5	4.4	4.4
64	4.4	4.5	4.6	4.5	4.5	4.4	4.4
66	3.6	4.5	4.6	4.5	4.5	4.4	4.4
68	2.0	2.9	3.6	4.4	4.5	4.4	4.3
70			2.2	3.0	3.7	4.4	3.9
72					2.4	3.3	3.9
74						2.1	2.8
76							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重80_副臂安装角40_副臂长度35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
36	5.3						
38	5.1	5.1	5.2				
40	4.9	5.0	5.1				
42	4.8	4.9	4.9	4.9	4.8		
44	4.6	4.7	4.8	4.7	4.6		
46	4.6	4.7	4.8	4.7	4.6	4.5	4.5

48	4.5	4.6	4.7	4.7	4.6	4.5	4.5
50	4.5	4.5	4.6	4.5	4.5	4.5	4.5
52	4.4	4.5	4.6	4.5	4.5	4.5	4.5
54	4.4	4.5	4.6	4.5	4.5	4.5	4.5
56	4.4	4.5	4.6	4.5	4.5	4.5	4.5
58	4.4	4.5	4.6	4.5	4.5	4.4	4.4
60	4.4	4.5	4.6	4.5	4.5	4.4	4.4
62	4.4	4.5	4.6	4.5	4.5	4.4	4.4
64	4.4	4.5	4.6	4.5	4.5	4.4	4.4
66	4.4	4.5	4.6	4.5	4.5	4.4	4.4
68	4.4	4.5	4.6	4.5	4.5	4.4	4.3
70	4.3	4.4	4.6	4.5	4.5	4.4	3.9
72			4.5	4.5	4.5	4.4	3.9
74			4.3	4.5	4.5	4.4	2.9
76			2.8	3.9	4.5	4.3	2.8
78					3.4	4.2	
80					2.2	3.2	
82						2.1	
84							
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1
支腿全伸_平衡重 110_副臂安装角 40_副臂长度 35							
R/L	47.7+2.6	52.9+2.6	58.0+2.6	63.2+2.6	68.3+2.6	73.5+2.6	78.6+2.6
36	5.3						
38	5.1	5.1	5.2				
40	4.9	5.0	5.1				
42	4.8	4.9	4.9	4.9	4.8		
44	4.6	4.7	4.8	4.7	4.6		
46	4.6	4.7	4.8	4.7	4.6	4.5	4.5
48	4.5	4.6	4.7	4.7	4.6	4.5	4.5
50	4.5	4.5	4.6	4.5	4.5	4.5	4.5
52	4.4	4.5	4.6	4.5	4.5	4.5	4.5
54	4.4	4.5	4.6	4.5	4.5	4.5	4.5
56	4.4	4.5	4.6	4.5	4.5	4.5	4.5
58	4.4	4.5	4.6	4.5	4.5	4.4	4.4
60	4.4	4.5	4.6	4.5	4.5	4.4	4.4
62	4.4	4.5	4.6	4.5	4.5	4.4	4.4
64	4.4	4.5	4.6	4.5	4.5	4.4	4.4
66	4.4	4.5	4.6	4.5	4.5	4.4	4.4
68	4.4	4.5	4.6	4.5	4.5	4.4	4.3
70	4.3	4.4	4.6	4.5	4.5	4.4	3.9
72			4.5	4.5	4.5	4.4	3.9
74			4.5	4.5	4.5	4.4	2.9

QAY800 全地面起重机操作手册
起重性能表

76			4.4	4.4	4.5	4.3	2.8
78					4.4	4.2	
80					3.6	3.8	
82					2.5	3.2	
84						2.2	
主臂组合	221100	222100	222200	222210	222220	222221	222222
倍率	1	1	1	1	1	1	1

徐州工程机械集团有限公司 徐州重型机械有限公司
XUZHOU HEAVY MACHINERY CO., LTD.
XUZHOU CONSTRUCTION MACHINERY GROUP CO., LTD. CHINA
地址：中国江苏省徐州市铜山路 165 号
Add: No.165 Tongshan Road, Xuzhou, Jiangsu, China
电话 Tel: 0086-0516-83462242 83462350
传真 Fax: 0086-0516-83461669
邮编 Post Code: 221004
网址 Website: <http://www.xzxc.com.cn>
E-mail: xzxcyx@pub.xz.jsinfo.net
服务电话 Service Tel: 0086-0516-83461183
服务传真 Service Fax: 0086-0516-83461180
备件电话 Spare Parts Tel: 0086-0516-83461183
2011 年 7 月第 1 版